

Furmax FDP0

Furmax Ribbed Mid-Back Office Desk Chair Instruction Manual

Model: FDP0

1. INTRODUCTION

Thank you for choosing the Furmax Ribbed Mid-Back Office Desk Chair. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new chair. Please read these instructions thoroughly before assembly and retain them for future reference.

Safety Warnings

- **Weight Capacity:** Do not exceed the maximum weight capacity of **280 pounds (127 kg)**. Exceeding this limit may result in damage to the chair or personal injury.
- **Assembly:** Follow all assembly instructions carefully to ensure the chair's stability and safety. Improper assembly can lead to instability and potential hazards.
- **Usage:** Use the chair only for its intended purpose as an office or desk chair. Avoid standing on the chair or using it as a step stool.
- **Maintenance:** Regularly check all bolts and screws to ensure they are tight. Retighten as necessary.



The Furmax Ribbed Mid-Back Office Desk Chair, designed for comfort and functionality in various office environments.

2. COMPONENTS LIST

Before beginning assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Backrest
- Seat Cushion
- Armrests (2)
- Gas Lift Cylinder
- Base (5-star)
- Casters (5)
- Mechanism Plate
- Hardware (screws, washers, Allen wrench)

3. ASSEMBLY INSTRUCTIONS

Assembly is required for this chair. Please follow these steps carefully.

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the 5-star base. Push firmly until they click into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled 5-star base.
3. **Attach Mechanism Plate to Seat:** Align the mechanism plate with the pre-drilled holes on the underside of the seat cushion. Secure it using the provided screws and Allen wrench. Ensure the front of the mechanism plate faces the front of the seat.
4. **Attach Armrests:** Secure the armrests to both sides of the seat cushion using the provided screws. Do not overtighten initially.
5. **Attach Backrest:** Connect the backrest to the armrests using the remaining screws. Once all screws are in place for the armrests and backrest, tighten them securely.
6. **Connect Seat to Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring the center hole of the mechanism plate aligns with the top of the gas lift. Press down firmly to secure.
7. **Final Check:** Verify that all screws are tightened and the chair is stable before use.

4. OPERATING INSTRUCTIONS

Your Furmax office chair is designed with several adjustable features to enhance your comfort and support.

Adjustable Seat Height

- To **raise** the seat: While seated, lift the lever located under the right side of the seat. The seat will rise automatically. Release the lever at your desired height.
- To **lower** the seat: While seated, lift the lever located under the right side of the seat. The seat will lower. Release the lever at your desired height.
- The adjustable seat height range is approximately **16.7 to 19.9 inches (42.4 to 50.5 cm)**

Rocking Function and Tension Adjustment

- The chair features a **90 to 110 degree rocking function** for relaxation.
- To **enable rocking**: Pull out the lever located under the left side of the seat.
- To **lock the chair in an upright position**: Push in the lever located under the left side of the seat.
- To **adjust rocking tension**: Turn the round knob located under the front of the seat. Turn clockwise to increase tension (making it harder to rock) or counter-clockwise to decrease tension (making it easier to rock).

Illustration of the chair's rocking function and adjustment controls.

Ergonomic Design

The chair incorporates a hidden S-curve ergonomic design with adaptive lumbar fit and high-density rebound sponge for enhanced comfort and support during long periods of sitting.

Detailed view of the ergonomic features, including lumbar support and cushioning.

5. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your Furmax office chair.

Cleaning

- The chair is upholstered with high-quality, waterproof PU synthetic leather.
- For general cleaning, wipe the surface with a soft, damp cloth. Use a mild soap solution if necessary, then wipe dry with a clean cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the faux leather.
- Promptly clean up spills to prevent staining.

The waterproof PU leather allows for easy cleaning of spills.

General Care

- Periodically check all bolts and screws to ensure they are tight. Retighten as needed to maintain stability.
- Avoid exposing the chair to direct sunlight for prolonged periods, as this can cause the material to fade or crack.
- Keep the chair away from direct heat sources.

6. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions.

- **Chair is wobbly**: Ensure all assembly screws are securely tightened. Check that the gas lift is properly seated in the base and mechanism plate.
- **Chair does not adjust height**: Verify that the gas lift lever is functioning correctly. If the gas lift is unresponsive, it may need replacement. Contact customer support.
- **Chair does not rock or rocks too easily/stiffly**: Adjust the rocking tension knob located under the seat. Ensure the rocking function lever is pulled out to enable rocking.

- **Casters are not rolling smoothly:** Check for debris (hair, dust) caught in the casters and clean them. Ensure casters are fully inserted into the base.

If these solutions do not resolve the issue, please contact Furmax customer support for further assistance.

7. SPECIFICATIONS

Brand	Furmax
Model Name	Furmax Ribbed Office Desk Chair Mid-Back
Model Number	FDP0
Color	Black
Material	Synthetic Leather (PU), Foam (filling)
Frame Material	Metal
Overall Dimensions (D x W x H)	65.5 cm x 65.5 cm x 99.8 cm (25.8 in x 25.8 in x 39.3 in)
Seat Area Dimensions (W x D)	19.7 in x 19.1 in (50 cm x 48.5 cm)
Backrest Dimensions (W x H)	18.1 in x 25.7 in (46 cm x 65.3 cm)
Adjustable Seat Height	16.7 in - 19.9 in (42.4 cm - 50.5 cm)
Weight Capacity	280 lbs (127 kg)
Product Weight	24.92 lbs (11.3 kg)
Special Features	Adjustable Height, Swivel, 90-110 Degree Rocking Function, Ergonomic Lumbar Support, Waterproof PU Leather
Assembly Required	Yes

Detailed product dimensions for reference.

8. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Furmax customer service. Keep your purchase receipt and model number (FDP0) handy when contacting support.

Please refer to the retailer's website or your purchase documentation for specific warranty terms and contact details.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question