

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Anker](#) /
- › [Anker Soundcore Mini User Manual](#)

Anker SoundCore mini

Anker Soundcore Mini User Manual

Model: SoundCore mini

INTRODUCTION

Thank you for purchasing the Anker Soundcore Mini. This manual provides important information regarding the setup, operation, and maintenance of your super-portable Bluetooth speaker. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: Front view of the Anker Soundcore Mini Bluetooth Speaker in black, showing the speaker grille and control buttons.

WHAT'S IN THE BOX

- Anker Soundcore Mini Bluetooth Speaker
- USB Charging Cable

SETUP

1. Charging the Speaker

1. Connect the provided USB charging cable to the charging port on the Soundcore Mini.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.
4. A full charge provides approximately 15 hours of playtime.

2. Powering On/Off

- To power on, press and hold the power button until the LED indicator lights up.
- To power off, press and hold the power button until the LED indicator turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the Soundcore Mini is powered on. The LED indicator will flash blue, indicating it is in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available devices and select "Soundcore Mini" from the list.
4. Once paired, the LED indicator will turn solid blue. You can now play audio through the speaker.
5. The speaker has a Bluetooth range of up to 66 feet (20 meters).

2. Micro SD Card Playback

- Insert a Micro SD card containing audio files into the Micro SD card slot.
- The speaker will automatically switch to Micro SD card mode and begin playing music.

3. AUX Input

- Connect an audio device to the AUX port on the Soundcore Mini using a 3.5mm audio cable (not included).
- The speaker will automatically switch to AUX mode.

4. Controls

The Soundcore Mini features touch controls for various functions:

- **Power Button:** Press and hold to power on/off.
- **Volume Up (+):** Press to increase volume.
- **Volume Down (-):** Press to decrease volume.
- **Play/Pause:** Press the triangle button to play or pause music.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Answer/End Call:** Press the triangle button during an incoming call.
- **Reject Call:** Press and hold the triangle button during an incoming call.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, humidity, or direct sunlight.
- This product is not waterproof. Avoid contact with liquids.
- Store the speaker in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect it to a power source using the USB charging cable.
Cannot pair with Bluetooth device.	Ensure the speaker is in pairing mode (flashing blue LED). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device (within 66 feet/20 meters). Forget "Soundcore Mini" from your device's Bluetooth list and try pairing again.
No sound.	Increase the volume on both the speaker and your connected device. Ensure the speaker is correctly paired via Bluetooth or connected via AUX/Micro SD. If using AUX, ensure the cable is fully inserted and functional.
Poor sound quality.	Move the speaker closer to your Bluetooth device to avoid interference. Ensure there are no obstructions between the speaker and your device. Try playing a different audio source.

SPECIFICATIONS

Model Name	Soundcore Mini
Brand	Anker
Speaker Type	Subwoofer
Special Feature	Portable
Connectivity Technology	Auxiliary, Bluetooth
Wireless Communication Technology	Bluetooth 4.0
Bluetooth Range	66 Feet (20 Meters)
Speaker Maximum Output Power	5 Watts
Product Dimensions	2.64"D x 2.64"W x 2.64"H
Item Weight	200 Grams (7.1 ounces)
Playtime	Up to 15 Hours
Power Source	Battery Powered (1 Lithium Metal battery included)
Control Method	Touch
Color	Black
Is Waterproof	No
Included Components	USB Charging Cable



Image: Anker Soundcore Mini Bluetooth Speaker with indicated dimensions of 2.64 inches in height, width, and depth.

WARRANTY AND SUPPORT

Warranty Information

The Anker Soundcore Mini comes with a Limited Warranty. For detailed warranty terms and conditions, please refer to the official Anker website or the documentation provided with your purchase.

Customer Support

For technical support, troubleshooting assistance, or any inquiries regarding your product, please visit the official Anker support website or contact their customer service. Contact information can typically be found on the manufacturer's website or in your product packaging.