

Wendry B07Y87VPJ2

Wendry Corded Telephone with Caller ID, Hands-Free Speakerphone Instruction Manual

Model: B07Y87VPJ2

INTRODUCTION

The Wendry Corded Telephone is designed for reliable communication in both home and office environments. This wired desk phone features Caller ID, a hands-free speakerphone, and a mute function, providing essential functionalities without requiring batteries for operation. Its robust design ensures clear sound quality and ease of use for everyday calling needs.

PACKAGE CONTENTS

- Wendry Corded Telephone Base Unit
- Handset
- Coiled Handset Cord
- Telephone Line Cord

SETUP

Follow these steps to set up your Wendry Corded Telephone:

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the designated port on the left side of the telephone base unit. Ensure both connections are secure.
2. **Connect to Telephone Line:** Insert one end of the telephone line cord into the "LINE" port on the back of the telephone base unit. Plug the other end of the telephone line cord into your wall telephone jack.
3. **Placement:** Place the telephone on a flat, stable surface. The phone is designed to operate without external power, drawing power directly from the telephone line.



Figure 1: Wendry Corded Telephone with all necessary cords for setup. This image shows the main unit, the handset, the coiled cord connecting the handset to the base, and the telephone line cord for wall connection.

Dual Interface Wired Telephone Design

Allows you to connect both the phone and the power strip or extension, POS, fax machine.



Figure 2: Close-up of the telephone's dual interface ports. This image highlights where the handset cord connects to the base unit, demonstrating the secure connection points.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Lift the handset or press the **SPEAKER** button. Dial the desired phone number using the keypad.
- **To Receive a Call:** When the phone rings, lift the handset or press the **SPEAKER** button.
- **To End a Call:** Place the handset back on the cradle or press the **SPEAKER** button again if using hands-free mode.

Hands-Free Speakerphone

The integrated speakerphone allows for hands-free conversations. Press the **SPEAKER** button to activate or deactivate the speakerphone during a call.



Figure 3: Demonstrating hands-free calling. This image shows a user interacting with the phone's keypad while the handset is off-hook, indicating the use of the speakerphone function.

Caller ID

The Caller ID feature displays the incoming caller's number on the screen, helping you identify callers before answering. This function requires subscription to Caller ID service from your telephone service provider.



✓ Caller ID

Display the caller number to help you avoid crank calls.

Figure 4: Caller ID display in action. The phone's screen shows an incoming number, illustrating the Caller ID feature in a typical home setting.

Mute Function

Press the **MUTE** button during a call to temporarily turn off your microphone. The other party will not hear you, but you can still hear them. Press **MUTE** again to resume the conversation.



Figure 5: Mute function for privacy. This image shows the phone in an office, highlighting the mute button for confidential conversations.

Pause/Hold Function

If you need to temporarily pause a call, press the **HOLD** button. The call will be put on hold, and you can resume it by pressing **HOLD** again or lifting the handset.

Speed Dial

The telephone supports speed dial functionality. Refer to the detailed instructions in the full user manual for programming and using speed dial numbers. This feature allows you to store and quickly dial frequently used numbers.



Speed Dial

Uses a speed dial group to store frequently used numbers in an emergency.

Figure 6: Speed Dial buttons on the keypad. The phone is shown in a kitchen setting, emphasizing the convenience of quick dialing.

Last Number Redial

To quickly redial the last number called, lift the handset or press the **SPEAKER** button, then press the **REDIAL** button.

Volume Adjustment

Adjust the listening volume during a call using the **VOLUME UP/DOWN** buttons located on the keypad.



Clear Sound
Noise reduction function helps prevent noise outside

Figure 7: Clear sound quality. This image suggests the phone's ability to provide clear audio, enhancing communication.

MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Cord Care:** Avoid tangling or excessive pulling of the coiled handset cord and telephone line cord to prevent damage.

TROUBLESHOOTING

Problem	Possible Solution
No dial tone	Ensure the telephone line cord is securely connected to both the phone and the wall jack. Test with another phone or line to confirm service availability.

Problem	Possible Solution
Cannot hear caller / Caller cannot hear me	Adjust the volume using the VOLUME UP/DOWN buttons. Check if the MUTE function is active. Ensure the handset cord is securely connected.
Caller ID not displaying	Confirm that you have subscribed to Caller ID service from your telephone service provider. Ensure the phone is correctly connected to the telephone line.

SPECIFICATIONS

Feature	Detail
Brand	Wendry
Model	B07Y87VPJ2
Telephone Type	Corded
Material	Plastic
Power Source	Corded Electric (Line Powered)
Caller Identification	Yes
Hands-Free Speakerphone	Yes
Mute Function	Yes
Pause/Hold Function	Yes
Last Number Redial	Yes
Speed Dial	Yes
Item Weight	1.17 pounds

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact Wendry customer service. Keep your purchase receipt as proof of purchase for warranty claims.