

[manuals.plus](#) /

› [PUR LINE](#) /

› [Purline Electric Brick MR1500 1500W Instruction Manual](#)

PUR LINE MR1500

Purline Electric Brick MR1500 1500W Instruction Manual

MODEL: MR1500

Introduction

Thank you for choosing the Purline Electric Brick MR1500 1500W heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance.

Please read these instructions thoroughly before use and retain them for future reference.



Image: Front view of the Purline Electric Brick MR1500 1500W heater, showcasing its design and control panel.

Important Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater includes an **overheat protection** feature. If the heater overheats, it will automatically shut off. If this occurs, unplug the heater, wait 30 minutes for it to cool, and then plug it back in.

Package Contents

Please check the contents of the box upon unpacking. You should find the following items:

- Purline Electric Brick MR1500 Heater Unit
- Wheel Base Assemblies (2)
- Mounting Screws for Wheel Bases
- Instruction Manual (this document)

If any items are missing or damaged, please contact your retailer.

Setup

1. Unpacking

Carefully remove the heater and all packaging materials from the box. Keep packaging for storage or in case of return.

2. Attaching the Wheel Bases

The heater is designed for floor mounting and includes wheel bases for easy portability. Attach the two wheel base assemblies to the bottom of the heater using the provided screws. Ensure they are securely fastened.



Image: Detailed view of the heater's base, illustrating the attachment of the wheels and the power cord entry point.

3. Placement Guidelines

- Place the heater on a firm, level surface.
- Ensure there is at least 1 meter (3 feet) of clear space around the front, sides, and rear of the heater to prevent fire hazards and ensure proper air circulation.
- Do not place the heater directly below a power outlet.
- Avoid placing the heater in high-traffic areas where the power cord could be a tripping hazard.

4. Power Connection

Plug the power cord into a grounded 220-240V AC, 50Hz electrical outlet. Ensure the outlet is in good condition and not overloaded with other appliances.

Operating Instructions

The Purline Electric Brick MR1500 features simple controls for efficient heating.



Image: Control panel of the heater, highlighting the power switch, heat setting knob, and thermostat knob.

1. Power On/Off

- To turn the heater ON, rotate the lower knob (labeled '0 1') to position '1'. The power indicator light will illuminate.
- To turn the heater OFF, rotate the lower knob to position '0'.

2. Adjusting Heat Settings

The upper knob (labeled 'High Low') controls the heat output:

- Rotate to **'Low'** for a lower heat output (e.g., 750W).
- Rotate to **'High'** for maximum heat output (1500W).

3. Adjusting Temperature (Thermostat)

The lower knob also functions as a thermostat. Once the heater is turned ON (position '1'), rotate this knob clockwise to increase the desired room temperature. The heater will cycle on and off to maintain the set temperature. Rotate counter-clockwise to decrease the desired temperature.

4. Energy Efficiency

This heater is designed to be energy efficient. Utilize the thermostat control to maintain a comfortable temperature without continuous maximum output. The radiant heating method provides quick warmth.

Maintenance

1. Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or spray water directly onto it.
- Gently vacuum any dust from the air intake and exhaust grilles.

2. Storage

When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

Troubleshooting

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit. Overheat protection activated.	Check if the power cord is securely plugged into a working outlet. Ensure the power knob is set to '1'. Unplug the heater, wait 30 minutes, then plug back in.
Heater turns off unexpectedly.	Overheat protection activated. Thermostat reached set temperature.	Unplug the heater, wait 30 minutes, then plug back in. Ensure proper ventilation. This is normal operation. Adjust thermostat to a higher setting if more heat is desired.
Insufficient heat output.	Heat setting too low. Thermostat set too low. Room size too large for heater.	Ensure the 'High Low' knob is set to 'High'. Rotate the thermostat knob clockwise to a higher setting. Consider using additional heating or a higher wattage heater for larger spaces.
Unusual odor.	New unit odor. Dust accumulation.	A slight odor is normal during initial use and will dissipate. Ensure good ventilation. Unplug and clean the heater as per maintenance instructions.

Specifications

Feature	Detail
Brand	PUR LINE
Model Number	MR1500
Power / Wattage	1500W
Product Dimensions	51 x 27 x 62 cm (L x W x H)

Feature	Detail
Weight	4 kg
Colour	White, Black
Auto Shutoff	Yes (Overheat Protection)
Special Feature	Energy Efficient
Form Factor	Pedestal (Floor Mount)
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Heating Method	Radiant



Image: Dimensional drawing of the Purline Electric Brick MR1500 heater, indicating its height, width, and depth.

Warranty and Support

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for warranty claims.

Additional Product Views



Image: Side profile of the heater, highlighting its compact design.



Image: Heater in a living room, showing its size relative to furniture.



Image: Full view of the heater against a neutral background.

© 2023 PUR LINE. All rights reserved.