

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL Electric Massage Recliner Chair Instruction Manual Model 248697](#)

vidaXL 248697

vidaXL Electric Massage Recliner Chair Instruction Manual

Model: 248697

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your vidaXL Electric Massage Recliner Chair, Model 248697. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The vidaXL Electric Massage Recliner Chair, Model 248697, in beige fabric.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, burns, fire, or injury, observe the following precautions:

- Read all instructions before using the chair.
- Do not use outdoors.
- Unplug from outlet when not in use and before cleaning.
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this product is used by, on, or near children, invalids, or disabled persons.

- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact customer support for examination and repair.
- Do not carry this product by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the OFF position, then remove plug from outlet.
- Do not stand on the chair.
- Ensure all connections are secure before plugging into a power source.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Recliner Chair Base
- Backrest
- Armrests (if separate)
- Power Adapter
- Remote Control
- Assembly Hardware (screws, bolts, washers, etc.)
- Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended that two adults assemble the chair. Ensure you have adequate space and all parts before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the backrest with the chair base. Slide the backrest into the receiving brackets on the chair base until it clicks securely into place. Ensure it is firmly seated.
3. **Connect Electrical Wires:** Locate the electrical wires extending from the backrest and the chair base. Carefully connect these wires, ensuring the connectors are fully engaged. Refer to any labels on the wires for correct pairing.
4. **Attach Armrests (if separate):** If your model has separate armrests, attach them according to the specific instructions provided with your hardware. Typically, this involves aligning and securing them with bolts.
5. **Attach Legs/Feet:** Screw or attach the chair legs/feet to the designated points on the bottom of the chair base. Ensure they are tightened securely.
6. **Connect Power Adapter:** Connect the power adapter cable to the chair's power input port. Do not plug into a wall outlet yet.

7. **Final Check:** Before use, gently test the stability of the chair and ensure all connections are secure.

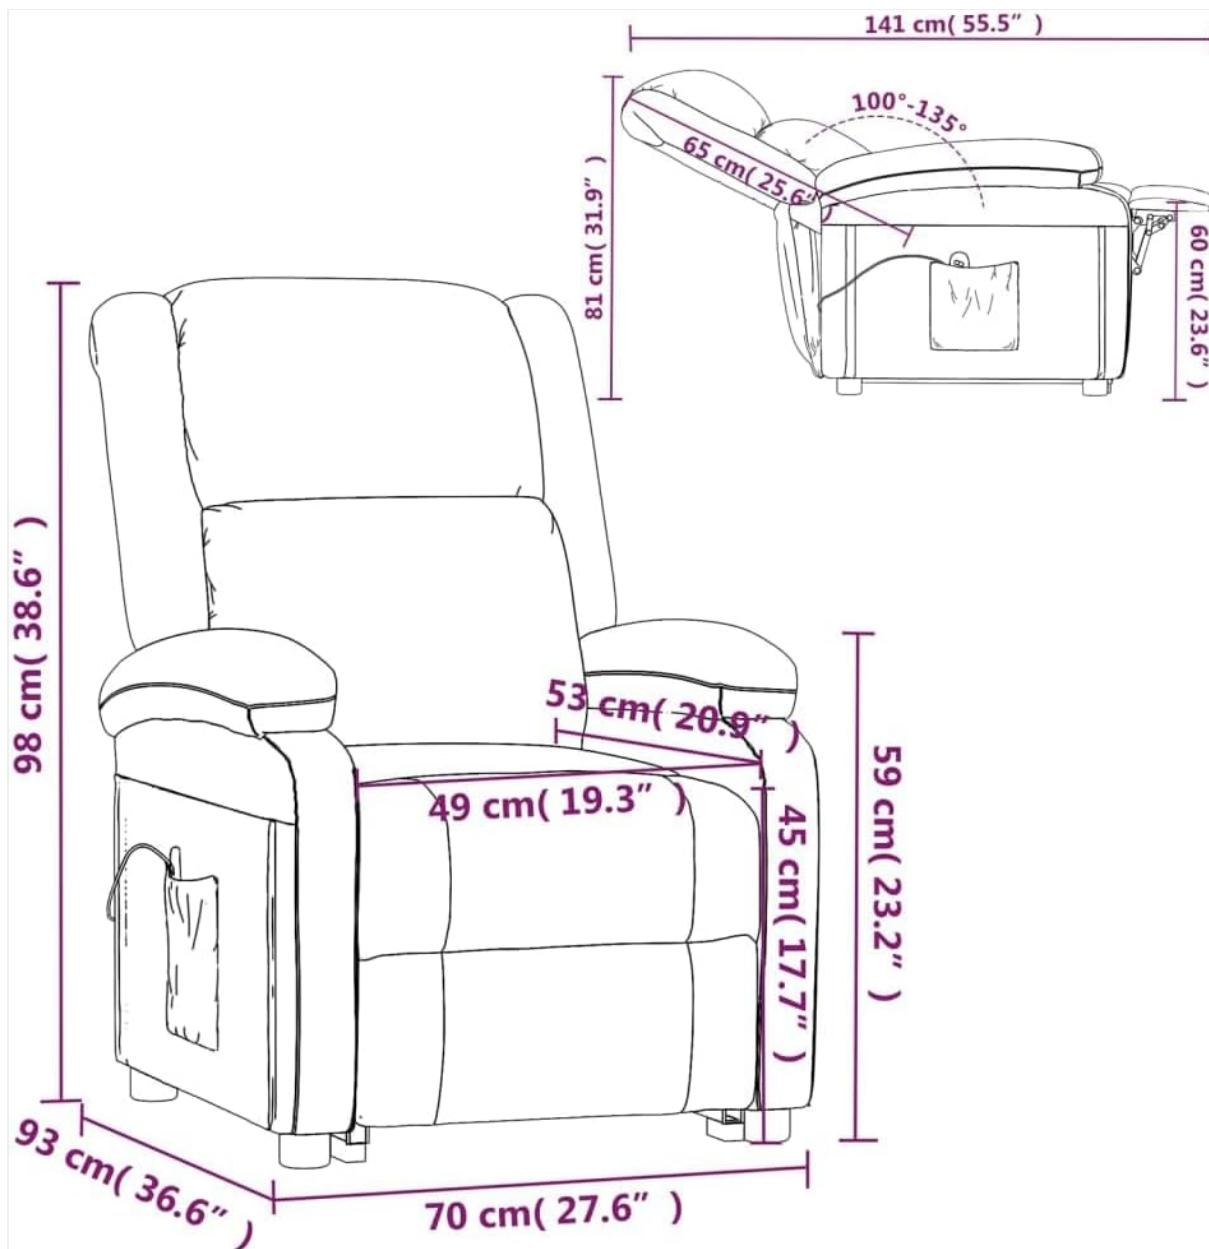


Image 4.1: Dimensional diagram of the recliner chair, illustrating overall size and reclining angles.

5. OPERATING INSTRUCTIONS

Your vidaXL Electric Massage Recliner Chair features both reclining and massage functions, controlled by the included remote.

5.1 Power Connection

Plug the power adapter into a standard electrical outlet. Ensure the chair's power cable is securely connected to the adapter.

5.2 Reclining Function

To recline the chair, locate the lever or button (if electric recline) on the side of the chair or on the remote control. Gently push back with your body weight while operating the mechanism. To return to the upright position, lean forward and engage the mechanism again.



Image 5.1: The recliner chair in various reclining positions, illustrating its range of motion.

5.3 Massage Function

The massage function is controlled via the remote control. The remote allows you to select different massage modes and intensity levels.



Image 5.2: The remote control for the massage and recline functions.

- **Power Button:** Press the **red power button** to turn the massage function ON or OFF.
- **Mode Selection:** Use the **MODE button** to cycle through different massage modes (e.g., continuous, pulse, wave). Indicators (1-5) will light up to show the active mode.
- **Intensity Levels:** The remote typically offers three intensity levels, indicated by **I, II, III**. Press the corresponding button to select your desired intensity. The wave symbols (~) may also indicate intensity or type of massage.
- **Targeted Massage Zones:** Some remotes allow selection of specific massage zones (e.g., upper back, lower back, thighs). Refer to the remote's layout for these options.



Image 5.3: Illustration of the massage points within the recliner chair.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your recliner chair.

- **Cleaning:** For fabric upholstery, vacuum regularly to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner following the product instructions, testing on an inconspicuous area first. Do not use harsh chemicals or abrasive cleaners.
- **Electrical Components:** Keep all electrical components, including the remote control and power adapter, dry and away from liquids.
- **Moving the Chair:** When moving the chair, lift it rather than dragging it to prevent damage to the legs

and frame.

- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter issues with your recliner chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not recline or massage.	No power, loose connection, remote control issue.	Ensure the power adapter is securely plugged into a working outlet and the chair. Check all electrical connections between chair components. Verify remote control batteries (if applicable) and functionality.
Massage function is weak or inconsistent.	Incorrect intensity setting, internal wiring issue.	Increase the intensity level using the remote control. If the problem persists, contact customer support.
Chair makes unusual noises during operation.	Loose hardware, obstruction in mechanism.	Check and tighten all assembly bolts. Inspect the reclining mechanism for any obstructions.
Difficulty assembling electrical components.	Unclear wiring instructions.	Ensure wires are connected color-to-color or according to any labels. If still unsure, consult a qualified electrician or contact customer support.

8. PRODUCT SPECIFICATIONS

Model: 248697

Brand: vidaXL

Color: Beige

Material: Fabric (Upholstery), Alloy Steel (Frame)

Seated Dimensions (W x D x H): 71 cm x 90.5 cm x 96 cm (27.95 in x 35.63 in x 37.8 in)

Reclined Dimensions (W x D x H): 71 cm x 158 cm x 71 cm (27.95 in x 62.2 in x 27.95 in)

Seat Dimensions (W x D): 50 cm x 52 cm (19.7 in x 20.5 in)

Seat Height: 45 cm (17.7 in)

Weight: Approximately 24.95 kg (55 lbs)

Assembly Required: Yes

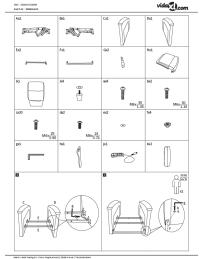
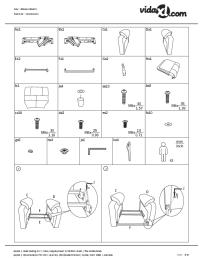
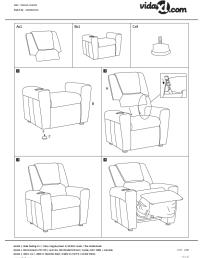
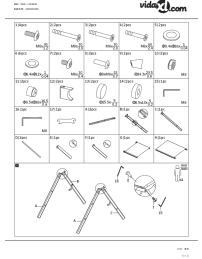
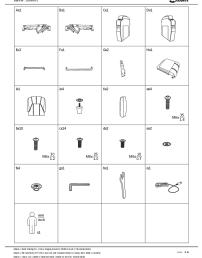
Power Source: Electric (Remote control may require batteries)

9. CUSTOMER SUPPORT

For further assistance, missing parts, or warranty inquiries, please contact vidaXL customer support

through their official website or the retailer where the product was purchased. Please have your model number (248697) and purchase details ready.

Related Documents - 248697

	<p>vidaXL Recliner Chair Assembly and Safety Manual Comprehensive assembly instructions, safety guidelines, and technical specifications for the vidaXL Recliner Chair with massage function. Includes part identification and step-by-step assembly.</p>
	<p>vidaXL Recliner Assembly Instructions Assembly guide for the vidaXL recliner, including parts list and step-by-step instructions.</p>
	<p>VidaXL Extended Producer Responsibility (EPR) Guide Learn about VidaXL's commitment to Extended Producer Responsibility (EPR) for EEE and textile waste. Discover recycling information, obligations, and partners.</p>
	<p>VidaXL Recliner Assembly Instructions Assembly instructions for VidaXL recliners, including models Ax1, Bx1, and Cx4. This guide provides step-by-step visual instructions for assembling the recliner chair.</p>
	<p>vidaXL Folding Garden Chair Assembly Instructions Assembly instructions for the vidaXL folding garden chair, including a parts list and step-by-step visual guides.</p>
	<p>VidaXL Recliner Assembly Instructions and Safety Guide Comprehensive guide for assembling your vidaXL recliner, including a parts list, step-by-step instructions, and essential safety information and technical specifications.</p>

