

[Manuals.plus](#) /

› [HADEN](#) /

› Haden 60cm Freestanding Electric Cooker - User Manual

HADEN HEC60W

Haden 60cm Freestanding Electric Cooker

Model: HEC60W | Brand: HADEN

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Haden 60cm Freestanding Electric Cooker. Please read this manual thoroughly before using the appliance and keep it for future reference.



Front view of the Haden 60cm Freestanding Electric Cooker, showcasing the ceramic hob, control knobs, oven door, and lower storage compartment.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance:

- Ensure the appliance is installed by a qualified electrician in accordance with local regulations.
- Do not store flammable materials in or near the cooker.
- Keep children and pets away from the appliance during operation.

- Always use oven mitts when handling hot items from the oven or hob.
- Do not use abrasive cleaners or sharp objects on the ceramic hob or enamel interior.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- Ensure proper ventilation in the kitchen during use.

PRODUCT OVERVIEW

Your Haden Electric Cooker is an all-in-one cooking solution designed for versatility and ease of use. It features a ceramic hob, a conventional oven, and a variable grill.

Components:

- **Ceramic Hob:** Equipped with 4 cooking zones for various pot and pan sizes.
- **Control Knobs:** Easy-grip dials for precise temperature and function selection for both hob and oven.
- **Oven:** 64-litre capacity conventional oven with multiple shelf positions.
- **Grill:** Integrated 1800W variable grill for browning and grilling.
- **Mechanical Timer:** A 90-minute timer to assist with cooking durations.
- **Oven Interior:** Easy-clean enamel finish for simplified maintenance.
- **Accessories:** Includes two wire shelves for the oven.

SETUP AND INSTALLATION

The Haden 60cm Freestanding Electric Cooker is designed for straightforward installation. It comes pre-wired for your convenience.

Installation Steps:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the cooker for any signs of damage.
2. **Positioning:** Place the cooker in its desired location, ensuring adequate clearance from walls and cabinets as per installation guidelines. The dimensions are 60cm x 60cm x 90cm.
3. **Electrical Connection:** This appliance requires a dedicated electrical circuit. It is pre-wired, but connection to the mains supply must be performed by a qualified electrician. Ensure the voltage (240 Volts) matches your household supply.
4. **Levelling:** Adjust the feet at the base of the cooker to ensure it is perfectly level. This is crucial for even cooking and stability.
5. **First Use Preparation:** Before first use, wipe down all surfaces with a damp cloth. It is normal for a new cooker to emit a slight odor during its initial operation; this will dissipate.

OPERATING INSTRUCTIONS

Ceramic Hob Operation:

The ceramic hob features four cooking zones. Each zone is controlled by a dedicated knob on the control panel.

1. Place a suitable pan on the desired cooking zone.
2. Turn the corresponding control knob to select one of the six heat settings. Start with a higher setting for boiling and reduce for simmering.
3. The hob surface will heat up quickly. Indicator lights on the control panel will illuminate when a zone is active.

4. After cooking, turn the knob back to the 'off' position. The residual heat indicator will remain lit until the zone has cooled down.

Oven Operation:

The 64-litre oven offers conventional heating for baking, roasting, and general cooking.

1. Select the desired oven function using the oven function selector knob. This cooker offers 4 cooking functions.
2. Set the oven temperature using the temperature control knob.
3. Allow the oven to preheat to the desired temperature before placing food inside. An indicator light will turn off when the set temperature is reached.
4. Utilize the two provided wire shelves for optimal cooking results. Shelf positions can be adjusted.
5. After cooking, turn both the function and temperature knobs to the 'off' position.

Grill Operation:

The 1800W variable grill is ideal for browning, toasting, and grilling smaller items.

1. Place food on the grill pan (not included, but compatible with standard grill pans).
2. Select the grill function using the oven function selector knob.
3. Adjust the grill intensity if applicable (variable grill).
4. Keep the oven door slightly ajar when grilling, as per safety recommendations for conventional grills.
5. Monitor food closely to prevent burning.
6. After grilling, turn the function knob to the 'off' position.

Using the Mechanical Timer:

The 90-minute mechanical timer can be used to set cooking durations. It will sound an audible alert when the set time has elapsed.

1. Turn the timer knob clockwise to the desired duration (up to 90 minutes).
2. The timer will count down automatically.
3. An audible 'ping' will sound when the timer reaches zero. This timer does not control the cooker's operation; it is a reminder only.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Haden Electric Cooker.

General Cleaning:

- **Before Cleaning:** Always ensure the cooker is switched off and completely cool before cleaning any part of the appliance.
- **Ceramic Hob:** Wipe the ceramic hob surface with a soft cloth and a mild detergent after each use. For stubborn stains, use a specialized ceramic hob cleaner. Avoid abrasive pads or harsh chemicals.
- **Oven Interior:** The oven features an easy-clean enamel interior. Wipe down the interior with a damp cloth and mild soapy water after each use, especially after spills. For baked-on food, use an oven cleaner suitable for enamel surfaces, following the product instructions carefully.
- **Exterior Surfaces:** Clean the exterior with a soft, damp cloth and a mild detergent. Dry thoroughly with a clean cloth.

- **Control Knobs:** The easy-grip dials can be removed for cleaning. Wash them in warm soapy water, rinse, and dry thoroughly before reattaching.

Care Tips:

- Avoid spilling sugary liquids on the ceramic hob, as they can cause pitting if not cleaned immediately.
- Do not use steam cleaners to clean the appliance.
- Regularly check the condition of the oven door seal to ensure efficient heat retention.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Cooker not turning on.	No power supply; appliance not plugged in or fuse blown.	Check power connection and household circuit breaker/fuse box.
Hob zone not heating.	Incorrect knob setting; faulty element.	Ensure knob is set correctly. If problem persists, contact a qualified technician.
Oven not heating.	Incorrect function/temperature setting; faulty element.	Verify settings. If issue continues, seek professional assistance.
New cooker smell during first use.	Normal for new appliances.	This will dissipate after a few uses. Ensure good ventilation.

For issues not listed here or if solutions do not resolve the problem, please contact Haden customer support.

SPECIFICATIONS

Brand:	HADEN
Model:	HEC60W
Product	
Dimensions:	60 x 60 x 90 cm
Item Weight:	36 kg
Energy Efficiency:	A
Oven Capacity:	64 litres
Installation Type:	Freestanding
Special Features:	4 Cooking Functions, Easy Clean Interior, 64-litre Oven Capacity
Number of Heating	
Elements:	4 (Ceramic Hob Zones)
Colour:	White
Control Console:	Touch
Voltage:	240 Volts
Number of Racks:	2
Fuel Type:	Electric
Material Type:	Ceramic

WHAT'S IN THE BOX

Upon unpacking your Haden 60cm Freestanding Electric Cooker, you should find the following components:

- 1 x Haden HEC60W Electric Cooker with Ceramic Hob
- 2 x Wire Oven Shelves
- User Manual (this document)

WARRANTY AND SUPPORT

Your Haden Electric Cooker is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the duration of coverage and how to make a claim. For technical assistance, spare parts, or to report a fault, please contact Haden customer support. Have your model number (HEC60W) and purchase details ready when contacting support. You can often find contact information on the Haden official website or through your retailer.

© 2025 HADEN. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How does the function knob work on the HADEN HEC60W cooker, and what do the symbols represent?

The HADEN HEC60W features an oven function selector knob with 4 distinct cooking functions. While the manual

does not provide a high-resolution diagram of the symbols, the functions typically include: Conventional Oven: Uses both top...

[Read full answer](#)