#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Brightech /
- Brightech Medusa LED Floor Lamp Instruction Manual Model FL-MDSA-BLK

## **Brightech FL-MDSA-BLK**

# **Brightech Medusa LED Floor Lamp Instruction Manual**

Model: FL-MDSA-BLK | Brand: Brightech

#### INTRODUCTION

Welcome to your new Brightech Medusa LED Floor Lamp. This manual provides essential information for safe assembly, operation, and maintenance of your lamp. Please read these instructions thoroughly before using the product and retain them for future reference.

#### IMPORTANT SAFETY INFORMATION

- This product is intended for **indoor use only**. Do not expose to water or moisture.
- Always unplug the lamp from the power outlet before cleaning or attempting any maintenance.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Use only E26 base LED bulbs as specified. Using incorrect bulb types may cause damage or fire.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact qualified service personnel.
- Keep flammable materials away from the lamp when in use.

#### PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Base
- Pole Sections (typically 3-4 sections)
- · Lamp Head with 5 Gooseneck Arms
- 5 LED Bulbs
- 2 Sets of Shades (1 set white, 1 set multi-color)



Image: Lamp components and included shades.

# **ASSEMBLY INSTRUCTIONS**

Follow these steps to assemble your Brightech Medusa LED Floor Lamp:

- 1. Carefully unpack all components from the packaging.
- 2. Screw the pole sections together clockwise until secure. Ensure the power cord runs freely through the pole.
- 3. Attach the lamp head (with gooseneck arms) to the top pole section by screwing it clockwise until firm.
- 4. Insert the provided LED bulbs into each of the five sockets on the gooseneck arms.
- 5. Select your desired set of shades (white or multi-color) and attach them to each bulb socket. Ensure they are securely fastened.
- 6. Place the assembled lamp on a flat, stable surface.
- 7. Plug the power cord into a standard electrical outlet.

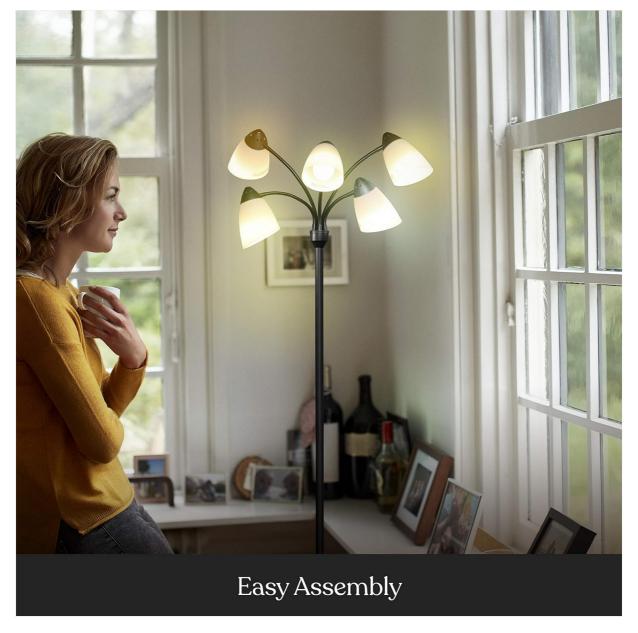


Image: Visual representation of easy assembly.

## **OPERATING INSTRUCTIONS**

## Power On/Off and Dimming

The Brightech Medusa lamp features a built-in rotary switch located on the main pole for power control and dimming. Rotate the switch to cycle through the following settings:

- First Turn: Two lamp heads will illuminate.
- Second Turn: Three lamp heads will illuminate.
- Third Turn: All five lamp heads will illuminate, providing maximum brightness (4,000 lumens total).
- Fourth Turn: The lamp will turn off.

## **Adjusting Lamp Heads**

Each of the five gooseneck arms is individually adjustable. Gently bend each arm to direct the light precisely where needed. This allows for versatile lighting configurations, suitable for reading, task lighting, or creating ambient illumination.

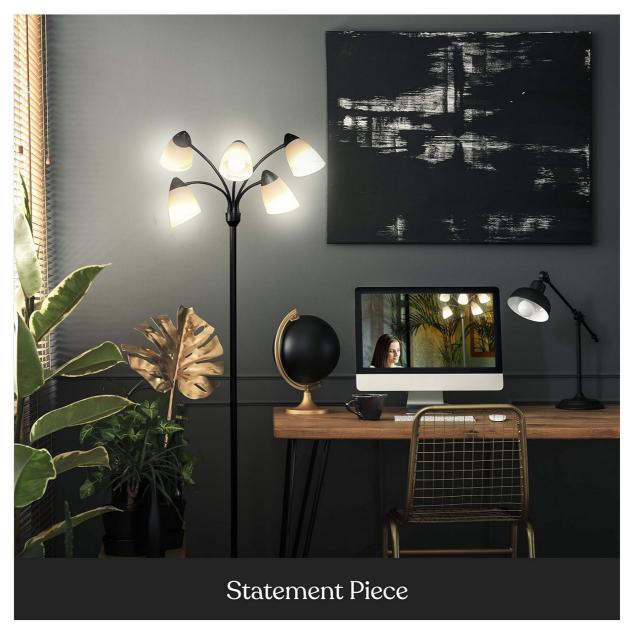


Image: Adjustable Gooseneck Arms.



Image: White or Multi-Color Shades options.

## MAINTENANCE

## **Care and Cleaning**

To maintain the appearance and functionality of your lamp:

- Always unplug the lamp before cleaning.
- Wipe the lamp and shades with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishing agents, as these may damage the finish.

## **Bulb Replacement**

The Brightech Medusa LED Floor Lamp includes energy-saving LED bulbs rated for approximately 20,000 hours of use. If a bulb needs replacement:

- Ensure the lamp is **unplugged** and the bulb has cooled completely.
- Gently unscrew the old bulb from its socket.
- Screw in a new E26 base LED bulb.

#### **Troubleshooting**

If you encounter any issues with your Brightech Medusa LED Floor Lamp, refer to the following common problems and solutions:

#### · Lamp does not turn on:

- Check that the power cord is securely plugged into a working electrical outlet.
- Ensure the rotary switch is turned to an 'on' position (two, three, or five heads illuminated).
- Verify that all bulbs are properly screwed into their sockets.

#### • Not all lamp heads illuminate:

- Rotate the rotary switch to cycle through the dimming settings. The lamp has distinct settings for two, three, and five illuminated heads.
- Check individual bulbs for proper seating or if they need replacement.

#### • Lamp is unstable or wobbles:

- Ensure the lamp base is placed on a flat, level, and solid surface.
- Confirm that all pole sections are tightly screwed together.

## **SPECIFICATIONS**

Feature	Detail
Brand	Brightech
Model Number	FL-MDSA-BLK
Product Dimensions	1.18"D x 1.97"W x 74"H
Item Weight	14.7 pounds (6.68 Kilograms)
Light Source Type	LED
Number of Light Sources	5
Light Output Maximum	4000 Lumens
Equivalent Wattage	300 watts (incandescent equivalent)
Bulb Base	E26
Base Material	Metal
Shade Material	Plastic
Finish Type	Painted
Special Feature	Dimmable, Adjustable Gooseneck Arms
Control Method	Touch (Rotary Switch)
Indoor/Outdoor Usage	Indoor
Assembly Required	No (minimal assembly)

# WARRANTY AND SUPPORT

Brightech USA offers an industry-leading **3-year warranty** covering defects, malfunctions, or sudden failures to your standing lamp when purchased through them. This warranty ensures your product is built to last.

For any questions, support, or warranty claims, please contact Brightech USA directly. Their friendly USA-based support team is available to assist you.

#### Related Documents - FL-MDSA-BLK

