

[Manuals.plus](#) /

› [Brightech](#) /

› Brightech Sky Dome Plus LED Floor Lamp Instruction Manual

Brightech FL-DMEPL-BLK

Brightech Sky Dome Plus LED Floor Lamp Instruction Manual

Model: FL-DMEPL-BLK

1. INTRODUCTION

Thank you for choosing the Brightech Sky Dome Plus LED Floor Lamp. This versatile lighting solution provides both ambient room illumination and adjustable task lighting, making it ideal for living rooms, bedrooms, and offices. Featuring energy-efficient LED technology and a stable design, this lamp is built for long-lasting performance and safety.



Image 1: The Brightech Sky Dome Plus LED Floor Lamp in Jet Black.

2. SAFETY INSTRUCTIONS

- Ensure the lamp is unplugged before assembly, cleaning, or changing bulbs.

- Do not operate the lamp with a damaged cord or plug.
- Place the lamp on a stable, level surface to prevent tipping. The weighted base enhances stability.
- Keep the lamp away from water or other liquids.
- Use only the specified bulb type and wattage to avoid overheating. This lamp uses standard E26 base LED bulbs.
- LED bulbs remain cool to the touch during operation, reducing burn risk.
- This product is intended for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Base
- Multiple Pole Sections (for main lamp body)
- Main Uplight Shade
- Adjustable Reading Lamp Arm with Shade
- 2 x Standard A19 LED Bulbs (16W for uplight, 9.5W for reading light)
- Power Cord with Dimmer Switch

The Sky Dome Plus

LED Floor Lamp



White Plastic Dome Shade
Diffuses The Harsh light



LED Light Bulbs Included
One 16W and Two 9.5W Warm White Lights



Dimmer & Rotary Switch
Each Light Operates Independently



Heavy Weighted Base
Ensured Stability

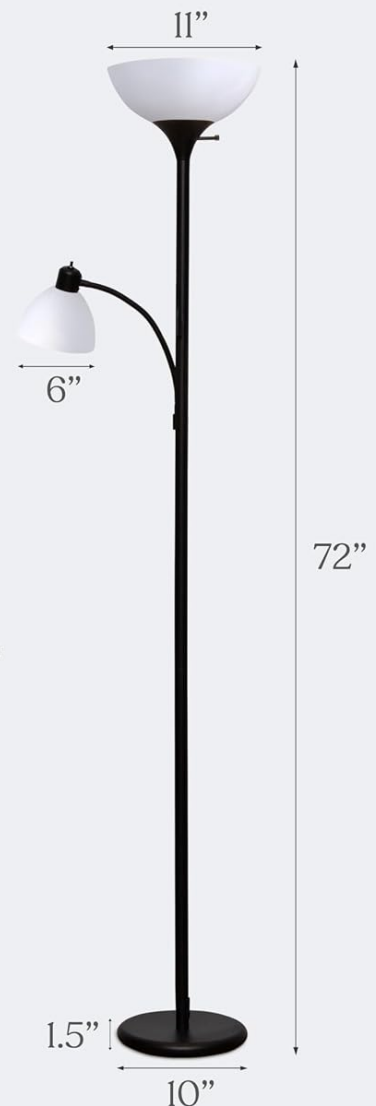


Image 2: Diagram illustrating lamp dimensions and features.

4. SETUP AND ASSEMBLY

Assembly of the Brightech Sky Dome Plus LED Floor Lamp is straightforward and typically takes only a few minutes. No special tools are required.

1. Carefully unpack all components from the box.
2. Screw the pole sections together clockwise, ensuring each section is securely tightened.
3. Attach the assembled pole to the lamp base by screwing it clockwise until firm.
4. Attach the main uplight shade to the top of the pole.
5. Attach the adjustable reading lamp arm to the designated slot on the main pole.
6. Insert the appropriate LED bulbs into both the main uplight and the reading lamp sockets.
7. Plug the power cord into a standard electrical outlet.

For a visual guide on assembly and features, please refer to the video below:

Video 1: Demonstrates the assembly and features of the Brightech Sky Dome LED Floor Lamp, including its weighted base and adjustable reading light.

5. OPERATING INSTRUCTIONS

The Brightech Sky Dome Plus LED Floor Lamp offers independent control for its two light sources:

- **Main Uplight:** The primary light source is controlled by a rotary dimmer switch located on the main pole. Turn the switch clockwise to turn on the light and adjust its brightness. The 3-way dimmer allows for multiple brightness settings.
- **Adjustable Reading Lamp:** The secondary light source, designed for task lighting, has its own rotary switch on its shade. Turn this switch to activate and control the reading light independently. The flexible gooseneck arm allows you to direct light precisely where needed.

You can operate both lights simultaneously or individually to create your desired ambiance and illumination.

Video 2: Provides a detailed demonstration of operating the Brightech Sky Dome Floor Lamp, including turning on/off both the main and reading lights and adjusting the flexible arm.

6. MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Always unplug the lamp before replacing bulbs. Allow bulbs to cool completely before handling. This lamp uses standard E26 base LED bulbs. Refer to the specifications for recommended wattage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not securely plugged in. Bulb is loose or burnt out. Power outlet is not functioning.	Ensure the power cord is fully inserted into the outlet. Tighten or replace the bulb. Test the outlet with another device.
Light flickers.	Loose bulb. Incompatible dimmer switch (if using a non-standard bulb).	Tighten the bulb. Ensure you are using dimmable LED bulbs if experiencing flickering with the dimmer function.
Reading lamp arm is loose.	Arm not fully secured during assembly.	Gently re-secure the arm into its slot on the main pole.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	FL-DMEPL-BLK
Dimensions (D x W x H)	11"D x 1.97"W x 72"H
Item Weight	10.16 pounds
Material	Metal, Plastic
Finish Type	Antique
Bulb Base	E26
Light Source Type	LED
Number of Light Sources	2
Wattage	25 watts (total)
Brightness	2400 Lumen (total)
Light Color	Warm White (3000K)
Control Method	Touch, Dimmer
Special Features	3-Way Dimmable, Energy Efficient
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

Brightech USA offers an industry-leading 3-year warranty covering defects, malfunctions, or sudden failures when purchased directly through Brightech. For support or warranty claims, please contact the USA-based support team. For additional product information or to explore other Brightech products, visit the [Brightech Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question