

[Manuals.plus](#) /

› [JBL](#) /

› JBL Partybox 100 Portable Bluetooth Speaker Instruction Manual

JBL JBLPARTYBOX100AM

JBL Partybox 100 Portable Bluetooth Speaker Instruction Manual

Model: JBLPARTYBOX100AM | **Brand:** JBL

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your JBL Partybox 100 portable Bluetooth speaker. The JBL Partybox 100 is designed to deliver powerful audio with dynamic light effects, featuring wireless Bluetooth streaming, a rechargeable battery for portability, and inputs for microphones and guitars.



Figure 1.1: Front view of the JBL Partybox 100 speaker with active blue light rings.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the speaker to rain or moisture.

- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The product is not waterproof. Avoid contact with liquids.

3. SETUP

3.1 Unboxing

Carefully remove all components from the packaging. Ensure all items listed in the packing list are present. Retain the packaging for future transport or storage.

3.2 Charging the Battery

The JBL Partybox 100 features a built-in rechargeable Lithium Polymer battery. Before first use, fully charge the speaker. Connect the provided power cable to the AC input on the rear of the speaker and plug it into a power outlet. The charging time is approximately 6.5 hours.

3.3 Powering On/Off

To power on the speaker, press the **Power** button located on the top panel. Press and hold the **Power** button again to turn off the speaker.

3.4 Placement

For optimal sound performance, place the speaker on a stable, flat surface. The speaker can be positioned vertically or horizontally. Ensure adequate ventilation around the unit.



Figure 3.1: Side view of the JBL Partybox 100, illustrating its portable design.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

To connect your device via Bluetooth:

1. Power on the JBL Partybox 100.
2. Press the **Bluetooth** button on the top panel. The Bluetooth indicator will flash, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and select "JBL Partybox 100" from the list of available devices.
4. Once connected, the Bluetooth indicator will glow solid blue.

4.2 Using Microphone and Guitar Inputs

The JBL Partybox 100 features dedicated inputs for a microphone and a guitar, allowing you to perform or sing along.

- Connect your microphone to the **MIC** input. Adjust the microphone volume using the **MIC Volume** knob.
- Connect your guitar to the **GUITAR** input. Adjust the guitar volume using the **GUITAR Volume** knob.



Figure 4.1: Rear input panel showing USB, AUX, MIC, and GUITAR inputs.

4.3 Light Effects

The JBL Partybox 100 features dynamic light shows that sync with your music. Press the **Light Mode** button (sun icon) on the top panel to cycle through different light patterns or turn them off.



Figure 4.2: The JBL Partybox 100 displaying green light rings, demonstrating light effects.

4.4 Sound Boost

Activate the **Sound Boost** feature by pressing the dedicated button on the top panel to enhance bass and overall sound intensity for a more impactful audio experience.



Figure 4.3: Top panel controls including Power, Bluetooth, Light Mode, Sound Boost, and volume controls.

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth may be used. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

5.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before storing and to recharge it every few months to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your JBL Partybox 100, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted or power cable is not connected.	Connect the speaker to a power outlet and allow it to charge. Ensure the power cable is securely connected.
No sound from speaker.	Volume is too low, device is not paired, or incorrect input selected.	Increase the volume on both the speaker and your connected device. Ensure Bluetooth is paired correctly or the correct input (AUX, MIC, GUITAR) is selected.
Bluetooth connection issues.	Device is out of range, interference, or pairing error.	Ensure your device is within 10 meters (33 feet) of the speaker. Turn off and on Bluetooth on your device and the speaker. Try re-pairing the device.
Light effects not working.	Light mode is off or selected mode has no active lights.	Press the Light Mode button to cycle through different light patterns.

7. SPECIFICATIONS

Detailed technical specifications for the JBL Partybox 100:

Feature	Specification
Model Name	JBLPARTYBOX100AM
Speaker Type	Party Speaker
Color	Black
Product Dimensions (D x W x H)	13.86" x 14.02" x 26.14"
Item Weight	21.4 Pounds
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Power Source	Battery Powered
Battery Type	Lithium Polymer (1 included)
Battery Capacity	2500 mAh
Charging Time	6.5 Hours
Speaker Maximum Output Power	160 Watts

Feature	Specification
Woofer Diameter	5.25 Inches
Control Method	Touch
Indoor/Outdoor Usage	Indoor
UPC	766234480338

26.14"

13.86"

14.02"

Figure 7.1: Product dimensions of the JBL Partybox 100.

8. WARRANTY INFORMATION

The JBL Partybox 100 comes with a limited warranty. For specific terms and conditions, please refer to the warranty card included with your product or visit the official JBL website. This warranty typically covers defects in materials and workmanship under normal use.

9. CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please visit the official JBL support website or contact their customer service department. You may need your product model number (JBLPARTYBOX100AM) and serial number (if applicable) when contacting support.

Official Website: www.jbl.com