

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Geepas](#) /
- › [Geepas GIC33013 Digital Infrared Cooker User Manual](#)

Geepas GIC33013

Geepas GIC33013 Digital Infrared Cooker User Manual

Model: GIC33013

1. INTRODUCTION

Thank you for purchasing the Geepas GIC33013 Digital Infrared Cooker. This appliance is designed for efficient and convenient cooking, featuring touch controls and a ceramic glass surface. Please read this manual thoroughly before operating the cooker to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: Angled view of the Geepas GIC33013 Digital Infrared Cooker.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury, or damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to, the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs if provided.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- **WARNING:** The surface remains hot after use. Do not touch the surface until it has cooled down.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block ventilation openings.

3. PRODUCT OVERVIEW

The Geepas GIC33013 Digital Infrared Cooker features a sleek design with intuitive touch controls and a durable ceramic glass cooking surface.

3.1 Components

- Ceramic Glass Cooking Surface
- Control Panel with Touch Buttons
- 4-Digit LED Display
- Ventilation System (underside)
- Power Cord

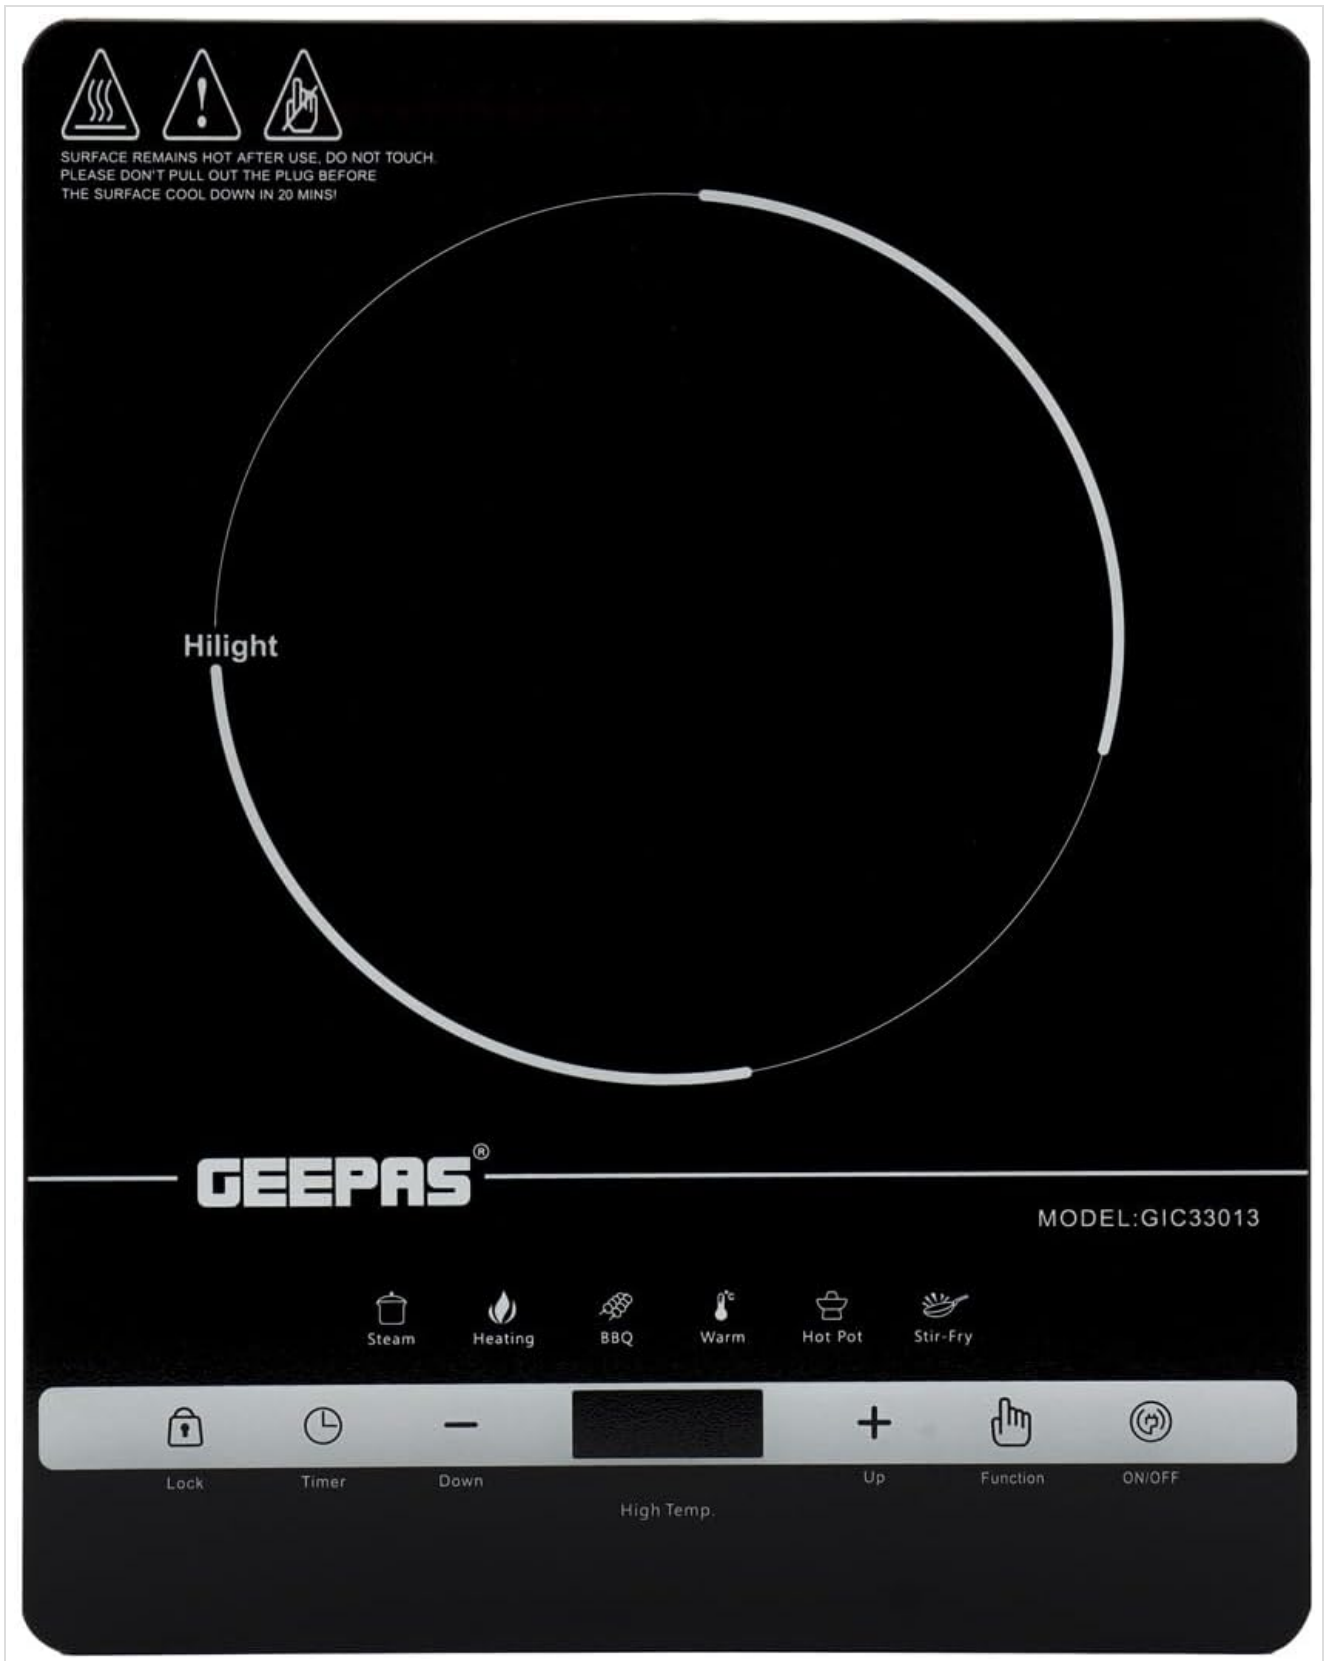


Image 3.1: Top-down view of the cooker, highlighting the control panel and cooking zone.

3.2 Control Panel

The cooker is equipped with a touch-sensitive control panel for easy operation.



4 Digit LED Display

The cooktop has a clear 4-digit display with an indicator light for easy guidance.

Image 3.2: Close-up of the 4-digit LED display.



Image 3.3: Demonstrating the touch control functionality.

Key controls include:

- **ON/OFF:** Powers the unit on or off.
- **Function:** Selects different cooking modes.
- **Up (+):** Increases temperature or time.
- **Down (-):** Decreases temperature or time.
- **Timer:** Activates and adjusts the cooking timer.
- **Lock:** Engages or disengages the child safety lock.
- **Pre-set Cooking Modes:** Steam, Heating, BBQ, Warm, Hot Pot, Stir-Fry.

4. SETUP

Before first use, follow these steps:

1. **Unpacking:** Carefully remove the cooker from its packaging. Retain packaging for storage or transport.
2. **Placement:** Place the cooker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation

around the unit (at least 10-15 cm clearance from walls or other appliances). Do not place it on a metal surface.

3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (AC 220-240V, 50/60Hz).
4. **Initial Cleaning:** Wipe the ceramic glass surface with a soft, damp cloth. Do not use abrasive cleaners.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Power On:** Press the **ON/OFF** button. The LED display will illuminate, and the cooker will enter standby mode.
2. **Place Cookware:** Place a suitable pot or pan on the center of the ceramic glass cooking surface. The infrared cooker is compatible with all types of cookware.
3. **Select Function:** Press the **Function** button to cycle through the available cooking modes (e.g., Steam, Heating, BBQ, Warm, Hot Pot, Stir-Fry) or to adjust power/temperature manually.
4. **Adjust Settings:** Use the **Up (+)** and **Down (-)** buttons to adjust the power level or temperature according to your cooking needs. The cooker offers 8 power/temperature levels.
5. **Power Off:** After cooking, press the **ON/OFF** button to turn off the cooker. The surface will remain hot for a period, indicated by a 'HOT' warning on the display. The internal fan may continue to run until the unit cools down.



2000Watts Ceramic Heating Element

Image 5.1: Cooker in use, demonstrating the ceramic heating element.



Image 5.2: Display showing temperature/power level settings.

5.2 Using the Timer

The programmable timer allows you to set a cooking duration up to 3 hours.

1. While the cooker is operating, press the **Timer** button.
2. Use the **Up (+)** and **Down (-)** buttons to set the desired cooking time.
3. The timer will start counting down. Once the set time expires, the cooker will automatically turn off.

5.3 Child Lock Function

To prevent accidental operation, especially by children:

- **Activate Lock:** Press the **Lock** button. The control panel will become unresponsive to other touches.
- **Deactivate Lock:** Press and hold the **Lock** button again for a few seconds until the lock indicator disappears.

5.4 Automatic Shut-off

For safety and energy efficiency, the cooker features an automatic shut-off function. If left unattended for a prolonged period or if the timer completes, the unit will power down automatically.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your infrared cooker.

1. **Before Cleaning:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning. The 'HOT' indicator must be off.
2. **Ceramic Glass Surface:** Wipe the surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic hob cleaner. Rinse with a clean, damp cloth and dry thoroughly.
3. **Control Panel:** Wipe with a soft, damp cloth. Do not use excessive water.
4. **Exterior:** Clean the exterior housing with a soft, damp cloth.
5. **Ventilation Openings:** Ensure the ventilation openings on the underside and sides are free from dust and debris. Use a soft brush or vacuum cleaner to gently clear them.
6. **Do Not Immerse:** Never immerse the cooker in water or any other liquid.



Image 6.1: Underside of the cooker, showing the ventilation fan.

7. TROUBLESHOOTING

If you encounter issues with your Geepas GIC33013 Digital Infrared Cooker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Cooker does not turn on.	No power supply. Power cord not properly connected.	Check if the power cord is securely plugged into a working outlet. Check circuit breaker.
Cooker turns off unexpectedly.	Overheating protection activated. Timer expired.	Ensure ventilation openings are not blocked. Allow the unit to cool down. Check if the timer was set.
Controls are unresponsive.	Child lock is activated.	Press and hold the Lock button to deactivate the child lock.

Problem	Possible Cause	Solution
Cooking surface remains hot after turning off.	Normal operation for infrared cookers.	This is normal. The 'HOT' indicator will remain lit until the surface has cooled to a safe temperature. Do not touch.
Unusual odors during first use.	Protective coatings burning off.	This is normal for initial use. Ensure good ventilation. Odor should dissipate after a few uses.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Geepas
Model Number	GIC33013
Power / Wattage	2200 Watts
Material	Ceramic Glass
Product Dimensions (L x W x H)	36 x 28 x 6.5 cm
Item Weight	3.7 Kilograms
Control Type	Touch Control
Display	4-Digit LED Display
Timer	Up to 3 hours programmable
Special Features	Electric, High/low heating & voltage protection, Multiple functions, Lock setting
Auto Shutoff	Yes (after timer completion or prolonged inactivity)
Voltage	AC 220-240V, 50/60Hz

9. WARRANTY AND SUPPORT

Your Geepas GIC33013 Digital Infrared Cooker comes with a warranty. Please refer to the included Warranty Card for specific terms and conditions.

For technical support, service, or installation inquiries, please contact Geepas customer service at the following regional numbers:

- **Riyadh:** +966 -11- 4094006 Ext – 113
- **Jeddah:** +966- 12- 6577714
- **Dammam:** +966-13- 8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785

Please have your model number (GIC33013) and purchase details ready when contacting support.

