

Behringer C210

Behringer C210 Powered Column Loudspeaker

Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Behringer C210 Powered Column Loudspeaker. The C210 is a modular column loudspeaker designed for portable PA applications and high-quality music playback. It features an 8-inch subwoofer, four high-frequency drivers, 200 watts of multi-channel Class-D power, Bluetooth audio streaming, an integrated MP3 player, LED lighting, and remote control capabilities.

Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Power Source:** Connect the unit only to an AC power outlet of the specified voltage. Ensure the power cord is not damaged or pinched.
- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Water and Moisture:** Do not expose this apparatus to rain or moisture. Do not place objects filled with liquids on the apparatus.
- **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **Placement:** Ensure the loudspeaker is placed on a stable, level surface to prevent tipping.
- **Hearing Protection:** Prolonged exposure to high sound pressure levels can cause permanent hearing loss. Use caution when setting volume levels.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present and in good condition:

- Behringer C210 Powered Column Loudspeaker Unit (Subwoofer base and column array)
- Power Cable
- Remote Control
- User Manual (this document)

If any items are missing or damaged, please contact your retailer immediately.

4. PRODUCT OVERVIEW

The Behringer C210 is a compact yet powerful column loudspeaker system designed for ease of transport and quick setup. It consists of a subwoofer base unit and a column array that houses the high-frequency drivers.





Figure 4.1: Front view of the C210 loudspeaker, illustrating its modular design with the subwoofer base and the column array.



Figure 4.2: Rear/side view of the C210, highlighting the integrated control panel and input/output connections on the subwoofer unit.

Key Components:

- **Subwoofer Base:** Houses the 8-inch subwoofer, Class-D amplifier, control panel, and input/output connections.
- **Column Array:** Contains four high-frequency drivers for wide sound dispersion. It connects directly to the subwoofer base.
- **Control Panel:** Located on the top of the subwoofer base, providing access to volume, input selection, MP3 player controls, and LED lighting settings.
- **Remote Control:** Allows for convenient adjustment of volume, track selection, and LED lighting from a distance.

5. SETUP

Follow these steps to set up your C210 loudspeaker:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Choose a stable, level surface for the subwoofer base. Ensure there is adequate space around the unit for ventilation. Avoid placing it directly against walls or in corners if possible, to optimize sound dispersion.
3. **Assemble Column Array:** Align the bottom of the column array with the connector on the top of the subwoofer base. Gently push down until it is securely seated. The connection is designed to be firm and stable.
4. **Power Connection:** Connect the supplied power cable to the AC inlet on the rear of the subwoofer base. Plug the other end into a suitable grounded electrical outlet.
5. **Initial Power On:** Before turning on the unit, ensure all volume controls are set to their minimum level. Power on the unit using the main power switch.

6. OPERATING

6.1. Basic Operation

- **Power On/Off:** Use the power switch located on the rear of the subwoofer base to turn the unit on or off.
- **Master Volume:** Adjust the main volume knob on the control panel to control the overall output level of the loudspeaker.
- **Input Selection:** Use the input selector buttons or knob on the control panel to switch between different audio sources (e.g., Bluetooth, MP3, Line In).

6.2. Bluetooth Audio Streaming

The C210 supports high-quality Bluetooth audio streaming from compatible devices.

1. **Activate Bluetooth:** Select the Bluetooth input mode on the C210's control panel. The unit will enter pairing mode, indicated by a flashing Bluetooth indicator.
2. **Pair Device:** On your smartphone, tablet, or other Bluetooth-enabled device, open the Bluetooth settings and search for available devices. Select "Behringer C210" from the list.
3. **Connect:** Once paired, the Bluetooth indicator on the C210 will become solid, and you can begin streaming audio from your device.

6.3. MP3 Player Operation

The integrated MP3 player allows playback of audio files from USB sticks and SD/MMC cards.

1. **Insert Media:** Insert a USB stick into the USB port or an SD/MMC card into the card slot on the control panel.
2. **Select MP3 Input:** Switch the input mode to MP3. The unit will automatically detect and begin playing compatible audio files.
3. **Controls:** Use the dedicated MP3 player controls (Play/Pause, Next Track, Previous Track) on the control panel or remote control to manage playback.

6.4. LED Lighting

The C210 features integrated LED lighting. Use the dedicated controls on the unit or the remote control to activate and select various lighting modes and effects.

6.5. Remote Control

The included remote control provides convenient access to key functions:

- Power On/Off
- Master Volume Up/Down
- Input Source Selection
- MP3 Player Controls (Play/Pause, Skip)
- LED Lighting Mode Selection

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your C210 loudspeaker.

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe down the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a dry, dust-free environment. It is recommended to use the original packaging for protection during storage or transport.
- **Ventilation:** Regularly check that the ventilation openings are clear of dust and debris to prevent overheating.

8. TROUBLESHOOTING

If you encounter issues with your C210, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable disconnected; Power outlet faulty; Unit power switch off	Check power cable connection; Try a different outlet; Ensure power switch is ON
No sound output	Volume too low; Incorrect input selected; Audio source issue; Column array not connected properly	Increase master volume; Select correct input; Check audio source device; Re-seat column array
Bluetooth not pairing	C210 not in pairing mode; Device already paired; Interference	Ensure C210 is in Bluetooth input and flashing; Disconnect from other devices; Move closer to C210

Problem	Possible Cause	Solution
MP3 playback issues	Unsupported file format; Corrupt media; Incorrect input selected	Ensure files are MP3; Try different USB/SD card; Select MP3 input
Remote control not working	Dead batteries; Obstruction; Out of range	Replace batteries; Remove obstructions; Move closer to unit

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Technical specifications for the Behringer C210 Powered Column Loudspeaker:

Feature	Specification
Model Name	C210
Speaker Type	Subwoofer (with Column Array)
Mounting Type	Freestanding
Speaker Amplification Type	Active
Speaker Maximum Output Power	200 Watts
Woofer Diameter	8 Inches
Tweeter Diameter	2.75 Inches (x4)
Frequency Response	20 Hz - 20 kHz (approximate, based on 2E+4 Hz)
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Control Method	Remote
Includes MP3 player?	Yes
Power Source	Corded Electric
Item Weight	30.6 Pounds (13.88 kg)
Product Dimensions (L x W x H)	17.32 x 12.99 x 54.53 inches (44 x 33 x 138.5 cm)
Is Waterproof	FALSE
Manufacturer	Music Tribe
UPC	653341353139

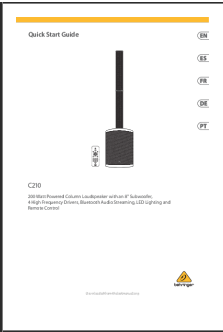
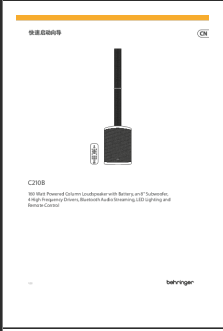
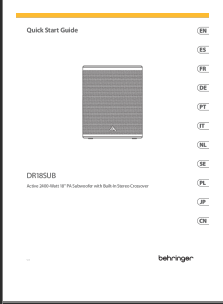
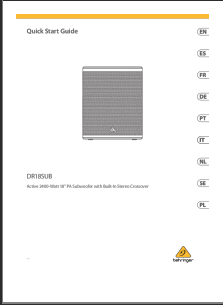
10. WARRANTY AND SUPPORT





Your Behringer C210 Powered Column Loudspeaker comes with a limited warranty provided by the manufacturer, Music Tribe. The specific terms and duration of the warranty may vary by region and retailer.

For detailed warranty information, product registration, technical support, or service inquiries, please visit the official Behringer website or contact your authorized Behringer dealer.

You can find more information and support resources at the [Behringer Store on Amazon](#) or the official Music Tribe website.

Related Documents - C210

	<p>Behringer C210 Quick Start Guide: Powered Column Loudspeaker</p> <p>Quick start guide for the Behringer C210, a 200 Watt powered column loudspeaker with an 8" subwoofer, Bluetooth audio streaming, LED lighting, and remote control. Includes setup, controls, specifications, and safety information.</p>
	<p>Behringer C210B Powered Column Loudspeaker Quick Start Guide</p> <p>Quick start guide for the Behringer C210B, a 160 Watt Powered Column Loudspeaker with Battery, 8" Subwoofer, Bluetooth Audio Streaming, LED Lighting, and Remote Control. Includes setup, connection, operation, and technical specifications.</p>
	<p>Behringer DR18SUB Active PA Subwoofer Quick Start Guide</p> <p>Get started quickly with the Behringer DR18SUB, an active 2400-Watt 18-inch PA subwoofer featuring a built-in stereo crossover. This guide provides essential setup and operational information.</p>
	<p>Behringer DR18SUB Quick Start Guide: Active PA Subwoofer</p> <p>Comprehensive quick start guide for the Behringer DR18SUB active 2400-Watt 18-inch PA subwoofer, covering safety instructions, controls, setup, specifications, and FCC compliance.</p>

<div><div>Quick Start Guide</div><div></div><div>EUROLIVE B1200D-PRO High-Performance Active 500-Watt 12" PA Subwoofer with Built-In Stereo Crossover</div><div></div></div> <div><div>EN</div><div>ES</div><div>FR</div><div>DE</div><div>PT</div><div>IT</div><div>NL</div><div>BE</div><div>PL</div></div>	<p>Behringer EUROLIVE B1200D-PRO Quick Start Guide: Active 500W 12" PA Subwoofer</p> <p>Get started quickly with the Behringer EUROLIVE B1200D-PRO, a high-performance 500-watt active 12-inch PA subwoofer with a built-in stereo crossover. This guide covers essential safety instructions, hook-up diagrams, control descriptions, setup steps, and technical specifications.</p>
<div><div>Quick Start Guide</div><div></div><div>EUROLIVE VQ1800D/VQ1500D High-Performance Active 1800W/1500W 18"/15" PA Subwoofers with Built-In Stereo Crossover</div><div></div></div> <div><div>EN</div><div>ES</div><div>FR</div><div>DE</div><div>PT</div><div>IT</div><div>NL</div><div>BE</div><div>PL</div></div>	<p>Behringer EUROLIVE VQ1800D/VQ1500D Quick Start Guide</p> <p>This document provides a quick start guide for the Behringer EUROLIVE VQ1800D and VQ1500D PA subwoofers, covering important safety instructions, hook-up procedures, control descriptions, and specifications.</p>