

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tupperware](#) /

› [Tupperware SpeedyMando Grater 35175 User Manual](#)

Tupperware 35175

Tupperware SpeedyMando Grater 35175 User Manual

Your guide to using and maintaining your Tupperware SpeedyMando Grater.

1. PRODUCT OVERVIEW

The Tupperware SpeedyMando Grater is a manually operated kitchen tool designed for quickly and easily grating and shredding various food items such as cheese, chocolate, and vegetables. It features a durable plastic body with a stainless steel grating surface and a food pusher for safe and efficient use.



Image 1: Top view of the Tupperware SpeedyMando Grater with the red food pusher in place.

2. COMPONENTS

- **Grater Body:** The main white plastic frame with an integrated handle and a stainless steel grating surface.
- **Food Pusher:** A red plastic component designed to safely push food items across the grating surface.



Image 2: Angled view of the grater, highlighting the stainless steel grating surface and the red food pusher.

3. SETUP AND ASSEMBLY

The Tupperware SpeedyMando Grater comes pre-assembled. No complex assembly is required. Before first use, wash all components thoroughly.

1. Unpack the grater and its components.
2. Wash the grater body and food pusher with warm, soapy water. Rinse thoroughly and dry.
3. Ensure the food pusher is correctly inserted into the grater body, ready for use.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective grating:

1. Place the grater securely over a bowl or container to collect the grated food. The handle is designed for a comfortable grip.
2. Insert the food item (e.g., cheese, chocolate, vegetable) into the opening of the grater.
3. Place the red food pusher over the food item.
4. Apply gentle, even pressure on the food pusher while moving it back and forth across the grating surface. The food pusher helps to protect your fingers from the sharp blades.
5. Continue until the desired amount of food is grated.

Your browser does not support the video tag.

Video 1: Demonstration of the Tupperware SpeedyMando Grater in use, showing how to safely grate food items with the pusher.

Safety Precautions:

- Always use the food pusher to protect your fingers from the sharp grating blades.
- Keep out of reach of children.
- Handle the grater with care, especially the stainless steel grating surface.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your grater.

- **Hand Washing:** Wash all parts immediately after use with warm, soapy water. Use a brush to remove any food particles from the grating surface. Rinse thoroughly and dry completely before storing.
- **Dishwasher Safe:** The Tupperware SpeedyMando Grater is dishwasher safe. Place components on the top rack for best results.
- **Storage:** Store in a dry place.



Image 3: Underside view of the grater, showing the stainless steel grating surface for cleaning reference.

6. TROUBLESHOOTING

If you encounter any issues with your SpeedyMando Grater, consider the following:

- **Food not grating effectively:** Ensure the food item is firm enough for grating. For softer items, chilling them slightly may help. Apply consistent pressure with the food pusher.
- **Grater slipping:** Ensure the grater is placed on a stable, non-slip surface or securely over a bowl.

7. SPECIFICATIONS

Feature	Detail
Brand	Tupperware
Model	35175
Color	Red/White
Material	Plastic, Stainless Steel
Item Weight	490 Grams (1.08 pounds)
Shape	Rectangular
Dishwasher Safe	Yes
Package Dimensions	10.94 x 4.33 x 2.87 inches

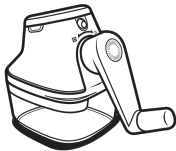


8. WARRANTY AND SUPPORT

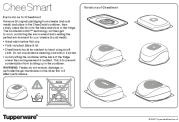 
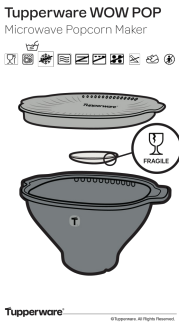 
 

For warranty information or product support, please refer to the official Tupperware website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the [Tupperware Store on Amazon](#) for more products and information.

© 2023 Tupperware. All rights reserved.

Related Documents - 35175

<div>Grate N Store Rotary Cheese Grater</div> <div></div> <div><div>Tupperware</div><div><small>Tupperware is a registered trademark of Tupperware Brands Corporation. © 2023 Tupperware Brands Corporation.</small></div></div>	<div>Grate N Store Rotary Cheese Grater - Tupperware Instructions</div> <div>Official instructions for assembling and using the Tupperware Grate N Store Rotary Cheese Grater. Learn about its parts and how to operate it efficiently.</div>
<div>Micro Healthy Delight</div> <div></div> <div><div>Tupperware</div><div><small>Tupperware is a registered trademark of Tupperware Brands Corporation. © 2023 Tupperware Brands Corporation.</small></div></div> <div>Micro Healthy Delight</div> <div></div> <div><div>Tupperware</div><div><small>Tupperware is a registered trademark of Tupperware Brands Corporation. © 2023 Tupperware Brands Corporation.</small></div></div>	<div>Tupperware Micro Healthy Delight: Microwave Cookware Guide</div> <div>Discover how to prepare healthy and delicious meals with the Tupperware Micro Healthy Delight. This guide provides essential cooking instructions, safety precautions, and warranty information for optimal use in your microwave.</div>

 <p>CheeSmart</p> <p>Tupperware</p>	<p>CheeSmart Food Storage Container Instructions Tupperware</p> <p>Official instructions for the Tupperware CheeSmart container, detailing how to use, clean, and store cheese and cold meats for optimal freshness. Learn about CondensControl technology.</p>
 <p>Tupperware WOW POP Microwave Popcorn Maker</p> <p>Tupperware</p>	<p>Tupperware WOW POP Microwave Popcorn Maker: Instructions and Safety Guide</p> <p>Comprehensive guide for the Tupperware WOW POP Microwave Popcorn Maker, covering usage, safety instructions, quantity guide, and warranty information. Learn to make perfect popcorn.</p>
 <p>Tupperware</p>	<p>Tupperware Time Savers Herb Chopper - User Manual and Instructions</p> <p>A comprehensive guide for the Tupperware Time Savers Herb Chopper, detailing assembly, operation, usage, and care. Learn how to efficiently chop herbs, vegetables, and other ingredients with this versatile kitchen tool.</p>
 <p>Super Dicer</p> <p>Tupperware</p>	<p>Tupperware Super Dicer User Manual: Instructions, Care, and Warranty</p> <p>Detailed user manual and guidelines for the Tupperware Super Dicer, a multipurpose food preparation tool. Includes product composition, detailed usage and care instructions, important guidelines for use, cleaning tips, and warranty information from Tupperware.</p>

Documents - Tupperware – 35175

no relevant documents