



[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Hairclipper series 5000 Washable Hair Clipper HC5650/15 User Manual

PHILIPS HC5650/15

Philips Hairclipper series 5000 User Manual

Model: HC5650/15

1. PRODUCT OVERVIEW

The Philips Hairclipper series 5000, model HC5650/15, is a washable hair clipper designed for efficient and precise hair cutting. It features advanced Trim-n-Flow PRO technology to prevent hair from getting stuck in the comb, ensuring a continuous cutting experience. The DualCut technology provides a double-sharpened cutting element for faster and more effective trimming.

This hair clipper offers 28 lock-in length settings, ranging from 0.5 mm to 28 mm, allowing for a wide variety of hairstyles. It provides up to 90 minutes of cordless use after a 1-hour charge, and can also be used corded. The device is fully washable for easy cleaning.



Figure 1.1: Philips Hairclipper series 5000, including the clipper, various comb attachments, and a storage pouch.

Key Features:

- **Trim-n-Flow PRO Technology:** Designed to prevent hair from clogging the comb, ensuring an uninterrupted cut.
- **DualCut Technology:** Self-sharpening blades for twice as fast cutting.
- **28 Lock-in Length Settings:** Easily select and lock in your desired length from 0.5 mm to 28 mm.
- **90 Minutes Cordless Use:** Enjoy extended use after just a 1-hour charge.
- **Fully Washable:** For easy and hygienic cleaning under running water.
- **Stainless Steel Blades:** Durable and long-lasting for consistent performance.
- **Turbo Mode:** For increased cutting power on thicker hair.

2. SAFETY INFORMATION

Before using the Philips Hairclipper, please read all safety warnings and instructions carefully. Keep this manual for future

reference.

- Always perform a patch test on a small, inconspicuous area of hair or skin before full use, especially if you have sensitive skin or are trying a new style.
- Avoid direct eye contact with the blades. The blades are sharp; handle the appliance with caution to prevent injury.
- Do not use the appliance near water sources such as bathtubs, showers, basins, or other vessels containing water.
- Never immerse the appliance in water unless explicitly stated as fully waterproof in the product specifications. This model is fully washable, meaning it can be rinsed under running water, but should not be submerged for extended periods.
- Always follow the manufacturer's instructions for cleaning and maintenance to ensure safe and optimal performance.
- Keep the appliance out of reach of children.
- Ensure the appliance is fully charged or connected to a stable power source before use to avoid power interruptions during cutting.

3. SETUP

3.1 Charging the Hairclipper

Before first use, or if the battery is low, fully charge the hair clipper. The appliance can be used corded or cordless.

- Connect the power cord to the hair clipper and plug it into a wall outlet.
- The battery indicator light will show the charging status. A full charge takes approximately 1 hour and provides up to 90 minutes of cordless use.

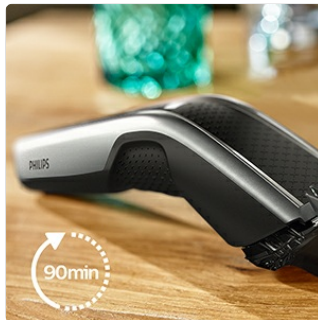


Figure 3.1: The hair clipper offers up to 90 minutes of cordless operation on a full charge.

3.2 Attaching and Detaching Comb Attachments

The Philips Hairclipper comes with various comb attachments to achieve different hair lengths.

- To attach a comb: Align the comb with the grooves on the clipper head and push it down until it clicks into place.
- To detach a comb: Gently pull the comb upwards from the clipper head.





Figure 3.2: The Philips Hairclipper ready for comb attachment or use without a comb for 0.5mm trim.

4. OPERATING INSTRUCTIONS

4.1 Selecting Hair Length

The hair clipper features an intuitive zoom wheel to select your desired hair length from 0.5 mm to 28 mm.

- Rotate the zoom wheel on the body of the clipper to adjust the comb attachment to the desired length setting. The selected length will be displayed.
- For a 0.5 mm trim, remove the comb attachment entirely.



Figure 4.1: The clipper offers 28 easy-to-select length settings for precise control over your haircut.

4.2 Hair Cutting Technique

For best results, ensure hair is clean and dry before cutting. If hair is very long, consider trimming it down with scissors first.

- Turn on the hair clipper by pressing the power button.
- Hold the clipper with the comb flat against the head.
- Move the clipper slowly against the direction of hair growth.
- Use overlapping strokes to ensure an even cut.

- For thicker hair, activate the Turbo mode by pressing the 'T' button for increased cutting power.



Figure 4.2: Demonstrating the use of the Philips Hairclipper for an even haircut.

4.3 Trim-n-Flow PRO Technology

This innovative comb design allows cut hair to flow away from the blades, preventing hair from getting stuck, even long hair. This ensures a fast and uninterrupted cutting experience.



Figure 4.3: Visual representation of the Trim-n-Flow PRO technology, ensuring smooth hair flow during cutting.

4.4 DualCut Technology

The DualCut technology features a double-sharpened cutting element with reduced friction. This allows the clipper to cut hair twice as fast as single-sided blades, providing a quick and precise trim.

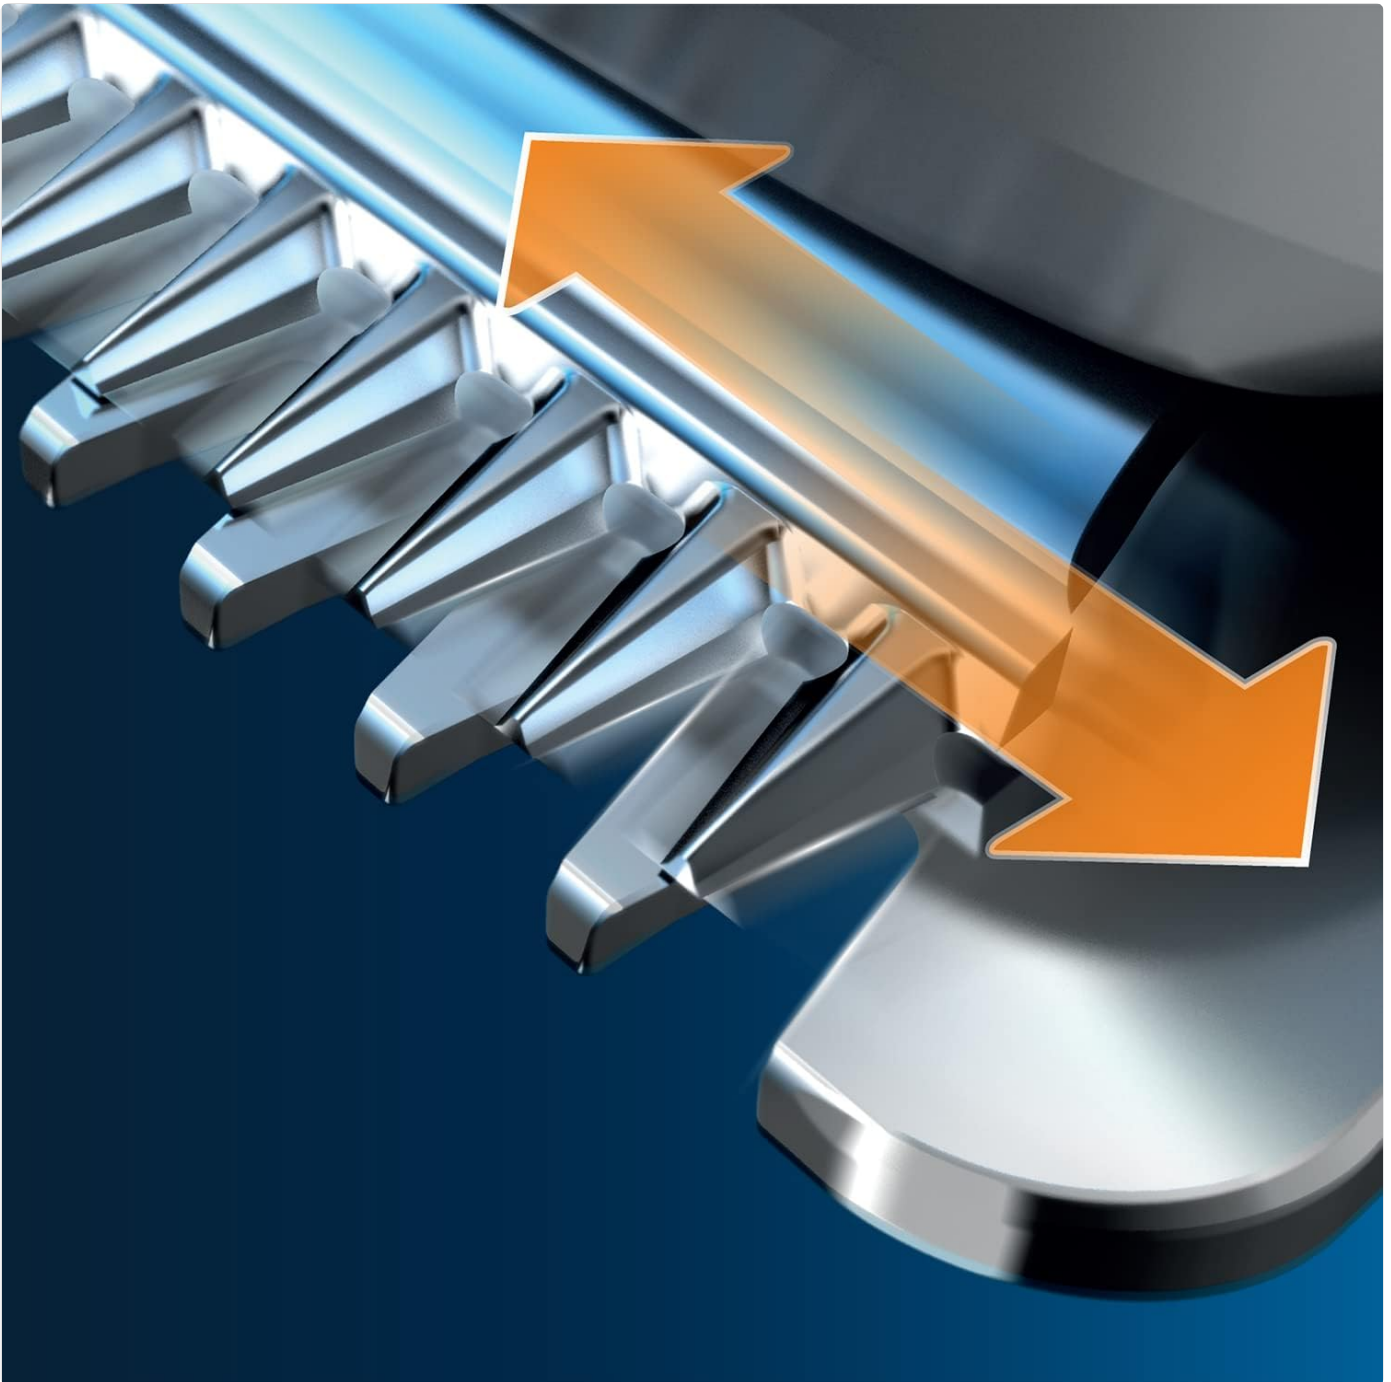


Figure 4.4: Close-up view of the DualCut blades, designed for enhanced cutting performance.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Philips Hairclipper.

5.1 Cleaning the Hairclipper

- After each use, turn off the appliance and detach the comb attachment.
- Use the provided cleaning brush to remove any loose hairs from the cutting element and the comb.
- Since the hair clipper is fully washable, you can rinse the cutting head and the comb attachment under running tap water. Ensure no water enters the main body of the clipper if it's not explicitly designed for full immersion.
- Allow all parts to air dry completely before reattaching the comb or storing the clipper.



Figure 5.1: The hair clipper is designed to be easily cleaned by rinsing under running water.

5.2 Blade Lubrication

The self-sharpening stainless steel blades generally do not require lubrication. However, if you notice reduced performance or increased noise, a small drop of light machine oil (e.g., sewing machine oil) on the blades can help maintain their smooth operation. Apply oil only after cleaning and drying the blades.

6. TROUBLESHOOTING

If you encounter issues with your Philips Hairclipper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted or not charged.	Charge the clipper for at least 1 hour. Ensure the power cord is securely connected.
Clipper pulls hair or cuts unevenly.	Blades are clogged with hair or not clean. Hair is too long or wet.	Clean the blades and comb thoroughly. Ensure hair is dry. Trim very long hair with scissors first.
Reduced cutting performance.	Blades may need lubrication or are worn.	Clean and lubricate the blades. If performance does not improve, consider contacting support for blade replacement.
Clipper makes unusual noise.	Blades are not properly aligned or need lubrication.	Ensure the comb attachment is correctly seated. Clean and lubricate the blades.

If the problem persists after trying these solutions, please contact Philips customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	HC5650/15
Brand	PHILIPS
Product Name	HC5650/15 HAIR CLIPPER
Power Source	Battery Powered (Corded/Cordless use)
Battery Type	Lithium-ion

Feature	Detail
Run Time	Up to 90 minutes
Charge Time	1 hour
Blade Material	Stainless Steel
Length Settings	28 lock-in settings (0.5 mm to 28 mm)
Cleaning	Fully Washable
Special Features	Detachable, Ergonomic, Rechargeable, Waterproof (Washable)
Dimensions (L x W x H)	7 x 19.3 x 22.7 cm
Weight	540 grams
Country of Origin	Indonesia

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Philips Hairclipper HC5650/15 comes with a 2-year worldwide warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For further assistance, product registration, or to find answers to frequently asked questions, please visit the official Philips support website or contact their customer service. You can also visit the Philips brand store on Amazon:

[Visit the Philips Store on Amazon](#)

No official product videos from the seller were available for embedding in this manual.