

[Manuals.plus](#) /

> [VIVOHOME](#) /

> VIVOHOME Electric Portable 2 in 1 Twin Tub Mini Laundry Washer and Spin Dryer Combo Washing Machine with Drain Hose for Apartments 13.5lbs Black & White User Manual

VIVOHOME VH354

VIVOHOME Electric Portable 2 in 1 Twin Tub Mini Laundry Washer and Spin Dryer Combo

Model: VH354

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your VIVOHOME Electric Portable 2 in 1 Twin Tub Mini Laundry Washer and Spin Dryer Combo. Please read this manual thoroughly before first use and retain it for future reference.

The VIVOHOME twin tub washing machine is designed for compact living spaces, offering both washing and spin-drying capabilities in a single portable unit. Its dual-function design allows for simultaneous washing and drying, making laundry tasks more efficient for small loads.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the machine is placed on a stable, level surface to prevent tipping during operation.
- Do not operate the machine with a damaged power cord or plug.
- Keep hands and loose clothing away from moving parts during operation, especially the spin tub.
- Do not immerse the electrical components of the machine in water.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure proper ventilation around the machine during use.

WHAT'S IN THE BOX

Upon unpacking, verify that all components are present:

- 1 x Washing Machine
- 1 x Spin Cap
- 2 x Inlet pipes (Φ2.5cm/Φ3.2cm)
- 1 x Manual (this document)
- 1 x Drain Hose

PRODUCT OVERVIEW

The VIVOHOME Twin Tub Washing Machine features a compact design with separate tubs for washing and spin-drying. Key components include:



Figure 1: Overview of the Twin Tub Washing Machine components.

- **Water Inlet:** Connection point for the water supply hose.
- **Water Timer Switch:** Controls the duration of the wash cycle.
- **Wash & Drain Selector Switch:** Selects between wash, rinse, and drain functions.
- **Spin Timer Switch:** Controls the duration of the spin cycle.
- **Drain Hose:** For expelling water from the machine.
- **Washer Side:** Main tub for washing clothes.
- **Dryer Side (Spin Tub):** Smaller tub for spin-drying clothes.

- **Upgraded Filter:** Collects lint and debris during washing.

TWIN TUB WASHING MACHINE FEATURES

Humanized design



Simple water inlet



Hook drain



Upgraded filter



Figure 2: Detailed view of the water inlet, hook drain, and upgraded filter.

TWIN TUB WASHING MACHINE FEATURES

2-in-1 machine & practical

Dryer side



Washer side



Stainless steel dewatering bucket



Upgrade filter



Figure 3: The 2-in-1 design showing both the washer and spin dryer tubs.

SETUP

Follow these steps to set up your washing machine:

1. **Placement:** Position the machine on a firm, level surface. Ensure it is close to a water source and a drain. The machine is lightweight and portable, suitable for apartments, RVs, or camping.
2. **Connect Water Inlet:** Attach one end of the inlet pipe to the water inlet on the machine (typically located at the top rear). Connect the other end to a suitable faucet. Ensure connections are secure to prevent leaks.
3. **Position Drain Hose:** Place the drain hose into a sink, bathtub, or other suitable drainage area. Ensure the hose is not kinked and is positioned to allow for proper water flow.
4. **Power Connection:** Plug the power cord into a grounded 110V/60Hz electrical outlet.



WASH CLOTHES EASILY

Enjoy your life

Figure 4: Proper placement and loading of the washing machine.

OPERATING INSTRUCTIONS

Washing Clothes

1. **Load Clothes:** Open the lid of the washer tub and place clothes inside. Do not overload; the washer can hold up to 8 lbs (3.6 kg).
2. **Add Water:** Turn on the water faucet connected to the inlet hose to fill the washer tub with water. Fill to the desired level, ensuring clothes are submerged.
3. **Add Detergent:** Add an appropriate amount of laundry detergent directly into the washer tub.
4. **Set Wash Timer:** Turn the "Wash Timer" knob to select the desired wash time (up to 15 minutes).
5. **Select Wash Mode:** Turn the "Select Switch" knob to choose between "Standard" or "Gentle" wash modes.
6. The machine will begin agitating. Once the timer completes, the washing cycle will stop.

Spin Drying Clothes

1. **Transfer Clothes:** After washing, transfer the wet clothes from the washer tub to the spin dryer tub. Do not overload; the spin dryer can hold up to 5.5 lbs (2.5 kg), which is approximately half of the

washing capacity.

2. **Secure Spin Cap:** Place the spin cap firmly on top of the clothes inside the spin tub. This prevents clothes from being thrown out during high-speed spinning.
3. **Set Spin Timer:** Close the spin tub lid and turn the "Spin Timer" knob to select the desired spin time (up to 5 minutes).
4. The spin dryer will start. Once the timer completes, the spin cycle will stop. Clothes will be damp, not fully dry, and will require air drying or further machine drying.

Draining Water

To drain water from the machine:

- Ensure the drain hose is positioned correctly in a drain.
- Turn the "Wash & Drain Selector Switch" to the "Drain" position. Water will begin to flow out of the drain hose.
- Once all water has drained, return the "Wash & Drain Selector Switch" to the "Wash" position.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your VIVOHOME washing machine:

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** After each use, wipe down the inside of both tubs to remove any residual water or detergent. Leave the lids open for a period to allow the tubs to air dry and prevent mildew.
- **Cleaning the Lint Filter:** The machine is equipped with an upgraded filter to collect lint. Regularly remove and clean this filter to maintain efficient operation. Refer to Figure 2 and 3 for filter location.
- **Drain Hose:** Periodically check the drain hose for blockages or kinks. Ensure it is clean and clear for proper drainage.
- **Storage:** If storing the machine for an extended period, ensure it is completely dry. Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Check power connection; verify power supply; ensure timer knob is turned.
Water does not drain.	Drain hose kinked or blocked; drain selector not set to "Drain".	Straighten drain hose and clear any blockages; turn "Wash & Drain Selector Switch" to "Drain".
Spin tub vibrates excessively or stops.	Clothes unevenly distributed; overloaded spin tub; machine not on a level surface.	Redistribute clothes evenly; reduce load size; ensure machine is on a stable, level surface.

Problem	Possible Cause	Solution
Water leaks.	Inlet or drain hose not securely connected; hose damaged.	Check and tighten all hose connections; inspect hoses for damage and replace if necessary.

If the problem persists after attempting these solutions, please contact customer service for further assistance.

SPECIFICATIONS



Figure 5: Product dimensions and key specifications.

Specification	Value
Brand	VIVOHOME
Model Number	VH354
Material Type	PP + ABS

Specification	Value
Color	White & Black
Voltage	110V/60Hz
Washer Power	300W
Spinner Power	250W
Wash Capacity	3.6kg / 8lbs
Spin Capacity	2.5kg / 5.5lbs
Motor Speed	1300 RPM
Item Weight	24 lbs
Product Dimensions (L*W*H)	23.2" x 14" x 26.6"
Number of Washing Cycles	2
Number of Drying Cycles	1
Controls Type	Knob
Access Location	Top Load

WARRANTY AND SUPPORT

VIVOHOME assures that the item you received is 100% safe and sound. For any defective item, please contact our customer service for a satisfying solution. Please refer to your purchase documentation for specific warranty terms and contact information.

For further assistance or inquiries, please visit the official VIVOHOME store or contact their customer support directly.