

Manuals.plus /

› Wexbi /

› Wexbi W189 Smart Window Cleaning Robot: Instruction Manual

## Wexbi W189

# Wexbi W189 Smart Window Cleaning Robot

Instruction Manual

## INTRODUCTION

---

The Wexbi W189 Smart Window Cleaning Robot is designed to simplify window cleaning for various flat surfaces, both indoors and outdoors. Equipped with a vacuum pump for secure attachment, laser-based navigation, and multiple control options, it offers an efficient and quiet cleaning solution. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your device.

## WHAT'S IN THE BOX

---

Carefully unpack all components and ensure everything listed below is present:

- Wexbi W189 Window Cleaner Robot
- Safety Rope
- Power Adapter
- Cleaning Pads (2 pcs)
- Instruction Manual
- Track Window Washing Brush
- Glass Cleaner Solution



## WEXBI WINDOW CLEANING ROBOT IS A SOLUTION

ROBOT WINDOW CLEANER MAKE IT EASY FOR YOU TO CLEAN WINDOWS OUTDOORS AND INDOORS

THE DEVICE CAN BE USEFUL IN BOTH A DOMESTIC OR COMMERCIAL SETTING.



EASY OF  
USE



FAST AND  
QUIET



ULTRA-THIN  
**8.5** CM



APP  
CONTROL



REMOTE  
CONTROL

Image: The Wexbi W189 robot and its included accessories, including cleaning pads, power adapter, safety rope, and cleaning solutions.



ARTIFICIAL INTELLIGENCE



VACUUM ABSORPTION



BRUSHLESS MOTOR




INTELLIGENT CLEANING




EDGE DETECTING SENSOR

LARGE CLEANING AREA

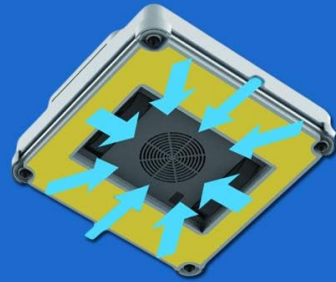

WEXBI CLEANING ROBOT IS HIGHLY SUITABLE FOR APARTMENTS, OFFICES, CAFES AND OTHER KINDS OF SMALL-SCALE BUSINESSES.

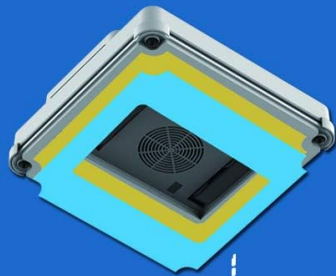

MICRO-FIBER CLEANING CLOTH



Image: A detailed view of the Wexbi W189 robot with key components such as the safety lock, on/off button, power cord, and micro-fiber cleaning cloth areas labeled.



Image: The included track cleaning brush and a can of glass cleaner solution, useful for preparing windows and maintaining tracks.

## SETUP

1. **Charge the Backup Power:** Ensure the robot's internal UPS (Uninterruptible Power Supply) system is fully charged before use. Connect the power adapter to the robot and a power outlet. The indicator light will flash red during initial charging and turn green when ready. This backup power prevents the robot from falling in case of a power cut.
2. **Attach Safety Rope:** Securely plug the safety rope into its designated port on the robot. Attach the other end of the safety rope to a sturdy anchor point capable of holding the robot's weight. This is crucial for safety, especially when cleaning exterior windows or at heights.
3. **Attach Cleaning Pads:** Place the appropriate cleaning pads onto the robot's cleaning surfaces. For initial cleaning of very dirty windows, use the grey pads. For polishing or less soiled windows, use the yellow pads. Ensure the pads do not cover any sensors or the fan opening.
4. **Apply Cleaning Solution:** Lightly spray cleaning solution onto the cleaning pads. Avoid oversaturating the pads, as this can reduce suction and leave streaks. For optimal results, spray only the edges of the pads, or directly onto the window surface in moderation.

# DIRECTIONS FOR USE

## 4 STEPS TO USE



Make sure the backup power is full before it start to work



Lock and connect the power cord, lock the nut of the extension cord



Tie up the safety rope



Press start

Image: A visual guide showing the four steps for setting up the Wexbi W189: connecting the power, attaching the safety rope, and pressing start.

## OPERATING INSTRUCTIONS

1. **Power On:** Press and hold the power button on the robot for a few seconds until it powers on and the indicator light turns blue.
2. **Place on Window:** Carefully place the robot onto the window surface. Ensure it adheres securely before releasing your hand. The robot's vacuum pump will create suction to hold it in place.
3. **Select Cleaning Mode:** Use the remote control or the mobile app to select your desired cleaning mode. The robot features intelligent planning for efficient cleaning routes, detecting edges and avoiding obstacles.
4. **Monitor Progress:** The robot will automatically clean the designated area. Monitor its progress and ensure the safety rope remains secure.
5. **Finish Cleaning:** Once cleaning is complete, the robot will return to its starting position and emit an alert. Press the power button to turn it off and carefully remove it from the window.

WHEN YOU ARE RESTING, WEXBI M189 CLEANING ROBOT IS WORKING FOR YOU!



Image: The Wexbi W189 robot actively cleaning an indoor window, demonstrating its operation.

## THIS ROBOT CLEANS WINDOWS QUICKLY AND SILENTLY



THANKS FOR BEING OUR CUSTOMER AND YOU WILL NEVER REGRET THIS PURCHASE, MAKING YOUR LIFE SO MUCH EASIER!

Image: The Wexbi W189 robot cleaning an outdoor window, showcasing its ability to handle external surfaces.

## MAINTENANCE

- **Cleaning Pads:** The cleaning pads are machine washable. After each use, remove the pads from the robot and wash them. Ensure they are completely dry before reattaching them to the robot for future use. Wet pads can affect the robot's suction and performance.
- **Robot Body:** Wipe the robot's body with a dry, soft cloth to remove any dust or residue. Avoid using abrasive cleaners or solvents.
- **Sensors and Wheels:** Periodically check and clean the edge detection sensors and wheels to ensure optimal navigation and performance.

## TROUBLESHOOTING

- **Robot not adhering or falling:**
  - Ensure the power cord is securely connected and the backup battery is charged.
  - Check if the cleaning pads are too wet. Over-saturated pads can reduce suction. Ensure pads are dry or only lightly dampened.

- Verify the window surface is at least 3 mm thick.
  - If the window is extremely dirty, the robot may struggle to maintain suction. Pre-clean heavily soiled areas if necessary.
- **Streaks left on window:**
    - The cleaning pads might be dirty. Replace with clean pads.
    - Too much cleaning solution may have been applied. Use less solution.
    - The window may require a second pass with fresh, dry pads for polishing.
- **Robot not moving or stuck:**
    - Check for obstacles on the window surface.
    - Ensure the power cord is not tangled or obstructing movement.
    - The smallest area the robot can clean is 45 x 45 cm. Ensure the window size meets this requirement.

## SPECIFICATIONS

Feature	Detail
Brand	Wexbi
Model Name	W189
Surface Recommendation	Glass surface
Special Feature	Corded
Color	White
Controller Type	Remote Control + APP Control
Power Source	Corded Electric
Batteries Included	Yes
Item Weight	3.3 Pounds
Minimum Cleaning Area	45 x 45 cm
Power Cord & Safety Rope Length	5 meters (extendable)

## WARRANTY AND SUPPORT

The Wexbi W189 Smart Window Cleaning Robot comes with a **2-year warranty** from the date of purchase. For warranty claims, technical support, or any inquiries, please refer to the contact information provided in your product packaging or visit the official Wexbi website.