

Manuals.plus /
 > UBay /
 > AH59-02547B Remote Control User Manual

UBay UBay AH59-02547B

AH59-02547B Remote Control User Manual

Brand: UBay

PRODUCT OVERVIEW

This manual provides instructions for the UBay AH59-02547B replacement remote control, designed for various Samsung Sound Bar Home Theater Systems. This remote control is a direct replacement and requires no programming or pairing. Simply install batteries to begin operation.





Image: Front view of the AH59-02547B remote control, showing all buttons clearly labeled. The remote is black with grey and red buttons.

SETUP

Battery Installation

The AH59-02547B remote control operates on two AAA 1.5V Alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA 1.5V Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible Samsung Sound Bar models.

OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible Samsung Sound Bar Home Theater Systems. Point the remote directly at the sound bar's infrared receiver for optimal performance.



Image: Top-down view of the AH59-02547B remote control, highlighting the arrangement and labels of all control buttons.

Button Functions

Button	Function
POWER (Red)	Turns the Samsung Sound Bar system on or off.
TV POWER (Red)	Turns the connected TV on or off.
SOURCE	Selects the input source for the sound bar.
TV SOURCE	Selects the input source for the connected TV.
VOL +/-	Adjusts the master volume of the sound bar.
MUTE	Mutes or unmutes the sound.
TV VOL +/-	Adjusts the volume of the connected TV.
TV CH +/-	Changes channels on the connected TV.
S/W LEVEL	Adjusts the subwoofer level.
SOUND EFFECT	Cycles through available sound effects/modes.
SMART VOLUME	Activates or deactivates the Smart Volume feature.
REPEAT	Repeats playback (functionality depends on source).
AnyNet+	Activates Samsung's AnyNet+ (HDMI-CEC) feature.
SoundShare	Connects to compatible Samsung TVs wirelessly.
AUDIO SYNC	Adjusts audio delay to synchronize with video.
TV MUTE	Mutes or unmutes the connected TV.
TV INFO	Displays information on the connected TV.
TV PRE-CH	Returns to the previously viewed TV channel.
DIMMER	Adjusts the brightness of the sound bar's display.
3D SOUND PLUS	Activates or deactivates the 3D Sound Plus feature.

Button	Function
DRC	Activates or deactivates Dynamic Range Control.
Navigation Buttons (Up, Down, Left, Right, Enter)	Used for menu navigation and selection on compatible devices.
Playback Controls (Play/Pause, Stop, Skip Forward, Skip Backward)	Controls media playback when connected to a compatible source.

Compatible Models

This remote control is compatible with the following Samsung Sound Bar models:

- AH68-02644D-00
- HW-F450
- HW-F450ZA
- HW-FM45
- HW-FM45C
- PS-WF450
- HWF450
- HWF450ZA
- HWFM45
- HWFM45C
- PSWF450
- AH6802644D00
- HW-F450/ZA
- HW-F355

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA 1.5V Alkaline batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are correctly installed with proper polarity (+/-).
 - Replace old batteries with new AAA 1.5V Alkaline batteries.
 - Ensure there are no obstructions between the remote control and the sound bar's infrared receiver.
 - Confirm you are within the effective operating range (typically up to 20 feet) and pointing the remote directly at the sound bar.
- **Specific Buttons Not Working:**

- Check if the button is stuck or has debris underneath it.
 - Verify that the sound bar model is listed as compatible in the "Compatible Models" section. Some buttons may have specific functions only for certain sound bar models.
- **Interference:**
- Strong light sources, such as direct sunlight or fluorescent lighting, can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.

If the issue persists after following these steps, the remote control may require replacement.

SPECIFICATIONS

Feature	Detail
Model Number	UBay AH59-02547B
Product Dimensions	5.5 x 2 x 0.7 inches
Item Weight	1.76 ounces
Connectivity Technology	Infrared
Compatible Devices	Samsung Sound Bar Home Theater Systems
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)

WARRANTY AND SUPPORT

Information regarding product warranty and customer support for the UBay AH59-02547B remote control was not provided in the available product data. For specific warranty details or support inquiries, please refer to the original purchase documentation or contact the seller directly.

© 2023 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07YCWML4B>

More documents and user manuals: <https://manuals.plus/>