

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [DASH](#) /

> [DASH Everyday Nonstick Electric Griddle User Manual \(Model: B07YD3LS5D\)](#)

## DASH B07YD3LS5D

# DASH Everyday Nonstick Electric Griddle User Manual

Brand: DASH | Model: B07YD3LS5D

## INTRODUCTION

Thank you for choosing the DASH Everyday Nonstick Electric Griddle. This versatile appliance is designed to make cooking a variety of meals, from breakfast to dinner, quick and convenient. Its large non-stick surface and precise temperature control ensure consistent results for your favorite dishes. Please read this manual thoroughly before use to ensure safe and optimal operation.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PARTS AND FEATURES

The DASH Everyday Nonstick Electric Griddle is designed for ease of use and efficient cooking. Familiarize yourself with its components:

- **Non-Stick Cooking Surface:** A spacious 20 x 10.5 inch PFOA-free surface for cooking multiple items simultaneously.
- **Temperature Control Probe:** Detachable probe with a dial for precise heat adjustment.
- **Drip Tray:** A removable tray to collect excess grease and oil, simplifying cleanup.
- **Cool-Touch Handles:** For safe handling during and after cooking.
- **Anti-Slip Feet:** Ensures stability on your countertop.



Image: The griddle's non-stick cooking surface, the detachable temperature control probe with its dial, and the pull-out drip tray are highlighted.

## BEFORE FIRST USE

1. Remove all packaging materials and stickers from the griddle.
2. Wipe the non-stick cooking surface with a damp cloth or sponge.
3. Wash the drip tray in warm, soapy water.
4. Ensure all parts are completely dry before assembly and use.

## OPERATING YOUR GRIDDLE

The griddle is simple to operate, offering precise temperature control for various cooking needs.

1. Place the griddle on a stable, heat-resistant surface.
2. Insert the temperature control probe firmly into the receptacle on the side of the griddle.
3. Plug the power cord into a 120V AC electrical outlet.
4. Turn the temperature control dial to your desired heat setting. The indicator light will illuminate, signaling that the griddle is heating.
5. Allow the griddle to preheat for a few minutes until the indicator light turns off, or for the recommended time for your recipe.
6. Once preheated, place food directly onto the non-stick cooking surface.
7. After cooking, turn the temperature dial to the "OFF" position and unplug the griddle. Allow it to cool completely before cleaning.

### Temperature Settings Guide

Dial Number	Approx. Cooking Temp
Warm	Keep Warm
1	200°F (93°C)
2	250°F (121°C)
3	300°F (149°C)
4	350°F (177°C)
5	400°F (204°C)

# EXTRA LARGE COOKING SURFACE

Cook your whole meal  
on just one griddle



Image: The griddle in use, cooking eggs, bacon, and pancakes simultaneously, demonstrating its large cooking surface.

Your browser does not support the video tag.

Video: An official product video demonstrating the DASH Everyday Griddle's features and ease of use, including cooking various meals.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your griddle and ensure optimal performance.

1. Always unplug the griddle and allow it to cool completely before cleaning.
2. Remove the temperature control probe. Do not immerse the probe in water or any other liquid. Wipe it clean with a damp cloth.
3. Slide out the drip tray and empty any collected grease. Wash the drip tray in warm, soapy water.
4. The non-stick cooking plate is removable and dishwasher safe. You can also hand wash it with warm, soapy water and a non-abrasive sponge.
5. Wipe the exterior of the griddle base with a damp cloth. Do not immerse the base in water.
6. Ensure all parts are thoroughly dry before storing.



# EVERYDAY GRIDDLE

*Delicious meals on your countertop!*



Image: The griddle's non-stick surface and removable components, emphasizing its easy-to-clean design.

## TROUBLESHOOTING

If you encounter any issues with your DASH Everyday Nonstick Electric Griddle, please refer to the following common problems and solutions:

- **Griddle not heating:** Ensure the temperature control probe is fully inserted and the power cord is securely plugged into a working outlet. Check if the dial is set to an active temperature.
- **Food sticking to the surface:** Although the griddle is non-stick, a small amount of cooking oil or butter can be used for certain foods or to enhance flavor. Ensure the griddle is properly preheated.
- **Uneven heating:** While designed for even heat, slight variations can occur. Rotate food as needed. Ensure the griddle is on a flat, stable surface.
- **Indicator light not working:** If the griddle is heating correctly but the light is off, it may indicate the griddle has reached the set temperature and is maintaining it. If no heat is present, check power connections.

## PRODUCT SPECIFICATIONS

- **Brand:** DASH
- **Model:** B07YD3LS5D
- **Color:** Aqua
- **Material:** Non-stick, Stainless Steel/Plastic (PFOA Free)
- **Product Dimensions:** 10.5"D x 20"W x 2.9"H
- **Cooking Surface:** Approximately 19.75" x 9.5"
- **Wattage:** 1500 Watts
- **Voltage:** 120 Volts
- **Item Weight:** 6.14 Pounds

## WARRANTY AND SUPPORT

---

The DASH Everyday Nonstick Electric Griddle is backed by a 1-year manufacturer warranty. For warranty claims, troubleshooting assistance, or general inquiries, please refer to the contact information provided in the product manual included with your purchase. DASH is a U.S. based company committed to providing excellent customer support.

For additional resources, visit the official DASH Store: [DASH Store on Amazon](#)