

Ninja AOP200

Ninja Foodi Glass Lid Instruction Manual

Model: AOP200

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Ninja Foodi Glass Lid. Designed for convenience and versatility, this lid allows for clear visibility during various cooking functions with your Ninja Foodi Pressure Cooker.

Compatibility: This glass lid is compatible with all Ninja Foodi Pressure Cooker models OP100, OP300, OP400, and FD400.

KEY FEATURES

- **Tempered Glass Construction:** Provides clear visibility of food during cooking without lifting the lid.
- **Versatile Use:** Ideal for use with Sear/Saute, Slow Cook, Steam, and Yogurt functions.
- **Cool-Touch Ergonomic Handle:** Designed for comfortable and safe handling.
- **Steam Vent:** Helps to release excess steam, preventing pressure build-up and ensuring safe operation during non-pressure cooking modes.
- **Dishwasher-Safe:** For easy and convenient cleaning.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the glass lid from its packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash the glass lid with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the glass lid directly onto the inner pot of your compatible Ninja Foodi Pressure Cooker. Ensure it sits securely on the rim of the pot.



Image: The Ninja Foodi Glass Lid, Model AOP200, shown placed on the inner pot of a Ninja Foodi appliance. The clear glass allows visibility into the pot, and the black cool-touch handle is visible at the top.

OPERATING INSTRUCTIONS

The Ninja Foodi Glass Lid is designed for non-pressure cooking functions. It is not intended for use during pressure cooking or air crisping functions.

- **Sear/Saute:** Use the glass lid to minimize splatter and retain heat while searing or sautéing ingredients. The steam vent will allow excess moisture to escape.
- **Slow Cook:** When using the slow cook function, place the glass lid on the inner pot. The clear glass allows you to monitor the cooking process without disturbing the slow cooking environment.
- **Steam:** For steaming, place the glass lid on the inner pot after adding water and your ingredients on the steaming rack. The lid helps to trap steam for efficient cooking.
- **Yogurt:** During the yogurt function, the glass lid helps maintain a consistent temperature for optimal fermentation.

Important: Always ensure the lid is properly seated on the inner pot before starting any cooking function. Do not use this lid for pressure cooking; always use the dedicated pressure cooking lid for those functions.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your Ninja Foodi Glass Lid.

- **Dishwasher Safe:** The glass lid is dishwasher safe for convenient cleaning. Place it on the top rack for best results.
- **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly to remove all soap residue.

- **Drying:** Dry the lid completely before storing to prevent water spots or mineral buildup.
- **Storage:** Store the lid in a dry place, away from extreme temperatures.

TROUBLESHOOTING

- **Lid Not Seating Properly:** Ensure the inner pot is correctly placed in the cooker base and that there are no obstructions on the rim of the inner pot.
- **Excessive Steam Escaping:** A small amount of steam is normal through the steam vent. If steam is escaping from around the rim, ensure the lid is properly aligned and seated.
- **Cloudiness/Stains on Glass:** This may be due to mineral deposits from water. Try cleaning with a mixture of vinegar and water, then rinse thoroughly.

SPECIFICATIONS

Attribute	Detail
Model Number	AOP200
Material	Tempered Glass, Plastic (Handle), Silicone, Stainless Steel (Rim)
Color	Glass/Black Handle
Shape	Round
Product Dimensions	10.71 x 3.15 x 10.63 inches
Item Weight	1.8 pounds
Dishwasher Safe	Yes
Microwaveable	No
Manufacturer	SharkNinja

WARRANTY INFORMATION

Ninja products are manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your original Ninja Foodi appliance or visit the official Ninja website. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product registration, or to purchase additional accessories, please visit the official Ninja website or contact Ninja customer service. Contact details can typically be found in the main Ninja Foodi appliance manual or on the Ninja website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question