

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola E202 Digital Cordless Phone User Manual

Motorola E202

Motorola E202 Digital Cordless Phone User Manual

Model: E202

INTRODUCTION

The Motorola E202 is a digital cordless phone designed for ease of use and practicality. It features a bright backlit display, speakerphone functionality, and a "Do Not Disturb" mode. This model incorporates essential calling features, including advanced call blocking technology that allows you to block up to 10 unwanted numbers. This manual provides detailed instructions for setting up, operating, and maintaining your Motorola E202 cordless phone.

PACKAGE CONTENTS

Before you begin, please ensure all items listed below are present in your package:

- Cordless Handset and Base Unit
- Additional Cordless Handset and Charger
- Power Adapter (x2)
- Rechargeable Ni-MH Batteries (x4)
- Telephone Line Cord
- User Manual (this document)



Image: The Motorola E202 Digital Cordless Phone, showing the handset resting in its base unit.

SETUP

1. **Install Batteries:** Open the battery compartment cover on the back of each handset. Insert the two supplied Ni-MH rechargeable batteries, observing the correct polarity (+ and -). Close the battery compartment cover securely.



Image: Side view of the Motorola E202 handset, showing the battery compartment area.

2. Connect Base Unit:

- Connect one end of the telephone line cord to the TEL LINE socket on the back of the main base unit.
- Connect the other end of the telephone line cord to your telephone wall socket.
- Connect one power adapter to the POWER socket on the main base unit and plug the other end into a mains power outlet.



Image: Rear view of the Motorola E202 base unit, showing the telephone line and power input ports.

3. **Connect Additional Charger:** Connect the second power adapter to the POWER socket on the additional charger unit and plug the other end into a mains power outlet.
4. **Charge Handsets:** Place each handset on its respective base/charger unit. The handsets will emit a short beep, and the display will indicate charging. Allow the handsets to charge for at least 16 hours before first use to ensure optimal battery performance.



Image: Front view of the Motorola E202 handset, highlighting the display and keypad.

Making and Receiving Calls

- **Make a Call:** Press the **Green Call button** (looks like a phone receiver), then dial the number. Alternatively, dial the number first and then press the **Green Call button**.
- **Receive a Call:** When the phone rings, press the **Green Call button**.
- **End a Call:** Press the **Red End Call button** (looks like a phone receiver with a line through it) or place the handset back on the base/charger.
- **Speakerphone:** During a call, press the **Speakerphone button** (looks like a speaker icon) to activate or deactivate the speakerphone.

Phonebook

- The phonebook can store up to 50 names and numbers.
- To access the phonebook, press the **Up/Down navigation buttons** when the handset is idle.
- Follow the on-screen prompts to add, edit, or delete entries.

Call Blocking

- The Motorola E202 features advanced call blocking technology, allowing you to block up to 10 specific numbers.
- To block a number, navigate to the Call Blocking menu via the handset's menu options.
- You can also activate the "Do Not Disturb" function by pressing the dedicated **"Do Not Disturb" button** (looks like a crescent moon).

Caller ID and Redial

- **Caller ID:** The handset display shows the caller's name and number (if available and subscribed to Caller ID service). The Caller ID list stores up to 20 names and numbers.
- **Redial:** The phone automatically stores the last 10 dialed numbers. Press the **Redial button** (looks like an 'R' or a curved arrow) to access and redial these numbers.

MAINTENANCE

To ensure the longevity and optimal performance of your Motorola E202 cordless phone, follow these maintenance guidelines:

- **Cleaning:** Wipe the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable Ni-MH batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Placement:** Keep the phone away from heat sources, direct sunlight, and moisture. Avoid placing it near other electrical appliances that may cause interference.
- **Avoid Drops:** Handle the handset with care to prevent damage from accidental drops.

TROUBLESHOOTING

If you encounter issues with your Motorola E202, refer to the following common problems and solutions:

Problem	Solution
No dial tone.	• Ensure the telephone line cord is securely connected to both the base unit and the wall socket. • Check if the power adapter is properly connected to the base unit and a working power outlet. • Verify that the handset batteries are charged.
Cannot make or receive calls.	• Check the telephone line connection as described above. • Ensure the handset is within range of the base unit. • Confirm that the "Do Not Disturb" function is not active.

Problem	Solution
Poor sound quality or interference.	• Move the handset closer to the base unit. • Relocate the base unit away from other electrical appliances (e.g., microwaves, Wi-Fi routers) that may cause interference. • Check for any physical obstructions between the handset and base.
Handset display is blank.	• Place the handset on the charger to ensure batteries are charged. • Check if the batteries are correctly installed.

SPECIFICATIONS

Feature	Detail
Brand	Motorola
Model	E202
Color	Black
Phone Type	Cordless Phone
Number of Handsets	2 (Dual Cordless Phone)
Batteries Required	2 AAA Ni-MH rechargeable batteries per handset (included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Dimensions (LxWxH)	20 x 30 x 20 cm (approximate, likely packaging dimensions)
Answering System Type	Digital
Compatible Devices	Other cordless devices of the same model, automatic answering, fax
Multi-line Operation	Yes
Caller ID	Yes (Caller ID list with 20 names and numbers)
Phonebook Capacity	50 names and numbers
Call Blocking	Blocks up to 10 numbers, "Do Not Disturb" function
Redial Memory	Last 10 numbers
Talk Time	Up to 10 hours
Standby Time	Up to 200 hours

WARRANTY

The Motorola E202 Digital Cordless Phone comes with a **24-month warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

SUPPORT

For further assistance, technical support, or to report a problem not covered in this manual, please refer to the official Motorola support channels. You can often find additional resources, FAQs, and contact information on the official Motorola website. A PDF version of this user manual is also available for download from the product's Amazon page or Motorola's support site.

For the most up-to-date support information, please visit: www.motorola.com/support