

[Manuals.plus](#) /

> [Nostalgia](#) /

> Nostalgia 3-in-1 Breakfast Station User Manual

Nostalgia BST3AQ

Nostalgia 3-in-1 Breakfast Station User Manual

Model: BST3AQ | Brand: Nostalgia

1. INTRODUCTION

Welcome to the Nostalgia 3-in-1 Breakfast Station user manual. This versatile appliance combines a coffee maker, a non-stick griddle, and a toaster oven into one compact unit, designed to simplify your morning routine. Please read these instructions carefully before first use to ensure safe and optimal performance.



The Nostalgia 3-in-1 Breakfast Station, ready for use.

2. INCLUDED COMPONENTS

Your Nostalgia 3-in-1 Breakfast Station comes with the following parts:

- Breakfast station main unit
- Coffee carafe (glass)
- Coffee scoop
- Reusable coffee filter
- Griddle lid (glass)
- Oven tray
- Wire rack
- Crumb tray



Key components of the 3-in-1 Breakfast Station.

3. SETUP

Before using your breakfast station for the first time, follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wipe down the exterior of the main unit with a damp cloth.
3. Wash the coffee carafe, reusable coffee filter, griddle lid, oven tray, wire rack, and crumb tray in warm, soapy water. Rinse thoroughly and dry completely.
4. Place the breakfast station on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
5. Insert the crumb tray into the bottom of the toaster oven section.
6. Plug the AC adapter into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

The Nostalgia 3-in-1 Breakfast Station allows you to prepare various breakfast items simultaneously.

4.1 Coffee Maker Operation

1. Open the lid of the coffee maker water reservoir.
2. Fill the coffee carafe with the desired amount of water (up to 6 cups) and pour it into the water reservoir.
3. Place the reusable coffee filter into the filter basket. Add your desired amount of ground coffee using the provided scoop.
4. Close the coffee maker lid and place the empty carafe on the warming plate.
5. Press the 'COFFEE' button on the control panel to begin brewing. The indicator light will illuminate.
6. Once brewing is complete, the coffee maker will keep the coffee warm.

BREAKFAST MADE EASY

1 easy-to-use
coffee maker



brew up to 6
4oz cups of
coffee at once

2 multi-use
toaster oven



toast bread, cook
a personal pizza,
even bake your
favorite cookies

3 non-stick
griddle



fry eggs, bacon,
sausage, and other
breakfast foods

Prepare coffee, toast, and griddle items simultaneously.

4.2 Griddle Operation

1. Ensure the non-stick griddle is properly seated on top of the toaster oven section.
2. To activate the griddle, turn the top control knob to 'GRILL'. The 'GRILL/OVEN' indicator light will turn on.
3. Allow the griddle to preheat for a few minutes.
4. Place food items such as eggs, bacon, or pancakes directly onto the griddle surface.
5. Use the glass lid to cover the griddle while cooking to retain heat and minimize splatter.
6. After cooking, turn the control knob to 'OVEN OFF' to turn off the griddle.

4.3 Toaster Oven Operation

1. Place food items (e.g., bread slices, small pizzas, pastries) on the wire rack or oven tray inside the toaster oven. The oven can accommodate up to four slices of bread.
2. Close the toaster oven door.
3. Select the desired function using the top control knob: 'TOAST/BAKE' for general baking and toasting, or 'WARM/HEAT' to keep food warm.

4. Set the cooking time using the bottom timer knob. For toasting, adjust the knob to your desired darkness (Light, Medium, Dark). The 'GRILL/OVEN' indicator light will turn on.
5. The oven will automatically turn off when the timer reaches 'OFF'.

Your browser does not support the video tag.

Official product video demonstrating the Nostalgia 3-in-1 Breakfast Station's features and operation.

5. MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your appliance.

- Always unplug the unit and allow it to cool completely before cleaning.
- **Griddle:** The non-stick griddle is removable for easy cleaning. Wash with warm, soapy water and a non-abrasive sponge.
- **Crumb Tray:** Slide out the crumb tray from the bottom of the toaster oven. Discard crumbs and wash the tray with warm, soapy water.
- **Oven Tray & Wire Rack:** Wash these components with warm, soapy water.
- **Coffee Carafe & Filter:** Wash with warm, soapy water. The reusable filter can be rinsed clean.
- **Exterior:** Wipe the exterior of the unit with a damp cloth. Do not immerse the main unit in water.
- Do not use abrasive cleaners or scouring pads, as they may damage the non-stick surfaces or finish.



The removable crumb tray simplifies cleaning.

6. TROUBLESHOOTING

If you experience issues with your Nostalgia 3-in-1 Breakfast Station, refer to the following common solutions:

- **Unit does not power on:** Ensure the unit is securely plugged into a working electrical outlet. Check if the power button is pressed and the indicator light is on.
- **Coffee is not brewing:** Verify that water has been added to the reservoir and the carafe is correctly placed on the warming plate. Ensure the 'COFFEE' button is activated.
- **Griddle is not heating:** Confirm the control knob is set to 'GRILL' and the 'GRILL/OVEN' indicator light is on. Allow sufficient time for preheating.
- **Toaster oven is not heating/toasting:** Check that the function knob is set correctly ('TOAST/BAKE' or 'WARM/HEAT') and the timer knob is set to a desired time.
- **Food is not cooking evenly:** Ensure food is spread evenly on the griddle or oven tray. For the griddle,

ensure the unit is on a level surface.

For further assistance, please contact Nostalgia customer support or refer to the full user manual.

7. SPECIFICATIONS

Feature	Detail
Brand	Nostalgia
Model Name	Retro 3-in-1 Family Size Electric (BST3AQ)
Color	Aqua
Product Dimensions	11.5"D x 19.25"W x 12"H
Item Weight	13.97 pounds
Coffee Maker Capacity	6 cups (approx. 3 cups of 8oz coffee)
Toaster Oven Capacity	Up to 4 slices of bread
Control Type	Knob Control
Power Source	AC adapter
UPC	082677001238

8. WARRANTY AND SUPPORT

Nostalgia products are designed for reliability and performance. For detailed warranty information, please refer to the documentation included with your purchase or visit the official Nostalgia website.

For comprehensive instructions and further support, you can download the official User Manual in PDF format:

[Download User Manual
\(PDF\)](#)

You can also visit the [Nostalgia Store on Amazon](#) for more products and information.