Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- WAP /
- > WAP EXTREME TURBO 2800 High-Pressure Washer User Manual

WAP EXTREME TURBO 2800

WAP EXTREME TURBO 2800 High-Pressure Washer User Manual

Model: EXTREME TURBO 2800 | Brand: WAP

1. Introduction

The WAP Extreme Turbo 2800 high-pressure washer is designed for efficient and rapid cleaning of heavy and deep dirt across large areas. It offers significant water savings, up to 80% compared to a common hose. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your WAP Extreme Turbo 2800 high-pressure washer.

Important Safety Information: Always read the instruction manual thoroughly before operating the appliance to ensure safe use and prevent injury or damage.



Figure 1.1: WAP Extreme Turbo 2800 High-Pressure Washer and its main accessories.

2. PRODUCT FEATURES

The WAP Extreme Turbo 2800 is engineered with advanced features to provide powerful and convenient cleaning:

- **Powerful Performance:** Equipped with a 1900W induction motor and a maximum pressure of 2450 PSI, it is excellent for removing heavy and deep dirt quickly and efficiently.
- Water Efficiency: Reduces water consumption by up to 80% compared to a common hose, providing effective and sustainable cleaning.
- **Versatile Nozzles:** Includes a turbo nozzle for intense cleaning of difficult dirt and an adjustable nozzle (fan or concentrated), offering versatility for different cleaning tasks.
- **Total Stop System:** Automatic water and power cut-off when the trigger is released helps save energy and extends the motor's lifespan.
- **Durable Construction:** Designed with stainless steel pistons and an induction motor for greater longevity and resistance to continuous use.
- Integrated Detergent Applicator: Built-in detergent applicator with control on the lance for easy

application of cleaning solutions.

• **Mobility and Storage:** Features a handle and wheels for easy transport, and an accessory holder to keep components organized.





Figure 2.1: Front view of the high-pressure washer.





Figure 2.2: Side view highlighting wheels and handle.

3. SETUP AND ASSEMBLY

Follow these steps to set up your WAP Extreme Turbo 2800 high-pressure washer:

- 1. **Unpacking:** Carefully remove all components from the packaging. Ensure all accessories listed in Section 7 are present.
- 2. **Handle Assembly:** Attach the handle to the main unit if it is not pre-assembled. Ensure it clicks securely into place.
- 3. **Accessory Holder:** Utilize the integrated accessory holder to store the high-pressure gun, lances, and other accessories when not in use. This optimizes machine movement and storage.
- 4. **Water Inlet Connection:** Connect a garden hose to the water inlet of the high-pressure washer. Use the quick connect adapter and ensure the water filter is properly installed to prevent debris from entering the pump.
- 5. **High-Pressure Hose Connection:** Connect the high-pressure hose to the outlet on the machine and to the high-pressure gun. Ensure all connections are tight to prevent leaks.
- 6. Power Connection: Plug the electric cable into a suitable grounded power outlet (127V).



Figure 3.1: Integrated handle and hose storage.





Figure 3.2: Convenient accessory storage.



Figure 3.3: Quick connect water inlet and detergent control knob.





Figure 3.4: Quick connect adapter for easy hose attachment.





Figure 3.5: Water filter to protect the pump from impurities.

4. OPERATING INSTRUCTIONS

Before operating, ensure all connections are secure and the water supply is turned on.

- 1. **Power On:** Turn on the main power switch located on the unit.
- 2. **Prime the Pump:** Squeeze the trigger on the high-pressure gun until a steady stream of water emerges, indicating that air has been purged from the system.
- 3. **Select Nozzle:** Choose the appropriate nozzle for your cleaning task. The adjustable nozzle allows for a fan spray or a concentrated stream. For heavy-duty cleaning, attach the turbo nozzle.
- 4. **Apply Detergent (Optional):** If using detergent, fill the built-in detergent tank. Adjust the detergent flow control on the lance as needed.
- 5. Begin Cleaning: Aim the nozzle at the surface to be cleaned, maintaining a safe distance. Squeeze the

- trigger to start the high-pressure spray.
- 6. **Total Stop System:** When you release the trigger, the Total Stop System will automatically shut off the motor and water flow, conserving energy and reducing wear.
- 7. **Gun Safety Lock:** Always engage the safety lock on the high-pressure gun when not actively spraying to prevent accidental operation.



Figure 4.1: High-pressure gun with integrated safety lock.



Figure 4.2: Lance with adjustable nozzle for various spray patterns.



Figure 4.3: Turbo nozzle for concentrated, powerful cleaning.



Figure 4.4: Built-in detergent tank for easy soap application.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your high-pressure washer:

- After Each Use: Disconnect the water supply and power. Squeeze the gun trigger to release any remaining pressure. Drain all water from the pump and hose to prevent freezing in cold weather.
- Clean Nozzles: Regularly check and clean the nozzle openings to remove any blockages that may affect spray pattern or pressure.
- Water Filter: Periodically inspect and clean the water inlet filter to ensure a steady flow of clean water to the pump.
- **Detergent Tank:** Rinse the detergent tank thoroughly after each use with detergent to prevent residue buildup.
- **Storage:** Store the unit in a dry, frost-free area. Utilize the integrated accessory and cable holders for neat storage.
- Stainless Steel Pistons: The unit is equipped with durable stainless steel pistons, requiring minimal internal maintenance.

6. TROUBLESHOOTING COMMON ISSUES

This section provides solutions to common problems you might encounter:

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power switch off; Thermal overload.	Check power connection; Turn power switch on; Allow unit to cool down.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump; Leaking connections.	Ensure adequate water flow; Clean nozzle; Prime pump; Tighten connections.
Motor runs continuously	Air in pump; Leaking connections; Bypass valve issue.	Prime pump; Check and tighten all connections; Contact support if issue persists.
Pulsating pressure	Air in pump; Clogged nozzle; Water supply restriction.	Prime pump; Clean nozzle; Check water inlet filter and hose for kinks.

If the problem persists after attempting these solutions, please contact WAP customer support.

7. TECHNICAL SPECIFICATIONS

Specification	Value
Voltage	127V
Color	Yellow with Black
Electric Power	1900W
Maximum Pressure	2450 PSI
Frequency	60 Hz
Motor Type	Induction
Flow Rate	360 L/h
Insulation Class	III
Electric Cable Length	5 M
High-Pressure Hose Length	5 M (Steel Braided)
Net Weight	15.8 kg
Gross Weight	17 kg
Product Dimensions (LxWxH)	29 x 30 x 76 cm
Material Type	Polymers and Metals
Certification	HOUS 2363-001-19



Figure 7.1: Product certification label.

8. INCLUDED ACCESSORIES

Your WAP Extreme Turbo 2800 high-pressure washer comes with the following accessories:

- 1 x High-Pressure Gun with Quick Connection
- 1 x Lance with Adjustable Nozzle (concentrated, fan, and shampoo spray options)
- 1 x Turbo Nozzle with Quick Connection
- 1 x 5m Steel Braided High-Pressure Hose
- 1 x Built-in Detergent Applicator
- 1 x Quick Connect Adapter
- 1 x Water Filter



Figure 8.1: 5-meter steel braided high-pressure hose.

 
9. WARRANTY AND SUPPORT

The WAP Extreme Turbo 2800 high-pressure washer comes with a 1-year warranty, which includes 3 months of legal warranty and an additional 9 months of special warranty granted by the manufacturer.

For warranty claims, technical assistance, or any further inquiries, please contact WAP customer support through their official channels. Keep your proof of purchase for warranty validation.

© 2024 WAP. All rights reserved.

Related Documents - EXTREME TURBO 2800

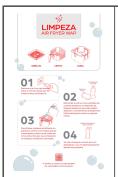

WAP Air Fryer Cleaning Guide

Comprehensive instructions for cleaning your WAP Air Fryer, covering daily maintenance, stubborn residue removal, and dishwasher compatibility for key components.



WAP LENS 100 Smart Camera Quick Installation Guide

Quickly install your WAP LENS 100 Smart Camera with this step-by-step guide. Learn how to mount and adjust your security camera for optimal viewing.





Manual de Instruções Lixadeira Roto Orbital WAP WF LR01

Guia completo para a Lixadeira Roto Orbital WAP WF LR01, cobrindo operação segura, manutenção e dicas de uso para garantir o melhor desempenho e longevidade do equipamento.



WAP BAK3 NN8F IN Household Oven Datasheet

Technical specifications for the WAP BAK3 NN8F IN household oven, including energy efficiency index, energy efficiency class, energy consumption, number of oven interior compartments, heat source, and net volume.

