

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LAX-MAX](#) /

› [LAX-MAX Bluetooth 4X4 Speaker System User Manual - Model LI-S20197BT](#)

LAX-MAX LI-S20197BT

LAX-MAX Bluetooth 4X4 Speaker System User Manual

Model: LI-S20197BT

Brand: LAX-MAX

INTRODUCTION

Thank you for choosing the LAX-MAX Bluetooth 4X4 Speaker System. This manual provides essential information for the safe and optimal operation of your new speaker. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble, repair, or modify the unit yourself. Contact qualified service personnel for assistance.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the provided USB cable for charging.
- Ensure proper ventilation when operating the speaker.

PACKAGE CONTENTS

- LAX-MAX Bluetooth 4X4 Speaker System
- USB Charging Cable

PRODUCT OVERVIEW

The LAX-MAX Bluetooth 4X4 Speaker System features a vertical tower design with four integrated 4-inch woofers, providing robust audio output. It includes a convenient carry handle for portability and LED lights for visual enhancement. The main control panel is located at the top of the unit.



Figure 1: LAX-MAX Bluetooth 4X4 Speaker System, front view. This image shows the LAX-MAX Bluetooth 4X4 Speaker System from the front, highlighting its four speaker drivers with blue accents and the top control panel.



Figure 2: Control Panel and Carry Handle. A close-up view of the LAX-MAX Bluetooth 4X4 Speaker System's top control panel, showing the USB port, SD card slot, mode buttons, volume/track controls, and the integrated carry handle.

Control Panel Features:

- **OFF/ON:** Power switch for the unit.
- **V-/Previous:** Short press for previous track/station, long press for volume down.
- **Play/Pause:** Play or pause audio playback.
- **V+/Next:** Short press for next track/station, long press for volume up.
- **MODE:** Switches between Bluetooth, FM Radio, USB, and SD card modes.
- **LED/POWER:** Controls LED lights (short press) and may indicate power status.
- **USB Port:** For USB flash drive playback.

- **SD Card Slot:** For SD card playback.
- **IN (Charging Port):** Connect the USB charging cable here.

SETUP

Initial Charging

1. Before first use, fully charge the speaker's internal rechargeable battery.
2. Connect the provided USB charging cable to the 'IN' port on the speaker.
3. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer USB port.
4. The charging indicator (if present, often part of the LED/POWER light) will show charging status. Charging is complete when the indicator changes or turns off.

Placement

Place the speaker on a stable, flat surface. For optimal sound quality, ensure there are no obstructions directly in front of the speaker drivers.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the speaker, slide the 'OFF/ON' switch to the 'ON' position.
- To turn off the speaker, slide the 'OFF/ON' switch to the 'OFF' position.

Bluetooth Mode

1. Turn on the speaker. It will typically enter Bluetooth pairing mode automatically, indicated by a flashing LED light or an audible prompt.
2. If not in Bluetooth mode, press the 'MODE' button repeatedly until you hear the Bluetooth prompt or see the corresponding indicator.
3. On your compatible device (smartphone, tablet, MP3 player), enable Bluetooth and search for available devices.
4. Select 'LAX-MAX Speaker' (or similar name) from the list of found devices.
5. Once paired, the speaker will confirm with an audible tone, and the LED indicator will stop flashing.
6. You can now play audio from your device through the speaker.

FM Radio Mode

1. Turn on the speaker. Press the 'MODE' button repeatedly until you enter FM Radio mode.
2. To automatically scan and save available FM stations, press and hold the 'Play/Pause' button. The speaker will scan and store stations.
3. Once scanning is complete, use the 'V-/Previous' and 'V+/Next' buttons to navigate between saved stations.

USB/SD Card Playback

1. Turn on the speaker.
2. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
3. The speaker should automatically switch to USB or SD card mode and begin playing audio files (e.g., MP3). If

not, press the 'MODE' button to select the correct input.

4. Use the 'V-/Previous' and 'V+/Next' buttons to skip tracks. Use the 'Play/Pause' button to pause or resume playback.

LED Lights Control

- Short press the 'LED/POWER' button to cycle through different LED light modes or to turn the lights on/off.

CHARGING THE BATTERY

When the battery is low, the speaker may indicate this with an audible prompt or a flashing LED. To charge:

1. Connect the USB charging cable to the 'IN' port on the speaker.
2. Connect the other end of the USB cable to a 5V USB power source.
3. Allow the speaker to charge fully before disconnecting.

MAINTENANCE

- Clean the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- When not in use for extended periods, store the speaker in a cool, dry place.
- Avoid blocking the speaker grilles or ventilation openings.

TROUBLESHOOTING

No Power

- Ensure the speaker is fully charged.
- Check that the 'OFF/ON' switch is in the 'ON' position.

No Sound

- Increase the volume on both the speaker and your connected device.
- Ensure the correct input mode (Bluetooth, FM, USB, SD) is selected.
- For Bluetooth, ensure the device is properly paired and connected.

Bluetooth Not Connecting

- Ensure the speaker is in Bluetooth pairing mode.
- Make sure Bluetooth is enabled on your device.
- Move your device closer to the speaker.
- Try unpairing and re-pairing the speaker from your device's Bluetooth settings.

Poor FM Radio Reception

- Relocate the speaker to an area with better signal reception.
- Perform an automatic station scan again.

SPECIFICATIONS

Model Number	LI-S20197BT
Connectivity Technology	Bluetooth, USB
Special Feature	Rechargeable Battery, LED Lights
Audio Output	4 x 4-inch Woofers, Digital Amplifier
Radio Bands Supported	FM
Compatible Devices	MP3 Player, Smartphone, Tablet
Media Playback	USB, SD Card
Power Source	Battery Powered (Rechargeable)
UPC	018002220197

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

