

[manuals.plus](#) /› [PowerXL](#) /› **PowerXL Air Fryer Oven 10 Quart Instruction Manual**

PowerXL PowerXL Air Fryer Oven 10 Quart

PowerXL Air Fryer Oven 10 Quart Instruction Manual

Model: PowerXL Air Fryer Oven 10 Quart

INTRODUCTION

Welcome to the PowerXL Air Fryer Oven 10 Quart. This versatile appliance combines the functions of an air fryer, rotisserie, and food dehydrator, offering a healthier way to prepare your favorite meals with up to 70% fewer calories from fat compared to traditional deep frying. This manual provides essential information for safe operation, optimal performance, and maintenance of your new appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PACKAGE CONTENTS

Your PowerXL Air Fryer Oven 10 Quart package includes the following items:

- PowerXL Air Fryer Oven 10 Quart Unit
- Drip Tray
- 2 Crisper Trays
- Rotisserie Removal Fetch Tool
- Rotisserie Fork, Shaft, and Screws
- Splatter Guard
- Recipe Book (with over 50 recipes)

PRODUCT OVERVIEW

The PowerXL Air Fryer Oven 10 Quart features a sleek black design with a digital LCD display panel for intuitive operation. It includes multiple internal racks for versatile cooking and a clear visible window to monitor food progress.



Figure 1: Front view of the PowerXL Air Fryer Oven 10 Quart, showcasing its digital display and viewing window.



Figure 2: The air fryer oven with its door open, revealing multiple crisper trays inside. A hand is shown opening the door.



Figure 3: A closer view of the air fryer oven's interior, showing three levels of crisper trays for cooking various items simultaneously.

SETUP

Before first use, ensure all packaging materials are removed. Wash all accessories (crisper trays, drip tray, rotisserie parts) in warm, soapy water or in the dishwasher. Wipe the main unit with a damp cloth. Place the unit on a stable, heat-resistant surface away from walls and other appliances.

OPERATING INSTRUCTIONS

Your PowerXL Air Fryer Oven offers 9 digital presets for various cooking styles. The digital LCD display panel with auto shut-off is easy to read and use.

General Operation:

1. Plug the appliance into a grounded wall outlet.
2. Place food on the desired crisper tray(s) or rotisserie assembly.
3. Insert the tray(s) or rotisserie into the oven. Ensure the drip tray is at the bottom.
4. Close the oven door securely.
5. Select a preset function or manually set the temperature and time using the touch controls.
6. Press the 'Start' button to begin cooking.
7. Monitor food through the visible window.
8. The appliance will automatically shut off when the timer expires.

Preset Functions:

The unit includes presets for:

- Rotisserie
- Convection Bake
- Food Dehydrator
- Pizza
- French Fry
- Steaks/Chops
- Fish
- Shrimp
- Chicken
- Reheat

Rotisserie Function:

For rotisserie cooking, assemble your food (e.g., a whole chicken) onto the rotisserie shaft and forks. Insert the assembly into the designated slots inside the oven. Select the 'Rotisserie' preset or manually set temperature and time. The rotisserie function ensures even cooking and browning.



Figure 4: A rotisserie chicken cooking inside the PowerXL Air Fryer Oven, demonstrating the rotisserie function.

Food Dehydrator:

The dehydrator function allows you to make healthy snacks like jerky or dried fruit. Arrange thinly sliced food on the crisper trays and select the 'Dehydrate' preset. The appliance will maintain a low, consistent temperature for an extended period to remove moisture.



Figure 5: Cookies baking on multiple trays inside the air fryer oven, illustrating its baking capability.

COOKING TIPS

- For best results, preheat the air fryer for a few minutes before adding food, especially for items requiring a crispy exterior.
- Shake or flip food on crisper trays halfway through cooking for even browning.
- Avoid overcrowding the trays to ensure proper air circulation and crispiness. Cook in batches if necessary.
- Use the drip tray at the bottom to catch any excess oil or crumbs, making cleanup easier.
- Adjust cooking times and temperatures as needed based on food quantity and desired crispiness.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your PowerXL Air Fryer Oven.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wash the crisper trays, drip tray, and rotisserie accessories in warm, soapy water or in the dishwasher. These parts are dishwasher safe.

3. Wipe the interior and exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water.
4. For stubborn food residue, soak accessories in warm, soapy water before cleaning.
5. Ensure all parts are completely dry before storing or reusing the appliance.

TROUBLESHOOTING

If you encounter any issues with your PowerXL Air Fryer Oven, refer to the following common solutions:

- Appliance not turning on:** Ensure the power cord is securely plugged into a working outlet and the oven door is fully closed.
- Food not cooking evenly:** Ensure trays are not overcrowded. Shake or flip food halfway through cooking. Check that the rotisserie function is engaged if applicable.
- Food not crispy:** Increase cooking time or temperature slightly. Ensure food is not overcrowded.
- White smoke from appliance:** This may indicate excess grease from food. Ensure the drip tray is clean and in place. Reduce the amount of oil used if adding oil to food.
- Digital display not responding:** Unplug the unit, wait a few minutes, and plug it back in to reset.

SPECIFICATIONS

| | |
|--------------------------------|---|
| Brand | PowerXL |
| Model Name | PowerXL Air Fryer Oven 10 Quart |
| Capacity | 10 Quarts (Note: Product specifications list 6 Quarts, please verify actual capacity) |
| Special Feature | Automatic Shut-Off |
| Color | Black |
| Material | Stainless Steel |
| Output Wattage | 1700 Watts |
| Voltage | 220 Volts |
| Control Method | Touch |
| Min Temperature Setting | 45 Degrees Fahrenheit |
| Max Temperature Setting | 400 Degrees Fahrenheit |
| Air Frying Technology | Rapid Air Technology |
| Item Weight | 19.01 pounds |
| ASIN | B07YGVC4LX |
| UPC | 752356828875 |

WARRANTY AND SUPPORT

The PowerXL Air Fryer Oven 10 Quart comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact PowerXL customer service through their official website or the contact information provided in your product documentation.