

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PowerXL](#) /

› [PowerXL Smokeless Grill Family Size User Manual](#)

## PowerXL PG-1500FDR

# PowerXL Smokeless Grill Family Size User Manual

Model: PG-1500FDR

## INTRODUCTION

---

Welcome to the PowerXL Smokeless Grill user manual. This appliance is designed to provide an indoor grilling experience with minimal smoke, thanks to its integrated Turbo Speed Smoke Extractor Technology. Featuring a large, non-stick ceramic grilling surface and precise temperature control, it allows for versatile cooking of various foods. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The PowerXL Smokeless Grill with its tempered glass lid, ready for use.

## IMPORTANT SAFETY INFORMATION

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. This includes:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the drip tray is properly installed before operation to collect grease and prevent smoke.

## PRODUCT OVERVIEW AND COMPONENTS

---

The PowerXL Smokeless Grill is designed for ease of use and efficient indoor grilling. Familiarize yourself with its main components:

- **Main Grill Unit:** The base of the appliance housing the heating element and fan.
- **Tempered Glass Lid:** Allows you to monitor cooking progress without losing heat, designed to contain smoke.
- **Interchangeable Grill Plate:** Non-stick Cerami-Tech coated surface for grilling.
- **Interchangeable Griddle Plate:** Non-stick Cerami-Tech coated flat surface for griddling (may be sold separately or included depending on model package).
- **Oil Drip Tray:** Collects excess fat and grease during cooking.
- **Detachable Power Cord:** For easy storage and portability.
- **Temperature Control Dial:** Adjusts heat from 200°F to 450°F.
- **Fan/Power Buttons:** Controls the smoke extraction fan and main power.



Image: An exploded view showing the main grill unit, glass lid, grill plate, griddle plate, and detachable power cord.

# FAMILY SIZE



Image: The PowerXL Smokeless Grill, highlighting its family size capacity, shown with included recipe books and the griddle plate.

## SETUP

---

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Clean Before First Use:** Wash the Tempered Glass Lid, Grill Plate, Griddle Plate, and Oil Drip Tray with warm, soapy water. Rinse thoroughly and dry completely. The Cerami-Tech Grill Plate is dishwasher safe.
- 3. Assemble:**
  - Place the Main Grill Unit on a stable, heat-resistant surface.
  - Slide the Oil Drip Tray into the base of the unit.
  - Place either the Grill Plate or Griddle Plate onto the heating element, ensuring it sits securely.
  - Position the Tempered Glass Lid on top of the unit.
- 4. Connect Power:** Plug the detachable power cord into the unit, then into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

Follow these steps for optimal grilling results:

- 1. Power On:** Ensure the unit is properly assembled and plugged in. Press the Power button to turn on the grill.

2. **Activate Smoke Extractor:** Press the Fan button to activate the Turbo Speed Smoke Extractor Technology. The fan will help reduce smoke during cooking.
3. **Set Temperature:** Use the Temperature Control Dial to select your desired cooking temperature, ranging from 200°F to 450°F.
4. **Preheat:** Allow the grill to preheat for 5–10 minutes, or until the indicator light signals it has reached the set temperature.
5. **Place Food:** Carefully place food onto the preheated grill or griddle plate. For best results and to minimize smoke, ensure the drip tray is clean and properly positioned.
6. **Monitor Cooking:** Use the tempered glass lid to monitor your food. The lid helps retain heat and further reduces smoke.
7. **Finish Cooking:** Once cooking is complete, turn the Temperature Control Dial to the 'OFF' position and press the Power button to turn off the unit. Unplug the appliance from the outlet.



Image: The PowerXL Smokeless Grill in operation, grilling steaks and vegetables.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your PowerXL Smokeless Grill.

1. **Cool Down:** Always ensure the appliance is completely cool before cleaning.
2. **Disassemble:** Remove the Tempered Glass Lid, Grill/Griddle Plate, and Oil Drip Tray from the Main Grill Unit.
3. **Dishwasher Safe Parts:** The Cerami-Tech Grill Plate and Griddle Plate are dishwasher safe for convenient cleaning.
4. **Hand Washing:** Wash the Tempered Glass Lid and Oil Drip Tray with warm, soapy water. For stubborn residue, soak in warm water before cleaning.
5. **Main Unit:** Wipe the exterior of the Main Grill Unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Storage:** Ensure all parts are clean and dry before storing the grill in a cool, dry place.

## TROUBLESHOOTING

---

If you encounter issues with your PowerXL Smokeless Grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill not heating	Not plugged in; Power button not pressed; Temperature dial not set.	Ensure power cord is securely plugged in; Press Power button; Rotate Temperature Control Dial to desired setting.
Excessive smoke	Drip tray full or not installed; Fan not on; Too much fat on food.	Empty and clean drip tray; Press Fan button; Trim excess fat from food before grilling.
Food sticking to plate	Plate not properly preheated; Insufficient oil/cooking spray (if desired).	Allow grill to fully preheat; While the surface is non-stick, a light coating of oil can be used for certain foods.

If the problem persists after attempting these solutions, please contact PowerXL customer support.

## SPECIFICATIONS

Feature	Detail
Brand	PowerXL
Model Name	INDOOR GRILL BLACK 110SI
Model Number	PG-1500FDR
Product Dimensions	1"D x 2"W x 2"H <i>(Note: This appears to be a generic placeholder; actual product dimensions are larger based on product title.)</i>
Special Feature	Portable Smokeless, Temperature Control
Color	Multi
Fuel Type	Electric
Recommended Uses	Indoor
Material	Ceramic (for cooking surface)
Wattage	1650 watts
Voltage	1V <i>(Note: This value appears to be incorrect for a 1650W appliance; typically 120V in North America.)</i>
Temperature Range	200°F to 450°F

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official PowerXL website. You may also contact PowerXL customer service directly for assistance with any product-related inquiries or issues.

**PowerXL Customer Service:** Please refer to your product packaging or the official PowerXL website for the most current contact information.

