

**Decathlon 2698415**

## ONstart 110 Stopwatch User Manual

Model: 2698415 | Brand: Decathlon

### INTRODUCTION

This manual provides comprehensive instructions for the Decathlon ONstart 110 Stopwatch. Designed for running enthusiasts, this device accurately measures performance with features including time, date, alarm, and a precise 1/100th of a second stopwatch function with split time capability. Please read this manual carefully to ensure proper use and maintenance of your stopwatch.



Figure 1: The ONstart 110 Stopwatch. This image displays the compact black stopwatch with its digital screen showing "00'06"48" and the brand "Kalenji". Red buttons are visible on the top right and left, and a black lanyard is attached at the bottom.

### SETUP

The ONstart 110 Stopwatch is designed for ease of use. Initial setup primarily involves setting the time and date.

#### 1. Initial Power On

The stopwatch typically arrives with the battery installed. If the display is blank, press any button to activate it. The device features an automatic or manual stand-by mode to optimize battery life.

## 2. Setting Time and Date

1. Locate the "MODE" button, usually on the top of the stopwatch. Press it repeatedly until the time/date setting mode is displayed.
2. Use the other two buttons (often marked with arrows or play/pause symbols) to adjust the flashing digits (hours, minutes, day, month, year).
3. Press the "MODE" button again to confirm each setting and move to the next parameter.
4. Once all parameters are set, press "MODE" to exit the setting mode.

## OPERATING INSTRUCTIONS

---

The ONstart 110 Stopwatch offers multiple functions accessible via its three buttons and clear screen icons.

### 1. Stopwatch Function (1/100th of a second)

- Press the **MODE** button until the stopwatch display (00:00:00) appears.
- Press the **Start/Stop** button (often the red button on the top right) to begin timing.
- To record a split time (LAP), press the **Split/Reset** button (often the button on the top left) while the stopwatch is running. The display will show the split time, while the stopwatch continues to run in the background. Press again to return to the main running time.
- Press the **Start/Stop** button again to pause the stopwatch.
- To reset the stopwatch to zero, press the **Split/Reset** button while the stopwatch is paused.

### 2. Time and Date Display

From any mode, press the **MODE** button until the current time and date are displayed. The large figures ensure perfect visibility.

### 3. Alarm Function

- Press the **MODE** button until the alarm setting screen is visible.
- Use the adjustment buttons to set the desired alarm time.
- Activate or deactivate the alarm using the designated button (refer to screen icons for guidance).
- The stopwatch features a loud beep for audio efficiency when the alarm sounds.

## MAINTENANCE

---

Proper care will extend the life of your ONstart 110 Stopwatch.

- **Cleaning:** Wipe the stopwatch with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the stopwatch in a dry place away from direct sunlight and extreme temperatures.
- **Battery:** The stopwatch uses a Li Po battery. While designed for optimal battery life with automatic/manual stand-by, if the display becomes dim or unresponsive, consider professional battery replacement.
- **Water Resistance:** This stopwatch is not designed for water immersion. Avoid exposing it to heavy rain or submersion in water.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or in stand-by mode.	Press any button to wake from stand-by. If still dim, the battery may need replacement.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try removing and reinserting the battery (if accessible and recommended by manufacturer, otherwise consult support). Ensure hands are dry and clean.
Stopwatch not accurate.	Not applicable for digital stopwatch.	The 1/100th of a second accuracy is inherent. Ensure correct operation as per instructions.

## SPECIFICATIONS

Feature	Detail
Model Number	2698415
Brand	Decathlon
Colour	Black
Material	100% Acrylonitrile Butadiene Styrene (ABS) structure
Item Weight	57 g (0.06 Kilograms)
Item Dimensions (LxWxH)	8.7 x 6.7 x 3.3 Centimeters
Time Measurement	Up to 99hr 59min 59sec
Stopwatch Accuracy	1/100th of a second
Functions	Time, Date, Alarm, 1 Split Time (LAP)
Battery Type	Li Po

## WARRANTY AND SUPPORT

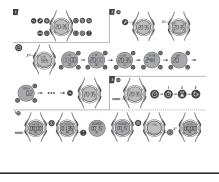
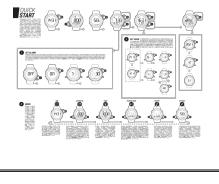
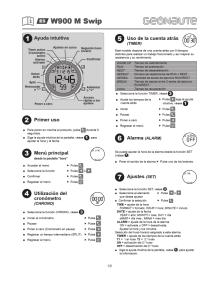
The Decathlon ONstart 110 Stopwatch comes with a manufacturer's warranty to ensure your peace of mind.

### Warranty Information

This product is covered by a **2 Years Warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, technical assistance, or warranty claims, please contact Decathlon customer support. Refer to the official Decathlon website or your purchase documentation for contact details specific to your region.

	<p><a href="#"><u>Decathlon W200 S/M Digital Watch User Manual and Guide</u></a></p> <p>Comprehensive user manual for the Decathlon W200 S/M digital watch, covering time setting, stopwatch usage, and product care. Learn to operate your sports watch effectively.</p>
	<p><a href="#"><u>Decathlon W500 S Watch Quick Start Guide</u></a></p> <p>A concise guide to setting up and using the Decathlon W500 S watch, covering alarm settings, time adjustments, stopwatch, timer, training modes, and history tracking.</p>
	<p><a href="#"><u>W900 M Swip User Manual - Decathlon</u></a></p> <p>User manual for the Decathlon W900 M Swip watch, covering intuitive guidance, first use, main menu, stopwatch, countdown timer, alarm, settings, backlight, and dual time zone.</p>
	<p><a href="#"><u>Domyos Console 3 Technical Specifications and User Guide</u></a></p> <p>Comprehensive technical specifications, standards compliance, and operational details for the Domyos Console 3 fitness equipment, including its electronic and mechanical hardware, traceability, and Bluetooth connectivity.</p>
	<p><a href="#"><u>Quechua Arpenaz 6.3 FRESH&amp;BLACK Tent Assembly Instructions   Decathlon</u></a></p> <p>Detailed assembly instructions for the Quechua Arpenaz 6.3 FRESH&amp;BLACK camping tent by Decathlon. Learn how to pitch this 6-person, 3-room tent with FRESH&amp;BLACK technology.</p>
	<p><a href="#"><u>Decathlon Speed 900 E Electric Bike Quickstart Guide</u></a></p> <p>A concise quickstart guide for the Decathlon Speed 900 E electric bike, covering assembly, usage, power, lights, navigation assistance modes, walk mode, battery level, and Bluetooth connectivity.</p>