

Manuals.plus /

› MYHGRC /

› MYHGRC AA59-00741A Replacement Samsung TV Remote Control User Manual

MYHGRC DAGD2549

MYHGRC AA59-00741A Replacement Samsung TV Remote Control User Manual

Comprehensive guide for your MYHGRC replacement remote control for Samsung LED LCD Smart TVs.

PRODUCT OVERVIEW

The MYHGRC AA59-00741A is a high-quality replacement remote control designed for various Samsung LED LCD Smart TV models. It offers 100% functionality comparable to the original remote, covering all essential features. Its lightweight and ergonomic design, made from durable ABS material with silicone buttons, ensures comfortable and long-lasting use.





Image: Front view of the MYHGRC AA59-00741A replacement remote control, showcasing its button layout.

This remote is compatible with a wide range of Samsung TV models, including those that originally used remote controls such as BN59-00175B, AA59-00818A, AA59-00603A, BN59-01199G, AA59-00622A, AA59-00496A, AA59-01180A, BN59-01268D, AA59-00666A, AA59-01089-00600A, BN59-01175N, BN59-01199F, AA59-00786A, AA59-00602A, BN59-01247A, and AA59-00743A.

Kompatibel mit allen Samsung Smart TVs



Image: The remote control positioned next to various Samsung Smart TV screens, illustrating its broad compatibility.

SETUP INSTRUCTIONS

Setting up your MYHGRC replacement remote control is straightforward and requires no programming. Simply insert the batteries, and it's ready for use.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Close the battery cover by sliding it back into place until it clicks securely.

Once the batteries are installed, the remote control is immediately operational. No additional pairing or code entry is necessary.



Keine Einrichtung erforderlich

Perfekt ersetzen Sie Ihre ursprüngliche Fernbedienung nach einfach Einsatz von 2 AAA-Batterien (*Nicht enthalten*)

ABS Material Weicher Knopf Stabile Leistung Schnell passen

Image: A view of the remote control's battery compartment, showing where to insert two AAA batteries. Text indicates "No setup required".

OPERATING INSTRUCTIONS


This remote control utilizes infrared technology for stable and responsive performance. It offers a maximum operating range of approximately 10 meters (33 feet) and provides 360-degree multi-angle signal transmission for reliable control from various positions within your room.

Fernsteuerung

360° Multi-Winkel-Signalübertragung, Präzise Steuerung innerhalb von 50ft.



360° Übertragung

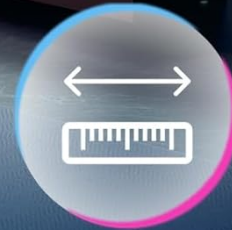

Steuern Sie eine
lange Distanz

Image: The remote control shown in a living room setting, illustrating its 360-degree signal transmission and effective operating distance.


Button Functions

Familiarize yourself with the primary functions of each button on your remote control:

Button	Function
Power ()	Turns the television on or off.
SOURCE	Displays and selects available video input sources (e.g., HDMI, AV).
Number Buttons (0-9)	Directly selects TV channels.
TTX-MIX	Mixes teletext information with the normal broadcast display.
Volume (+/-)	Adjusts the volume level.
MUTE	Mutes or unmutes the television sound.
Channel (P ▲/P ▼)	Changes TV channels up or down.
CH LIST	Displays the channel list on the screen.
MEDIA.P	Accesses media playback functions.
MENU	Displays the main menu on the screen.
GUIDE	Accesses the electronic program guide (EPG).
TOOLS	Quickly selects frequently used functions.
INFO	Displays information about the current program or TV settings.
Navigation Arrows (▲, ▼, ◀, ▶)	Navigates through menus and options.
RETURN	Returns to the previous menu or screen.
EXIT	Exits the current menu or application.
Color Buttons (A, B, C, D)	Used for interactive functions or specific features depending on the TV model or application.
SPORTS	Accesses the "SPORTS" menu or mode.
Play/Pause/Stop/Fast Forward/Rewind	Controls media playback.

Funktion Button

 Schaltet das Fernsehgerät ein und aus

TTX-MIX  Videotext-Anzeige mischt sowohl Videotext-Informationen als auch das normale bmo adc ast

SOURCE : Anzeigen und Auswählen der verfügbaren Videoquellen

+ ◀ ▶ - : Stellt die Lautstärke ein

◀ [P] ▶ : Wechselt die Kanäle

MUTE : Schaltet den Ton vorübergehend aus

CH LIST : Zeigt Kanallisten auf dem Bildschirm an

SAMRT HUB : Ruft Smart Hub-Anwendungen auf

MENU : Zeigt das Hauptmenü auf dem Bildschirm an

TOOLS : Schnelles Auswählen häufig verwendeter Funktionen

INFO : Zeigt Informationen auf dem TV-Bildschirm an

RETURN : Kehrt zum vorherigen Menü zurück

EXIT : Beendet das Menü

COLOR BUTTONS (GELB/BLAU/ROT/GRÜN) Tastenkombinationen für interaktive Funktionen

SPORTS : Zugriff auf das Menü "SPORTS"



Image: A detailed diagram of the remote control, highlighting and explaining the function of each button.

MAINTENANCE

To ensure the longevity and optimal performance of your MYHGRC remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as they can damage the surface or buttons.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high

humidity.

- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.
- **Liquid Exposure:** Keep the remote control away from liquids. If it accidentally gets wet, remove the batteries immediately and allow it to dry completely before reinserting them.

TROUBLESHOOTING

If you encounter issues with your MYHGRC remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV's IR sensor.
- **Limited Range or Intermittent Functionality:**
 - Replace the batteries. Low battery power can affect range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.
 - Clean the IR emitter on the remote and the IR receiver on the TV with a soft cloth.
- **Specific Buttons Not Working:**
 - This remote is designed to replicate original functions. If a specific button does not work, ensure your TV model supports that function with its original remote.
 - Try replacing the batteries.

If the problem persists after trying these steps, please refer to the customer support section.

SPECIFICATIONS

Feature	Detail
Brand	MYHGRC
Model Number	AA59-00741A (also DAGD2549)
Compatible Devices	Samsung LED LCD Smart TVs
Connectivity Technology	Infrared (IR)
Maximum Range	Approximately 10 meters (33 feet)
Number of Buttons	40
Batteries Required	2 x AAA batteries (not included)
Product Dimensions	5 x 3 x 4 cm (approx. 1.97 x 1.18 x 1.57 inches)
Item Weight	30 grams (approx. 1.06 ounces)
Special Features	Ergonomic design, Infrared, Lightweight



Image: A diagram showing the precise dimensions of the MYHGRC AA59-00741A remote control.

WARRANTY INFORMATION

MYHGRC offers a **Lifetime Warranty** for this product, ensuring 100% customer satisfaction. This warranty covers defects in materials and workmanship under normal use.

For warranty claims or further details, please contact customer support.

CUSTOMER SUPPORT

If you have any questions, suggestions, or require assistance with your MYHGRC replacement remote control,

please do not hesitate to contact our customer support team. We are committed to providing excellent service and ensuring your satisfaction.

Please refer to your purchase platform or product packaging for specific contact details, or visit the official MYHGRC brand store on Amazon for support options.

Visit the MYHGRC Brand Store