

NEDIS TVRC2110BK

Nedis TVRC2110BK Universal Remote Control User Manual

Model: TVRC2110BK

1. INTRODUCTION

Thank you for choosing the Nedis TVRC2110BK Universal Remote Control. This remote is designed to provide seamless control over your television, offering a convenient and pre-programmed solution. This manual will guide you through the setup, operation, and maintenance of your new remote control.

2. PRODUCT OVERVIEW

2.1. Key Features

- Pre-programmed for immediate use with most televisions.
- Designed to control one television device.
- Equipped with essential buttons for TV operation, including memory and TV guide functions.
- Infrared (IR) technology for reliable signal transmission.

2.2. Package Contents

- 1 x Nedis TVRC2110BK Universal Remote Control
- (Batteries are not included and must be purchased separately)

2.3. Remote Control Layout



Figure 1: Front view of the Nedis TVRC2110BK Universal Remote Control, displaying the power button, number pad, navigation keys, volume and channel controls, and media playback buttons.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings

inside the compartment.

4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Side view of the remote control, illustrating its design and the location of the battery compartment.

3.2. Initial Setup (Pre-programmed Functionality)

The Nedis TVRC2110BK Universal Remote Control is pre-programmed for most major television brands. In many cases, it will work directly out of the box without any additional setup.

- After inserting batteries, point the remote control towards your television.
- Press the **Power** button. If your TV turns on or off, the remote is already compatible.
- Test other basic functions like **Volume Up/Down** and **Channel Up/Down** to confirm full functionality.

If the remote does not operate your TV, please refer to the troubleshooting section or consult the manufacturer's website for specific programming instructions if your TV brand requires a code setup (though this model is primarily pre-programmed).

4. OPERATING THE REMOTE CONTROL

The remote control features a standard layout for easy navigation and control of your television.

4.1. Basic Functions

- **Power (Red Button):** Turns the television on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **CH+ / CH-:** Changes the television channel up or down.
- **Mute (Speaker with X):** Mutes or unmutes the television audio.
- **MENU:** Accesses the television's main menu.
- **GUIDE:** Displays the electronic program guide (EPG) if supported by your TV.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.
- **BACK / EXIT:** Returns to the previous screen or exits the current menu.
- **Source/Input (AV):** Switches between different input sources (HDMI, AV, etc.).

4.2. Advanced Functions

- **M1 / M2:** Memory buttons that can be programmed for specific functions or favorite channels (refer to your TV's manual for compatibility with universal remote memory functions).
- **FAV:** Accesses favorite channels list.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls media playback on compatible devices connected to your TV (e.g., USB drives, smart TV apps).
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons often correspond to specific functions within TV menus or smart TV applications. Their function varies by television model.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Nedis TVRC2110BK Universal Remote Control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote does not work at all.	Batteries are dead or inserted incorrectly. Remote is out of range or not pointed at the TV. Infrared (IR) sensor on TV is blocked.	Replace batteries with new ones, ensuring correct polarity. Move closer to the TV and ensure a clear line of sight to the TV's IR sensor. Remove any obstructions in front of the TV's IR sensor.
Only some buttons work.	Remote is not fully compatible with your TV model. Specific buttons require TV-specific programming.	While pre-programmed, some advanced functions may not be universally compatible. Refer to your TV's manual. Ensure your TV supports the specific function (e.g., GUIDE, M1/M2).
Remote is sluggish or inconsistent.	Low battery power. Interference from other electronic devices.	Replace batteries. Move the remote away from other devices that might emit IR signals or strong electromagnetic fields.

7. SPECIFICATIONS

Feature	Detail
Model Number	TVRC2110BK
Brand	NEDIS
Compatible Devices	Television
Max Number of Supported Devices	1
Special Features	Universal, Pre-programmed
Connectivity Technology	Infrared (IR)
Product Dimensions	8.5 x 3 x 25 cm
Item Weight	140 g
Power Source	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

Nedis products are manufactured to high quality standards. In the unlikely event of a defect during the warranty period, please contact your retailer or the Nedis customer support for assistance.

For the most up-to-date warranty information and support resources, please visit the official Nedis website or refer to the warranty card included with your purchase.

Website: www.nedis.com



