

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEDIS](#) /

› [Nedis TVRC41PHBK Replacement Remote Control for Philips TVs User Manual](#)

NEDIS TVRC41PHBK

Nedis TVRC41PHBK Replacement Remote Control for Philips TVs User Manual

Model: TVRC41PHBK | Brand: NEDIS

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Nedis TVRC41PHBK Replacement Remote Control. This remote is specifically designed to function with Philips televisions, offering a ready-to-use solution without complex programming.

Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Nedis TVRC41PHBK is an infrared replacement remote control for Philips televisions. It features dedicated buttons for common functions, including Ambilight and Netflix access, providing a familiar user experience.



Figure 1: Front view of the Nedis TVRC41PHBK Replacement Remote Control. Shows the layout of all buttons, including power, channel, volume, navigation, Netflix, and Ambilight.



Figure 2: The Nedis TVRC41PHBK remote control displayed within its retail packaging, highlighting its compatibility with Philips TVs.

3. SETUP AND BATTERY INSTALLATION

The Nedis TVRC41PHBK remote control is designed for immediate use with compatible Philips televisions. No programming is required.

3.1 Battery Requirements

- Battery Type: AAA
- Quantity: Typically two (2) AAA batteries (not included).

3.2 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your Philips TV. Point the remote control directly at the TV's infrared receiver.

4.1 Basic Functions

- **Power Button ():** Turns the TV on or off.
- **Volume Up/Down (+ / -):** Adjusts the sound volume.
- **Channel Up/Down (▲ / ▼):** Changes TV channels.
- **Mute ():** Mutes or unmutes the TV sound.
- **Numeric Keypad (0-9):** Directly enters channel numbers.

4.2 Navigation and Menu Control

- **Directional Arrows (◀ ▲ ▶ ▼):** Navigates through menus and options.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen or smart TV interface.
- **Options Button:** Displays context-sensitive options.
- **Info Button:** Shows information about the current program or input.

4.3 Special Functions

- **Netflix Button:** Direct access to the Netflix application.
- **Ambilight Button:** Controls the Ambilight feature on compatible Philips TVs.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **TV Guide Button:** Opens the electronic program guide.
- **Smart TV Button:** Accesses the Smart TV features.
- **Subtitle Button:** Toggles subtitles on/off.
- **Text Button:** Accesses Teletext (if supported by TV and broadcast).
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current application. Refer to your TV's manual for specific uses.

5. MAINTENANCE AND CARE

Proper care ensures the longevity and reliable operation of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed at TV's IR receiver.	Replace batteries. Ensure a clear line of sight to the TV. Point the remote directly at the TV.
Specific buttons not working.	Button stuck or damaged; TV model incompatibility for advanced features.	Gently press the button multiple times. If the issue persists, the button may be damaged. Verify if the specific function is supported by your Philips TV model.
Remote works for some functions but not others.	Partial battery failure; TV model specific features.	Replace batteries. Some advanced features (e.g., Ambilight, Smart TV) might require specific TV firmware or model compatibility.

If troubleshooting steps do not resolve the issue, contact Nedis customer support for further assistance.

7. SPECIFICATIONS

- **Model:** TVRC41PHBK
- **Brand:** NEDIS
- **Compatibility:** Philips Televisions
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Max Number of Supported Devices:** 1
- **Maximum Range:** 10 Meters
- **Battery Type:** AAA (not included)
- **Product Dimensions:** 8.5 x 3 x 25 cm
- **Item Weight:** 76 Grams
- **Color:** Black

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the

official [Nedis website](#). Keep your proof of purchase for warranty claims.

Manufacturer: Nedis

© 2025 Nedis. All rights reserved. This manual is for informational purposes only.

Related Documents - TVRC41PHBK

	<p>Nedis IREX100BK Infrared IR Extender User Manual</p> <p>This manual provides instructions for the Nedis IREX100BK Infrared IR Extender, a device designed to extend the range of infrared signals for controlling electronic equipment. It covers setup, operation, specifications, safety precautions, and warranty information in multiple languages.</p>
	<p>Nedis Zigbee Radiator Thermostat ZBHT20WT Installation Guide</p> <p>Step-by-step installation guide for the Nedis Zigbee Radiator Thermostat (model ZBHT20WT). Learn how to install, set up, and connect your smart thermostat using the Nedis SmartLife app for efficient home heating control.</p>
	<p>Nedis WIFICO20CWT Outdoor IP Camera Quick Start Guide</p> <p>A quick start guide for the Nedis WIFICO20CWT Outdoor IP Camera, detailing setup, usage, safety, and maintenance in multiple languages.</p>
	<p>Nedis ZBSM10WT Zigbee Motion Sensor Quick Start Guide</p> <p>Quick start guide for the Nedis ZBSM10WT Zigbee motion sensor, covering setup, installation, and automation with the Nedis SmartLife app.</p>
	<p>Nedis Zigbee Radiator Thermostat ZBHT20WT Safety Instructions</p> <p>Safety instructions and user guide for the Nedis Zigbee Radiator Thermostat (ZBHT20WT), covering intended use, warnings, and disposal.</p>

nedis

Universal remote

control

Suitable for 4 devices

TVRC2340BK



   

[Nedis TVRC2340BK Universal Remote Control - Quick Start Guide](#)

Get started with your Nedis TVRC2340BK universal remote control. This guide provides setup instructions, programming methods, and troubleshooting tips for controlling up to 4 devices.