

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HOVERSTAR](#) /

› [HOVERSTAR HS2.0 Flash Wheel Hoverboard User Manual](#)

## HOVERSTAR LBW18

# HOVERSTAR HS2.0 Flash Wheel Hoverboard User Manual

Model: LBW18

Brand: HOVERSTAR

## 1. IMPORTANT SAFETY INFORMATION

Read this manual thoroughly before operating your HOVERSTAR Hoverboard. Failure to follow instructions can result in serious injury or property damage.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads, wrist guards) when riding.
- Do not ride under the influence of alcohol or drugs.
- Do not ride on public roads, uneven surfaces, or near traffic.
- Ensure the hoverboard is fully charged before each use.
- Do not exceed the maximum weight limit of 165 pounds (75 kg).
- Children should only operate the hoverboard under adult supervision.
- Avoid sudden turns, rapid acceleration, or braking, especially at high speeds.
- Be aware of your surroundings and obstacles.
- Do not attempt stunts or jumps.
- Keep fingers, hair, and clothing away from moving parts.



Image: The HOVERSTAR Hoverboard highlighting its safety features and strong climbing capability, indicating it is stable and comfortable.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- HOVERSTAR HS2.0 Flash Wheel Hoverboard
- Power Charger
- User Manual (this document)



Image: A blue HOVERSTAR HS2.0 Flash Wheel Hoverboard with illuminated LED lights on the wheels and front, showcasing its sleek design.

---

### **3. SETUP**

#### **3.1 Charging the Hoverboard**

Before first use, fully charge the hoverboard. The charging time is approximately 2-3 hours.

1. Locate the charging port on the hoverboard.
2. Connect the charger to the hoverboard's charging port.
3. Plug the charger into a standard electrical outlet.
4. The indicator light on the charger will change (e.g., from red to green) when charging is complete.
5. Disconnect the charger once fully charged to prevent overcharging.

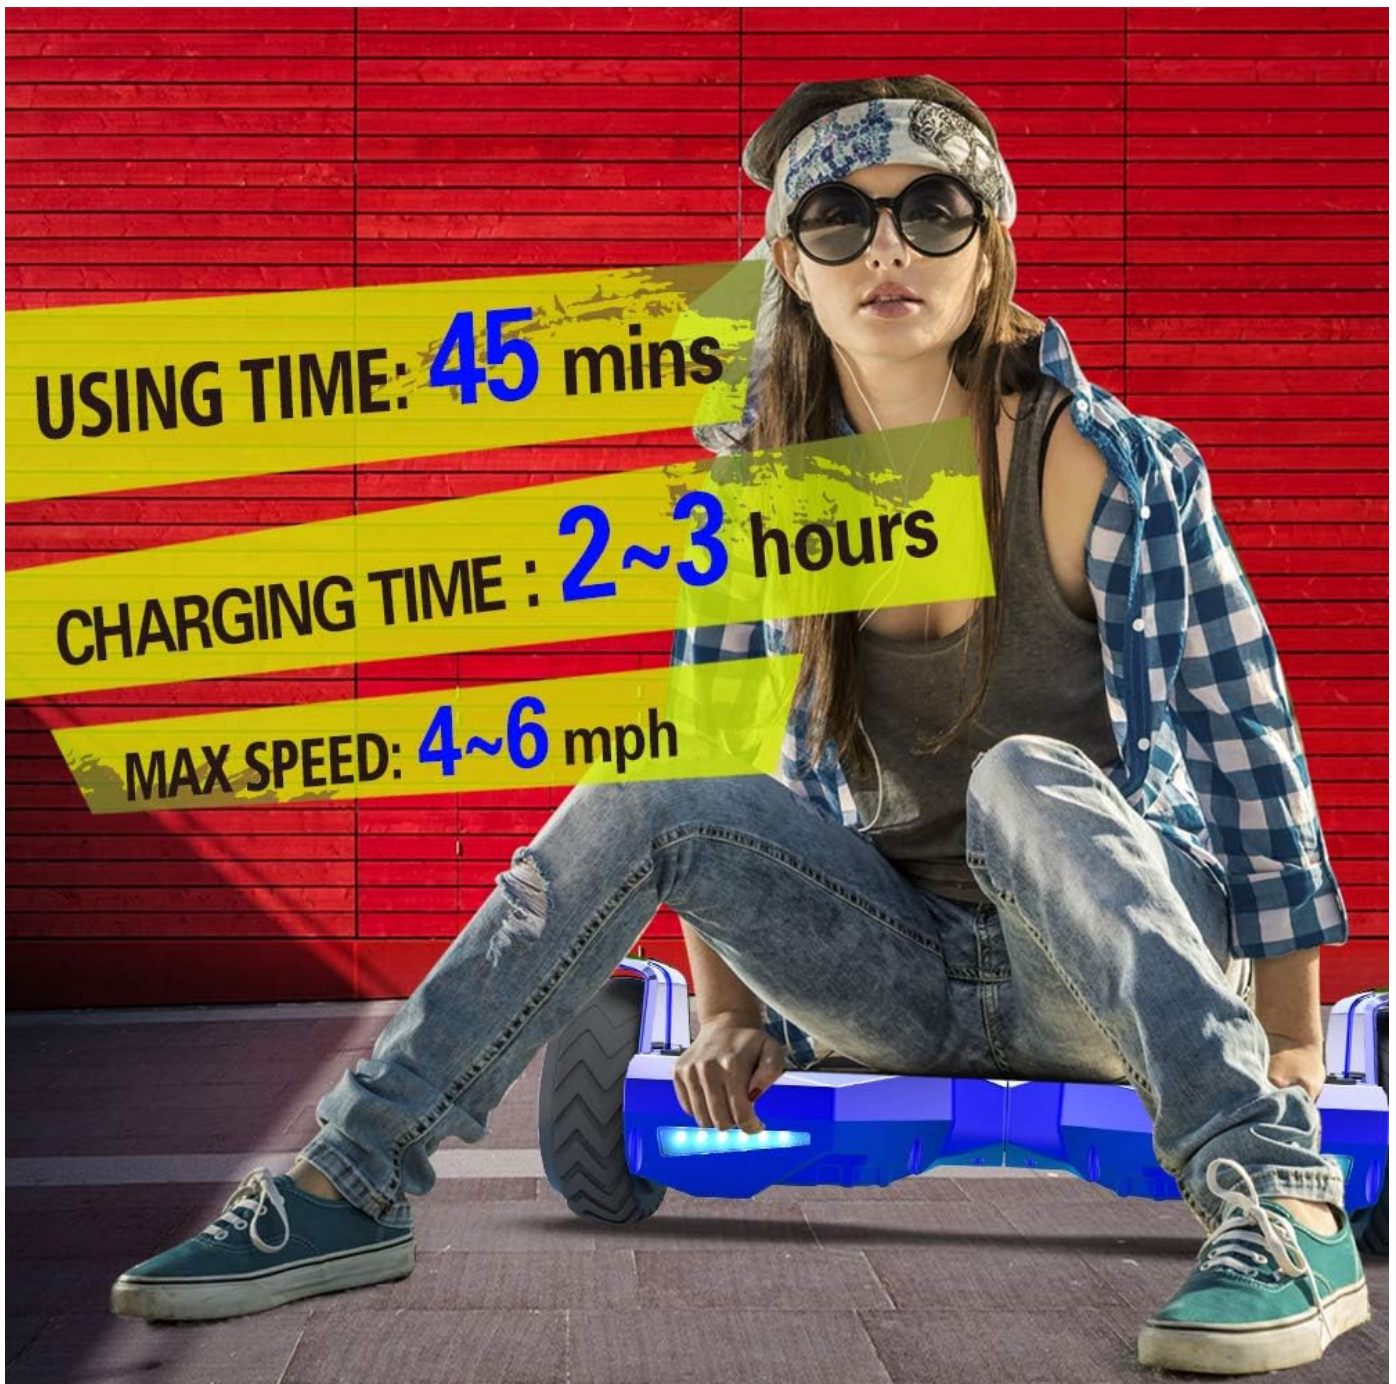


Image: A person sitting on the HOVERSTAR Hoverboard, with overlaid text indicating a usage time of 45 minutes, charging time of 2-3 hours, and a maximum speed of 4-6 mph.

## 4. OPERATING INSTRUCTIONS

### 4.1 Getting Started

1. Place the hoverboard on a flat, level surface.
2. Press the power button to turn it on. The indicator lights will illuminate.
3. Step onto one side of the hoverboard with one foot, ensuring the footpad is level.
4. Quickly step onto the other side with your second foot. Maintain balance.
5. Keep your body upright and relaxed.

### 4.2 Riding and Steering

- **To move forward:** Lean slightly forward with both feet.

- **To move backward:** Lean slightly backward with both feet.
- **To turn left:** Push your right foot forward slightly while pulling your left foot back slightly.
- **To turn right:** Push your left foot forward slightly while pulling your right foot back slightly.
- **To stop:** Return to an upright, neutral position. The hoverboard will slow down and stop.

### 4.3 Dismounting

To safely dismount, step off the hoverboard one foot at a time, preferably backward.



Image: A person riding the HOVERSTAR Hoverboard, showcasing its flashing wheels and dynamic movement.

## 5. MAINTENANCE

### 5.1 Cleaning

Wipe the hoverboard with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not submerge the hoverboard in water.

## 5.2 Storage

Store the hoverboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every 3 months to maintain battery health.



Image: The HOVERSTAR Hoverboard on a track, highlighting its anti-scratch coating and ease of use for safe riding.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hoverboard not turning on	Low battery; Power button not pressed correctly	Charge the hoverboard; Ensure power button is fully pressed.
Lights flashing/Beeping sound	Over-speeding; Uneven surface; Battery error	Reduce speed; Move to a flat surface; Recharge or contact support.

Problem	Possible Cause	Solution
Hoverboard not balancing	Calibration needed; Rider weight distribution	Recalibrate the hoverboard (refer to online resources or support); Adjust stance.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	LBW18
Product Dimensions	25L x 9W x 9H Centimetres (25 x 9 x 9 cm)
Product Weight	6.8 kg
Maximum Weight Recommendation	165 Pounds (approx. 75 kg)
Battery Type	Lithium
Voltage	24 Volts
Charging Time	3 Hours
Special Feature	LED Light
Included Components	Charger
Age Range (Description)	Adult
UPC	819518025555



Image: The HOVERSTAR Hoverboard with overlaid text indicating a tire size of 6.5 inches, motor power of 200 Watts x2, a weight limit of 44-200 lbs, and overall dimensions of 24 inches length and 6 inches height.

## 8. WARRANTY AND SUPPORT

HOVERSTAR products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided on the HOVERSTAR official website or your purchase documentation. Please retain your proof of purchase for warranty claims.