

[Manuals.plus](#) /

› [CARLETT](#) /

› CARLETT Lett450 Foldable 4-Wheel Shopping Trolley User Manual

CARLETT Lett450

CARLETT Lett450 Foldable 4-Wheel Shopping Trolley User Manual

Model: Lett450

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your CARLETT Lett450 Foldable 4-Wheel Shopping Trolley. Please read this manual carefully before using the product to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1: CARLETT Lett450 Shopping Trolley (Red) - Side View

This image shows the CARLETT Lett450 shopping trolley in its assembled, upright position, viewed from the side. The red fabric bag is visible, along with the silver aluminum frame and four black wheels.

SETUP AND ASSEMBLY

The CARLETT Lett450 shopping trolley is designed for easy setup and compact storage. Follow these steps to prepare your trolley for use:

1. **Unfolding the Frame:** Carefully unfold the aluminum frame until it locks into its open position. Ensure all locking mechanisms are securely engaged.
2. **Attaching the Wheels:** The four EVA material wheels are easily detachable for compact storage. To attach, align each wheel with its axle and push firmly until it clicks into place. Ensure all wheels are securely fastened before use. The front wheels are designed to swivel 360 degrees for enhanced maneuverability.
3. **Securing the Bag:** The removable bag attaches to the frame using a hook-and-loop fastener (Velcro). Position the bag on the frame and secure it firmly.



Figure 2: CARLETT Lett450 Shopping Trolley in Folded Position

This image displays the CARLETT Lett450 shopping trolley in its compact, folded state, ready for storage. The frame is collapsed, and the wheels are positioned to minimize space.

OPERATING INSTRUCTIONS

Handle Adjustment

The CARLETT Lett450 features an adjustable handle that can be set to four different positions to suit various user heights. To adjust, locate the adjustment mechanism on the handle, press the release button, and move the handle to

your desired height. Ensure it locks securely into place before use.



Figure 3: Adjustable Handle Mechanism

This image illustrates the adjustable handle of the CARLETT Lett450, showing multiple possible height settings to accommodate different users.

Using the Safety Brake

For added safety, especially on inclines or when you need to keep the trolley stationary, engage the safety brake. The brake mechanism is located near the rear wheels. Push the lever down to engage the brake and lift it up to release. Always ensure the brake is fully engaged when stopped.



Figure 4: Safety Brake Location

This image highlights the safety brake mechanism located on one of the rear wheels of the CARLETT Lett450 shopping trolley.

Capacity and Storage

The trolley features a spacious 40-liter bag, capable of carrying up to 25 kg. The bag is expandable and made from waterproof material, protecting your contents from adverse weather conditions. An internal pocket is provided for storing personal items such as a wallet or keys.



Figure 5: Internal Storage Pocket

This image shows the internal pocket within the main bag of the CARLETT Lett450, designed for securing small personal items.

Convertible 2-Wheel Mode

For situations requiring a more traditional pulling motion, the trolley can be converted to a 2-wheel mode. Consult the product's quick start guide or manufacturer's website for specific instructions on how to engage this mode.

MAINTENANCE

- **Cleaning the Bag:** The removable bag is made of waterproof material. It can be wiped clean with a damp cloth and mild soap. Do not machine wash or tumble dry. Ensure the bag is completely dry before reattaching it to the frame.
- **Frame and Wheels:** Wipe the aluminum frame and EVA wheels with a damp cloth to remove dirt and debris. Avoid using abrasive cleaners. Periodically check that all wheel axles are free of obstructions and rotate smoothly.
- **Storage:** When not in use, fold the trolley compactly and store it in a dry place, away from direct sunlight and extreme temperatures. The removable wheels can be detached for even more compact storage.

TROUBLESHOOTING

This section addresses common issues you might encounter with your CARLETT Lett450 shopping trolley.

- **Wheels not rotating smoothly:** Check for debris (e.g., hair, lint) caught in the wheel axles. Clean as necessary. Ensure wheels are properly attached and locked into place.
- **Handle not adjusting:** Ensure the release button for handle adjustment is fully pressed. Check for any obstructions in the adjustment mechanism.
- **Trolley does not fold/unfold easily:** Verify that no parts are obstructed. Ensure the safety lock is disengaged before folding. Apply gentle, even pressure.

If you experience issues not covered here, please contact customer support.

SPECIFICATIONS

Model Number	Lett450
Brand	CARLETT
Dimensions (L x W x H)	55 x 42 x 102 cm (unfolded)
Folded Dimensions (H x W x D)	31 x 42 x 64 cm
Item Weight	4.65 kg
Bag Capacity	40 Liters
Maximum Load	25 kg
Frame Material	Aluminum
Bag Material	Waterproof Fabric
Wheels	4 (Removable EVA, 360° swivel front wheels)
Handle	Adjustable (4 positions)
Brake	Safety Brake



Figure 6: CARLETT Lett450 Dimensions

This image provides a visual representation of the CARLETT Lett450 shopping trolley's key dimensions, including height, width, and depth.

WARRANTY AND SUPPORT

Specific warranty information for the CARLETT Lett450 shopping trolley is not provided in this manual. Please refer to the product packaging or the official CARLETT website for detailed warranty terms and conditions.

For technical support, spare parts, or any other inquiries, please contact CARLETT customer service through their official channels. Contact information can typically be found on the manufacturer's website or product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question