

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EnterFix](#) /

› [Sears Craftsman 139.53753 One Button Garage Door Opener Remote Transmitter 315MHz User Manual](#)

EnterFix 139.53753

Sears Craftsman 139.53753 One Button Garage Door Opener Remote Transmitter User Manual

Model: 139.53753 | Frequency: 315 MHz

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Sears Craftsman 139.53753 One Button Garage Door Opener Remote Transmitter. This remote is designed to operate a single garage door opener compatible with a 315 MHz frequency. Please read these instructions carefully before use to ensure proper functionality and safety.



Image: The Sears Craftsman 139.53753 One Button Garage Door Opener Remote Transmitter, shown with its included visor clip for convenient storage in a vehicle.

SETUP

1. Battery Installation

The remote control typically comes with a pre-installed battery. If replacement is needed, use a CR2032 coin cell battery. To replace:

1. Locate the battery compartment on the back of the remote.
2. Use a small coin or screwdriver to gently pry open the compartment cover.
3. Remove the old battery and insert the new CR2032 battery with the positive (+) side facing up.
4. Securely close the battery compartment cover.

2. Programming the Remote Control

To program your remote to your garage door opener, follow these steps. Ensure you have access to your garage door opener motor unit.

1. **Locate the Learn Button:** On your garage door opener motor unit (usually mounted on the ceiling of your garage), locate the 'Learn' button. This button is typically colored (red, orange, purple, or green) and may be behind a light cover.
2. **Activate Learn Mode:** Press and immediately release the 'Learn' button on the garage door opener. The LED indicator next to the 'Learn' button will illuminate steadily for 30 seconds, indicating the opener is in programming mode.
3. **Program the Remote:** Within 30 seconds of pressing the 'Learn' button on the opener, press and hold the button on your 139.53753 remote control.
4. **Confirm Programming:** Release the remote control button when the garage door opener's light bulb flashes or you hear two clicks. This indicates successful programming.
5. **Test the Remote:** Press the remote control button again to test if it operates the garage door.



Image: A clear front view of the Sears Craftsman 139.53753 remote, highlighting its single operational button.

OPERATING INSTRUCTIONS

To operate your garage door using the remote control:

1. Ensure you are within range of your garage door opener.
2. Press and release the single button on the remote control.
3. The garage door will begin to open or close. Pressing the button again during operation will stop the door. Pressing it a third time will reverse its direction.

MAINTENANCE

Battery Replacement

If the remote's range decreases significantly or the LED indicator (if present) does not light up when the button is pressed, the battery may need replacement. Refer to the 'Battery Installation' section under Setup for detailed instructions. Always use a fresh CR2032 coin cell battery.

Cleaning

Wipe the remote control with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the casing or internal components.

TROUBLESHOOTING

- **Remote not working:**

- Check the battery. Replace if necessary.
 - Ensure the remote is properly programmed to your garage door opener. Refer to the 'Programming the Remote Control' section.
 - Verify that the garage door opener itself has power and is functioning correctly.
- **Short operating range:**
 - Replace the battery in the remote control.
 - Check for sources of radio interference near the garage door opener or remote, such as other electronic devices.
 - Ensure the antenna on the garage door opener motor unit is hanging freely and not obstructed.
- **Garage door opens/closes unexpectedly:**
 - This could indicate interference. Try reprogramming the remote.
 - Ensure no other remote or device is accidentally activating the opener.

SPECIFICATIONS

Model: 139.53753

Frequency: 315 MHz

Buttons: One

Battery Type: CR2032 Coin Cell

Manufacturer: EnterFix

ASIN: B07YMVHTZ1

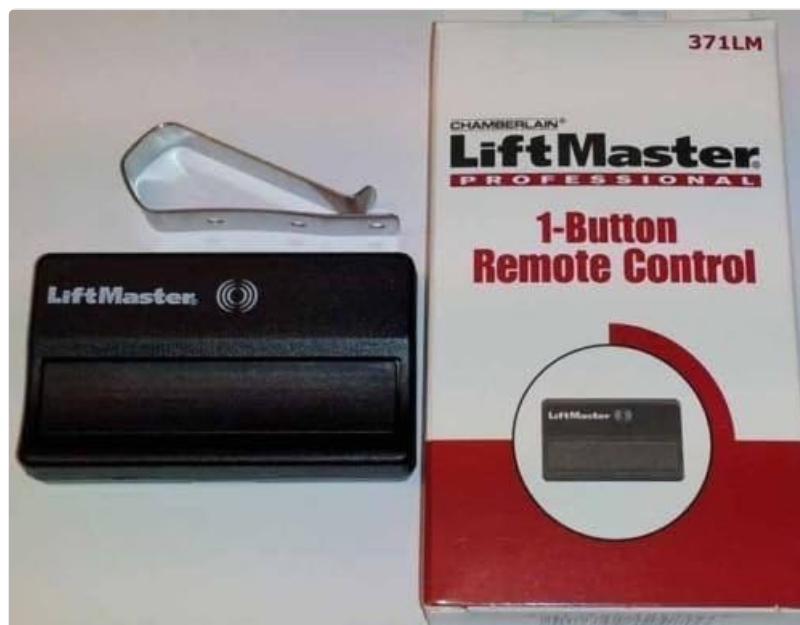


Image: The Sears Craftsman 139.53753 remote control, its visor clip, and the product packaging, illustrating the complete product contents.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Sears Craftsman 139.53753 remote control, please refer to the documentation provided at the time of purchase or contact the manufacturer, EnterFix, directly. Contact details can typically be found on the product packaging or the manufacturer's official website.

This manual is for informational purposes only. Specifications are subject to change without notice.