

[Manuals.plus](#) /

› [Spares2go](#) /

› Spares2go White Plastic Washing Machine Door Handle for Zanussi - Instruction Manual

Spares2go 04-STT-334

Spares2go White Plastic Washing Machine Door Handle for Zanussi - Instruction Manual

Model: 04-STT-334

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Spares2go White Plastic Washing Machine Door Handle. This product is designed as a direct replacement part for various Zanussi washing machine models, ensuring proper functionality and a secure door closure.

Please read these instructions carefully before attempting installation or use to ensure safety and optimal performance of the replacement part.

Compatible Models:

This door handle is compatible with the following Zanussi washing machine models:

- ADV107, ZFV1006, ZFV605, ZFV615, ZFV805, ZFV815, ZFV826, ZVF626
- ZWF1105W, ZWF1105W1, ZWF1106W, ZWF145W, ZWF155W, ZWF155W, ZWF164W, ZWF164W, ZWF165W, ZWF185W, ZWF185W1, ZWF185W2, ZWF2105W, ZWF2105W2, ZWF255W, ZWF265W, ZWF285W
- ZWG1860W, ZWG1861W, ZWG1862W, ZWG1863W, ZWG2105W, ZWG2850W, ZWG2851W, ZWG2852W, ZWG2853W, ZWG285W
- ZWS165W, ZWS185W, ZWS2105W, ZWS2125W

INSTALLATION INSTRUCTIONS

Safety First: Always unplug your washing machine from the power outlet before attempting any repairs or installations to prevent electrical shock.

Tools Required:

- Screwdriver (Phillips head or flathead, depending on your washing machine model)
- Pliers (optional, for stubborn parts)

Step-by-Step Installation:

1. **Prepare the Washing Machine:** Ensure the washing machine is unplugged and the door is open.
2. **Locate the Old Handle:** Examine the existing door handle. Most handles are secured by screws from the inside of the door or by clips.
3. **Remove the Old Handle:**
 - If screws are visible on the inside of the door panel near the handle, unscrew them.
 - Carefully pry open the inner door panel if necessary to access the handle mechanism. Be gentle to avoid damaging plastic clips.
 - Once the screws or clips are released, the old handle assembly can be removed. Note how the spring and latch mechanism are connected.
4. **Install the New Handle:**



Image 1: Front view of the replacement door handle.

- Position the new Spares2go door handle (Model: 04-STT-334) into the opening on the washing machine door.
- Ensure the latch mechanism aligns correctly with the door lock assembly.
- If there is a spring, ensure it is correctly seated to provide tension for the handle's return action.



Image 2: Rear view of the replacement door handle, highlighting mounting points.

5. Secure the New Handle:

- Re-insert and tighten any screws that secure the handle or the inner door panel.
- Ensure all clips are securely fastened if your door uses them.

6. **Test the Handle:** Gently open and close the washing machine door several times to ensure the new handle operates smoothly and the door latches securely.

7. **Reconnect Power:** Once you are satisfied with the installation, plug the washing machine back into the power outlet.

OPERATING THE DOOR HANDLE

The Spares2go replacement door handle functions identically to the original part.

- **To Open the Door:** Gently pull the handle outwards. The door should unlatch and open.
- **To Close the Door:** Push the door firmly until you hear a click, indicating that the latch has engaged and the door is securely closed. Do not force the door if it does not close easily; check for obstructions.

MAINTENANCE

To ensure the longevity and smooth operation of your door handle, follow these simple maintenance tips:

- **Cleaning:** Wipe the handle regularly with a soft, damp cloth to remove dirt and detergent residue. Avoid abrasive cleaners or solvents, as these can damage the plastic.
- **Inspection:** Periodically check the handle for any signs of wear, cracks, or looseness. Ensure the screws (if applicable) remain tight.
- **Gentle Use:** Always operate the handle gently. Avoid excessive force when opening or closing the door, as this can stress the plastic components and lead to premature failure.

TROUBLESHOOTING

If you encounter issues with your new door handle, consider the following common solutions:

- **Door Not Latching:**
 - Ensure the handle is correctly installed and all screws are tight.
 - Check for any obstructions in the door frame or around the latch mechanism.
 - Verify that the washing machine's door interlock mechanism is functioning correctly (this is part of the washing machine, not the handle itself).
- **Handle Feels Loose:**
 - Re-check the installation screws and tighten them if necessary.
 - Ensure the inner door panel is securely fastened.
- **Difficulty Opening/Closing:**
 - Inspect the handle for any foreign objects or damage.
 - Ensure the spring mechanism (if present) is correctly seated and providing tension.

If problems persist after troubleshooting, it may indicate an issue with another component of your washing machine or a need for professional assistance.

PRODUCT SPECIFICATIONS

Brand	Spares2go
Model Number	04-STT-334
Material	Plastic

Color	White
Compatibility	Zanussi Washing Machines (refer to compatible models list)

WARRANTY INFORMATION

Specific warranty details for this Spares2go replacement part may vary. Please refer to the warranty information provided at the time of purchase or contact your retailer directly for details regarding warranty coverage and terms.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding this product, please contact the retailer from whom you purchased the item. You may also visit the official Spares2go website for general information or to find contact details.

© 2023 Spares2go. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07YN3HTPY>

More documents and user manuals: <https://manuals.plus/>