

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech G203 LIGHTSYNC Wired Gaming Mouse User Manual

Logitech G 910-005790

Logitech G203 LIGHTSYNC Wired Gaming Mouse User Manual

Model: G203 (P/N: 910-005790)

INTRODUCTION

The Logitech G203 LIGHTSYNC Wired Gaming Mouse is designed to provide precise control and customizable features for an enhanced computing experience. It features an 8,000 DPI optical sensor for accurate tracking, customizable LIGHTSYNC RGB lighting with 16.8 million colors, and six programmable buttons. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your G203 mouse.

PRODUCT OVERVIEW

The G203 mouse combines a classic design with modern gaming technology. Key components include a high-precision optical sensor, a scroll wheel, and multiple programmable buttons.



Image 1: Top-down view of the Logitech G203 LIGHTSYNC Wired Gaming Mouse, showcasing its ergonomic shape and the illuminated 'G' logo.

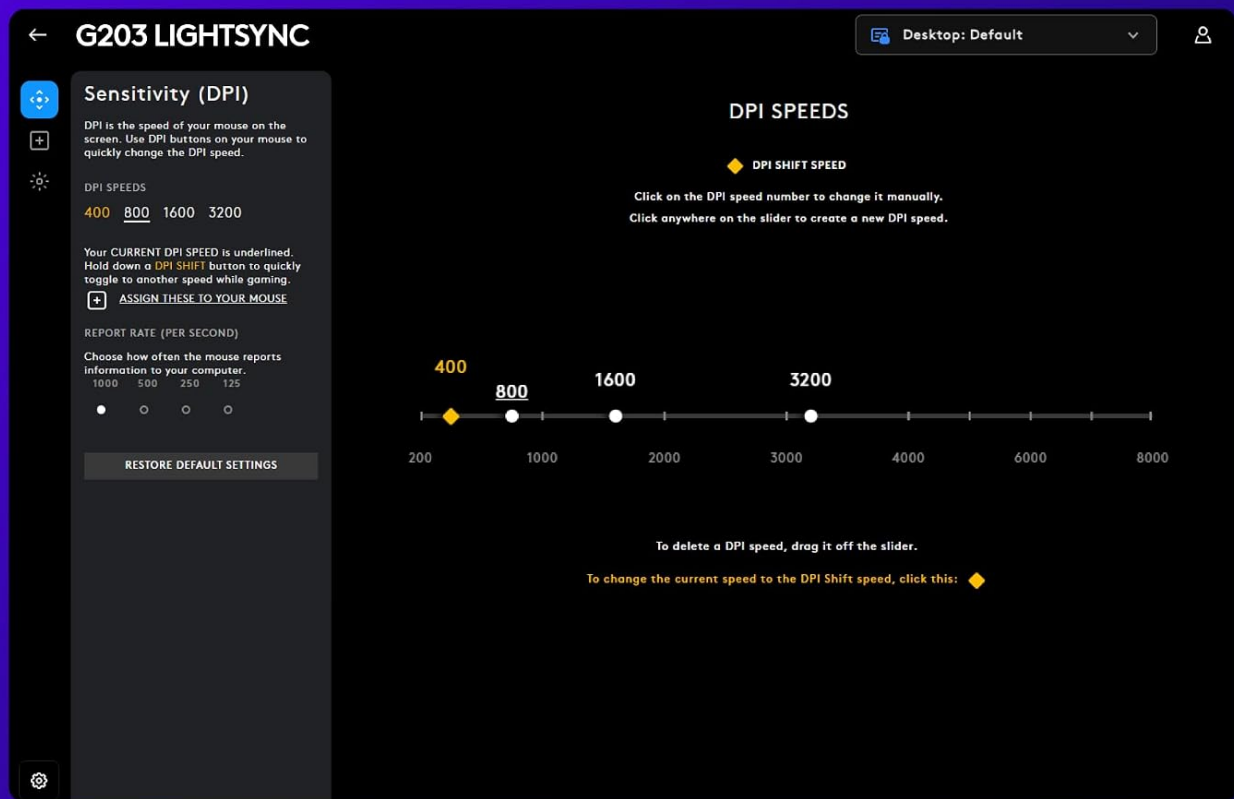


Image 2: Labeled diagram illustrating the main components of the G203 mouse, including the USB-A connection, 8K optical sensor, DPI cycle button, customizable buttons, and dual-zone color wave lighting.

SETUP

1. **Connect the Mouse:** Plug the USB-A connector of the Logitech G203 mouse into an available USB port on your PC or Mac computer. The mouse will be recognized automatically by your operating system.
2. **Install Logitech G HUB Software:** For full customization of DPI settings, button assignments, and LIGHTSYNC RGB lighting, download and install the Logitech G HUB software from the official Logitech G website. This software is compatible with Windows 7 and later, and macOS.

LOGITECH G HUB



OPTIMIZE YOUR PLAYSTYLE

Image 3: Screenshot of the Logitech G HUB software interface, showing options for adjusting DPI sensitivity and managing DPI profiles.

OPERATING INSTRUCTIONS

DPI Settings

The G203 features an 8,000 DPI optical sensor. You can cycle through up to 5 preset DPI sensitivity levels using the dedicated DPI cycle button located behind the scroll wheel. Default DPI settings are typically 400, 800, 1600, and 3200. These settings can be customized and additional profiles created using the Logitech G HUB software.

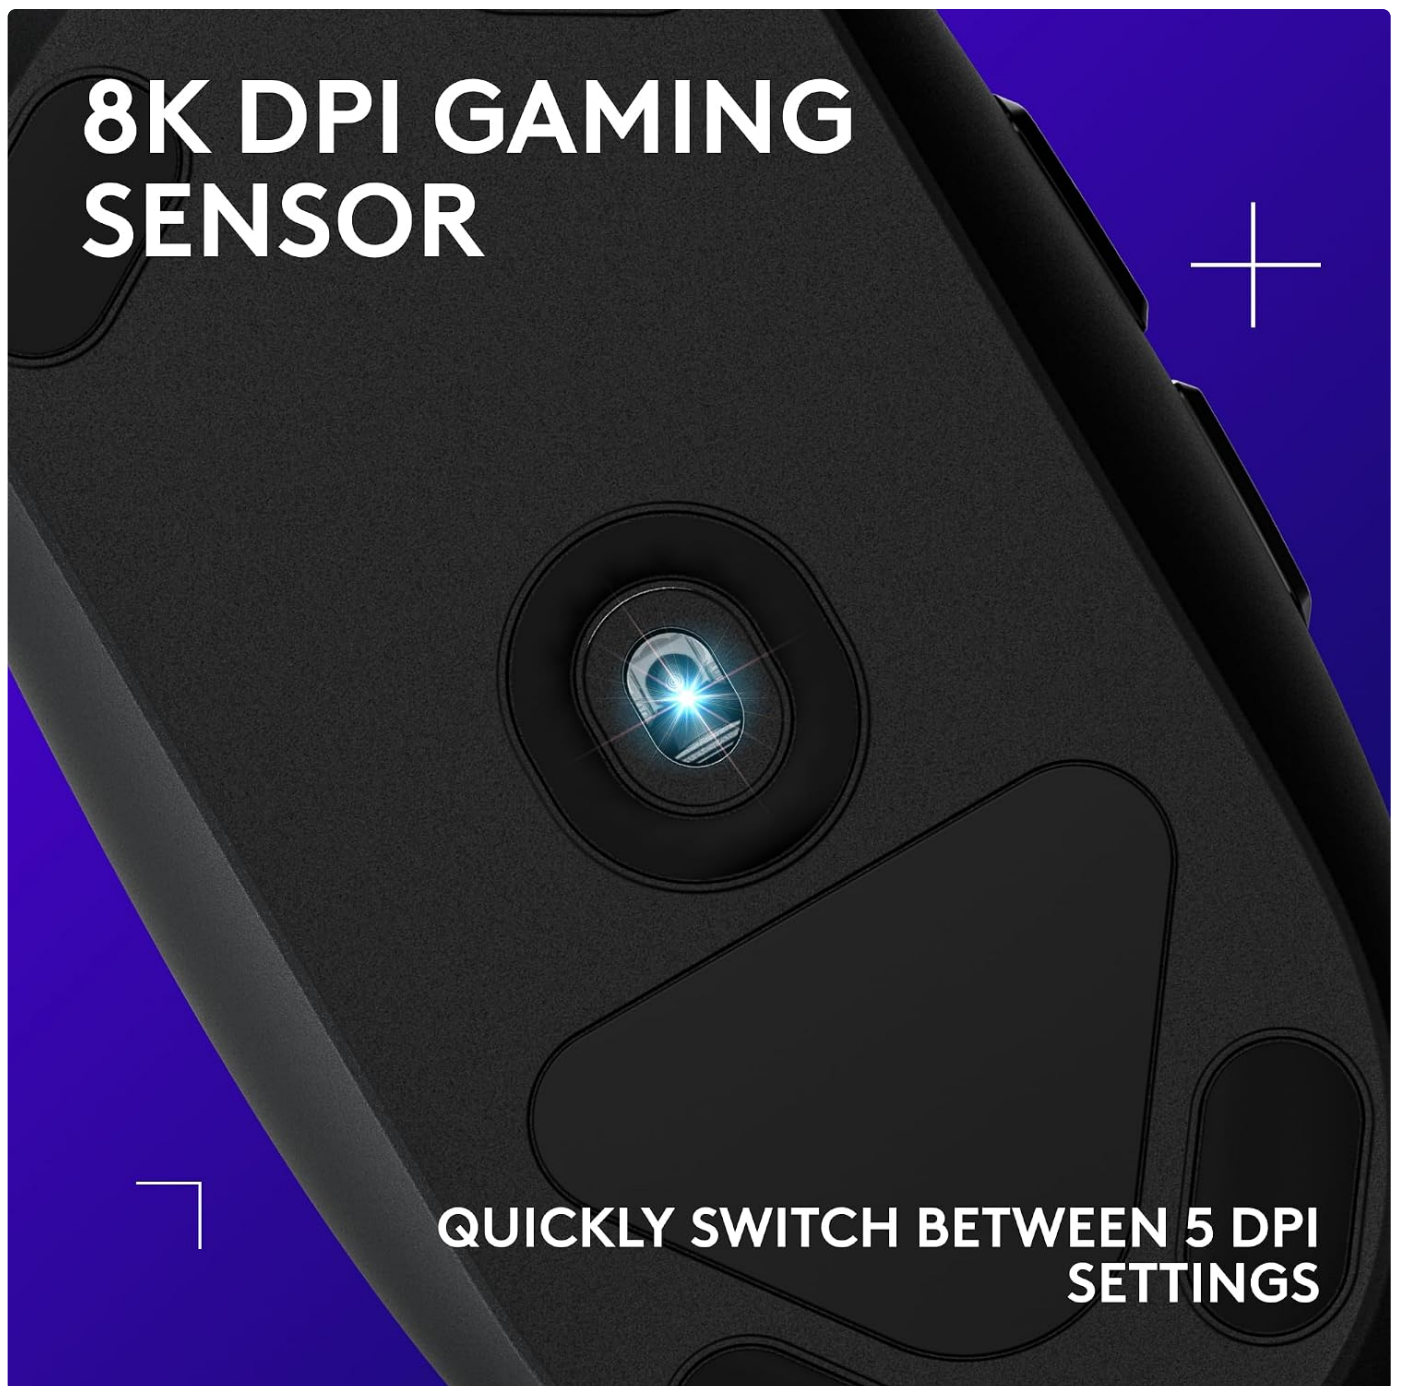


Image 4: The underside of the G203 mouse, highlighting the 8,000 DPI optical sensor for precise tracking.

Button Customization

The G203 mouse has six programmable buttons. Using the Logitech G HUB software, you can assign custom commands, macros, or key binds to each button to simplify tasks and enhance your workflow or gaming experience.

SIX PROGRAMMABLE BUTTONS



CUSTOMIZE YOUR CLICKS

Image 5: Side view of the G203 mouse, indicating the location of the six programmable buttons for user customization.

LIGHTSYNC RGB Customization

The LIGHTSYNC RGB lighting system offers a spectrum of 16.8 million colors. Through the Logitech G HUB software, you can customize lighting effects, choose from various presets, create your own designs, synchronize lighting with other LIGHTSYNC compatible devices, or set it to react to on-screen colors or audio.

LIGHTSYNC



CUSTOMIZABLE RGB LIGHTING

Image 6: Close-up view of the Logitech G203 mouse, showcasing the vibrant LIGHTSYNC RGB lighting effect around the base and the 'G' logo.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the mouse. Avoid abrasive cleaners or solvents.
- **Sensor Care:** Keep the optical sensor on the underside of the mouse clean and free of dust or debris to ensure optimal tracking performance.
- **Cable Management:** Avoid sharp bends or excessive pulling on the USB cable to prevent damage.

TROUBLESHOOTING

- **Mouse Not Responding:**
 - Ensure the USB cable is securely plugged into a working USB port.

- Try plugging the mouse into a different USB port or another computer to rule out port or system issues.
- Restart your computer.
- **Logitech G HUB Not Detecting Mouse:**
 - Ensure Logitech G HUB is updated to the latest version.
 - Restart the G HUB software or your computer.
 - If using a USB hub, ensure it is powered, as some unpowered hubs may not provide sufficient power for detection.
- **Inconsistent Tracking or Cursor Movement:**
 - Clean the optical sensor on the underside of the mouse.
 - Ensure you are using the mouse on a suitable surface (e.g., a mouse pad). Highly reflective or uneven surfaces can affect tracking.
- **Scroll Wheel Issues:**
 - If the scroll wheel is inconsistent, try cleaning around the wheel with compressed air to dislodge any debris.

For further assistance, please visit the official Logitech G support website.

SPECIFICATIONS

Feature	Detail
Brand	Logitech G
Model Number	910-005790
Connectivity Technology	USB (Wired)
Movement Detection Technology	Optical
DPI Range	Up to 8,000 DPI
Programmable Buttons	6
Lighting	LIGHTSYNC RGB (16.8 million colors)
Hardware Platform	PC, Mac
Operating System Compatibility	Windows 7 or later, macOS
Item Weight	4.9 ounces (approx. 139 grams)
Product Dimensions (LxWxH)	4.59 x 2.45 x 1.5 inches (approx. 11.66 x 6.22 x 3.81 cm)
Cable Length	6.89 ft (2.1 m)

WARRANTY AND SUPPORT

Logitech G products typically come with a limited hardware warranty. For specific warranty details, registration, and technical support, please visit the official Logitech G support website. You can find drivers, FAQs, and contact information there.

[Visit Logitech G Support](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question