

## SPÄRKEL B07YNTZCNW

# SPÄRKEL Beverage System Black Sparkling Water Maker Instruction Manual

Model: B07YNTZCNW

Brand: SPÄRKEL

## INTRODUCTION

---

Welcome to the SPÄRKEL Beverage System instruction manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your sparkling water maker. Please read this manual thoroughly before initial use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

Read all instructions before using the appliance.

- This appliance is for household use only.
- Do not immerse the appliance in water or other liquids.
- Keep out of reach of children.
- Use only SPÄRKEL Carbonators with this machine. Using unapproved carbonator material will result in system deterioration, safety risks, and void the 1 Year Warranty.
- Ensure the appliance is placed on a stable, flat surface.
- Do not operate the appliance with a damaged cord or plug.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not attempt to repair the appliance yourself. Contact customer support for assistance.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your SPÄRKEL Beverage System.



*Image: The SPÄRKEL Beverage System in black, shown with a bottle containing sparkling water infused with orange slices and mint. Fresh lemons and ice cubes are displayed next to the machine, and a glass of sparkling water with a lemon slice and mint garnish is also visible.*

# a new way to Spärkel



Image: A diagram of the SPÄRKELE Beverage System highlighting key features: 5 bubbly levels, no CO2 tank, overflow window, "don't forget to empty me!" reminder, endless possibilities, and "more than water sparkel anything."

- SPÄRKELE Beverage System Unit
- Reusable Carbonating Bottle (750ml / 25.4oz)
- SPÄRKELE Carbonator Sachets (initial supply included)
- Power Cord

## SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for potential future transport or returns.
2. **Placement:** Place the SPÄRKELE Beverage System on a clean, dry, and stable surface. Ensure adequate space around the unit for operation and ventilation.
3. **Power Connection:** Plug the power cord into the back of the unit and then into a standard electrical outlet.
4. **Initial Cleaning:** Before first use, wash the reusable carbonating bottle with warm water and mild soap. Do not wash the main unit.

# HOW TO SPÄRKEL



add water to  
back reservoir



add ingredients  
to bottle



pour carbonator



place bottle in  
system



choose level &  
press start



spritz & enjoy!

*Image: A six-step visual guide on how to use the SPÄRKEL system. Steps include adding water to the back reservoir, adding ingredients to the bottle, pouring carbonator, placing the bottle in the system, choosing a carbonation level and pressing start, and finally, spritzing and enjoying the drink.*

## OPERATING INSTRUCTIONS

1. **Fill the Reservoir:** Fill the back water reservoir with fresh, cold water up to the MAX fill line.
2. **Prepare the Bottle:** Fill the SPÄRKEL carbonating bottle with your desired beverage or water and any fresh ingredients (fruits, herbs, etc.). Do not exceed the fill line on the bottle.
3. **Add Carbonator:** Open one SPÄRKEL Carbonator sachet and pour its contents into the designated carbonator chamber on the top of the machine.
4. **Insert Bottle:** Place the prepared carbonating bottle into the system, ensuring it is securely locked in place.
5. **Select Carbonation Level:** Choose your desired carbonation level using the control panel. The system offers 5 levels:
  - **Level 1: Lightly Bubbly** (60 seconds)
  - **Level 2: Bubbly** (90 seconds)
  - **Level 3: Boldly Bubbly** (2 minutes)
  - **Level 4: An Extra Kick** (2.5 minutes)

- **Level 5: Max Level** (4 minutes) - Recommended for juices and cocktails.
6. **Start Carbonation:** Press the start button. The machine will begin the carbonation process. You will hear chimes when the process is complete.
  7. **Release Pressure & Enjoy:** Once carbonation is complete, gently press the top cap vent to release any remaining pressure before removing the bottle. Remove the bottle and enjoy your sparkling beverage.

## 5 BUBBLY LEVELS to customize your favorite drinks



- 1 **LIGHTLY BUBBLY**  
60 seconds
- 2 **BUBBLY**  
90 seconds
- 3 **BOLDLY BUBBLY**  
2 minutes
- 4 **AN EXTRA KICK**  
2.5 minutes
- \* **NEW MAX LEVEL**  
for juices & cocktails  
4 minutes

now  
30 secs  
faster!

Image: The SPÄRKEL Beverage System displaying its five carbonation levels with corresponding durations: Lightly Bubbly (60 seconds), Bubbly (90 seconds), Boldly Bubbly (2 minutes), An Extra Kick (2.5 minutes), and New Max Level for juices & cocktails (4 minutes). A note indicates the system is now 30 seconds faster.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your SPÄRKEL Beverage System.

- **External Cleaning:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Carbonating Bottle:** Wash the reusable carbonating bottle with warm water and mild soap after each use. It is not dishwasher safe.
- **Reservoir:** Empty and rinse the back water reservoir after each use. If residue builds up, clean with a soft brush and warm, soapy water.

- **Drip Tray:** The drip tray should be emptied and cleaned regularly to prevent residue buildup.
- **Seal Maintenance:** The system features improved bottle seals. Ensure they are properly seated to prevent leaks.

## designed for Spärkeling



juices



wine & cocktails



teas



water & infusions

*Image: Six SPÄRKEL bottles filled with various sparkling beverages (clear water, pink liquid, dark berries, clear water, orange juice, lemon slices) stored in a refrigerator door. Text indicates that drinks stay bubbly for up to a week.*

## TROUBLESHOOTING GUIDE

If you encounter issues with your SPÄRKEL Beverage System, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No Carbonation / Weak Carbonation	Insufficient carbonator powder; improper bottle seal; low water level in reservoir; machine not plugged in.	Ensure a full sachet of carbonator is used. Check bottle is securely sealed. Fill reservoir to MAX line. Verify power connection. Try multiple cycles if initial attempt is weak.

Problem	Possible Cause	Solution
Leaking from Bottle or Machine	Bottle not properly sealed; damaged bottle seal; overfilling the bottle.	Ensure bottle is securely twisted into place. Inspect bottle seal for damage and replace if necessary. Do not fill bottle past the indicated fill line.
Machine Not Starting	Power cord not connected; power outlet issue; machine malfunction.	Check power cord connection. Try a different outlet. Contact customer support if the issue persists.
Excessive Pressure Release	Over-carbonation; bottle not properly vented.	Use a lower carbonation level. Ensure the top cap vent is pressed to release pressure before opening the bottle.

## TECHNICAL SPECIFICATIONS

---

- **Model Name:** SPÄRKEL Beverage System
- **Model Number:** B07YNTZCNW
- **Brand:** SPÄRKEL
- **Color:** Black
- **Power Source:** Electricity
- **Operation Mode:** Automatic
- **Item Volume:** 750 Milliliters
- **Capacity:** 750 Milliliters
- **Product Dimensions:** 10"D x 5.65"W x 15"H (25.4 x 14.35 x 38.1 cm)
- **Item Weight:** 9.88 pounds (4.49 Kilograms)
- **Material:** Metal
- **UPC:** 628451077923
- **Date First Available:** October 3, 2019

## WARRANTY INFORMATION AND CUSTOMER SUPPORT

---

The SPÄRKEL Beverage System is covered by a **1 Year Replacement Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please visit the official SPÄRKEL website or contact their customer support directly.

**Important:** Using unapproved carbonator material will void the 1 Year Warranty.

For additional information and support, please visit: [SPÄRKEL Official Store on Amazon](#)