

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simply Smart Home](#) /
- › [Simply Smart Home Photoshare 8" WiFi Digital Picture Frame User Manual](#)

Simply Smart Home FSM08ES

Simply Smart Home Photoshare 8" WiFi Digital Picture Frame User Manual

Model: FSM08ES

Brand: Simply Smart Home

1. INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Simply Smart Home Photoshare 8" WiFi Digital Picture Frame. Please read this manual carefully before using your device to ensure optimal performance and longevity.



Figure 1: Simply Smart Home Photoshare 8" WiFi Digital Picture Frame.

2. SETUP GUIDE

Follow these steps for a quick and easy setup of your digital picture frame.

2.1 Unboxing and Initial Power On

1. Carefully remove the frame and all accessories from the packaging.
2. Connect the power adapter to the DC Power Port on the back of the frame.
3. Plug the power adapter into a wall outlet. The frame will automatically power on.





Figure 2: Power connection and rear ports of the frame.

2.2 Connecting to Wi-Fi

1. On the frame's touchscreen, navigate to the Wi-Fi settings.
2. Select your home Wi-Fi network from the list of available networks.
3. Enter your Wi-Fi password and confirm the connection.



Figure 3: Wi-Fi connection process.

2.3 Installing the PhotoShare Frame App

To send photos and videos to your frame, download the free PhotoShare Frame App on your smartphone or tablet.

- Search for "PhotoShare Frame" in your device's app store (available on Android and iOS).
- Install the app and follow the on-screen instructions to create an account and link your frame.



Figure 4: Using the PhotoShare Frame App for sharing.

3. OPERATING YOUR FRAME

3.1 Sending Photos and Videos

You can send photos and video clips to your frame from your phone using the PhotoShare Frame App, email, Facebook, or Google Photos.

- **Via PhotoShare Frame App:** Open the app, select the photos/videos you wish to send, choose your frame, and tap send.
- **Via Email:** Each frame has a unique email address. Attach photos/videos to an email and send them to your frame's address.
- **Via Social Media/Cloud Services:** The frame supports sharing from Facebook and Google Photos. Refer to the app for specific instructions.

Snap



Tap



Share



Parent's



Friend's



Grandparent's

Figure 5: Snap, Tap, Share - the process of sending media to your frame.

The frame has 8 GB of internal storage, capable of holding over 5,000 photos. It also features an SD Card port and a USB Port for additional storage and direct media import.

3.2 Touchscreen Navigation

The 8" HD touchscreen display allows for easy navigation through settings and photo albums. Swipe to browse photos, tap to access menus, and pinch to zoom (if supported by software version).

3.3 Frame Features

- **Photo & Video Playback:** Displays both photos and video clips with sound (built-in speaker).
- **Captions:** Add personalized captions to your photos.
- **Auto-Rotate:** Automatically adjusts photo orientation for both landscape and portrait display.
- **Auto Dimming:** Features a light sensor to adjust screen brightness based on ambient light.
- **Clock & Calendar:** Displays time and date.
- **Weather:** Provides local weather updates.

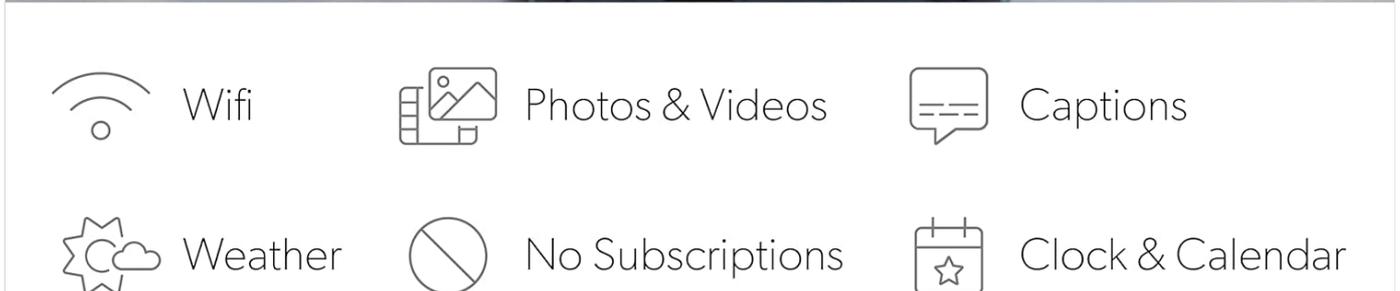


Figure 6: Key features of the Simply Smart Home Photoshare Frame.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your digital picture frame.

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the touchscreen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals.
- **Cleaning the Frame:** Wipe the frame with a dry, soft cloth.
- **Placement:** Place the frame on a stable, flat surface away from direct sunlight, excessive heat, or moisture. Ensure adequate ventilation around the device.
- **Power Off:** If not in use for an extended period, it is recommended to power off the frame and unplug it from the power source.

5. TROUBLESHOOTING

If you encounter issues with your Simply Smart Home Photoshare Frame, refer to the following common troubleshooting steps.

5.1 No Power / Screen Blank

- Ensure the power adapter is securely connected to both the frame and a working wall outlet.
- Try plugging the adapter into a different outlet to rule out a power source issue.
- Check if the power button on the back of the frame is pressed.

5.2 Cannot Connect to Wi-Fi

- Verify that your Wi-Fi router is on and functioning correctly.
- Ensure you are entering the correct Wi-Fi password. Passwords are case-sensitive.
- Move the frame closer to your Wi-Fi router to improve signal strength.
- Restart both your Wi-Fi router and the digital frame.

5.3 Photos Not Appearing

- Confirm that the frame is connected to Wi-Fi.
- Check the PhotoShare Frame App to ensure photos were successfully sent to the correct frame ID.
- Verify that the frame's internal storage is not full. You can manage storage via the frame's settings or the app.
- If using an SD card or USB drive, ensure it is properly inserted and the files are in a supported format (e.g., JPEG, PNG for photos; MP4 for videos).

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.2 x 9.9 x 0.99 inches
Item Weight	2.05 pounds
ASIN	B07YNXBNJT
Item Model Number	FSM08ES
Resolution	1080p
Screen Size	8 Inches
Connectivity Technology	Wi-Fi
Color	Espresso
Internal Storage	8 GB (Holds 5,000+ Photos)
Supported External Storage	SD Card, USB Drive

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Simply

Smart Home website.

If you require further assistance or have questions not covered in this manual, please contact Simply Smart Home customer support. They offer US-based customer support.

- **Official User Guide (PDF):** [Download User Guide](#)
- **Official User Manual (PDF):** [Download User Manual](#)
- **Simply Smart Home Store:** [Visit Brand Store on Amazon](#)