



Manuals.plus /

› Beitel /

› Beitel X90 Cordless Landline Phone User Manual

Beitel X90

Beitel X90 Cordless Landline Phone User Manual

Model: X90

INTRODUCTION

Welcome to the user manual for your new Beitel X90 2.4Ghz Cordless Landline Phone. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your device. The Beitel X90 offers a range of features including Caller ID Display, a 50-contact phonebook, up to 8 hours of talk time, and convenient functions like alarm, auto answer, mute, and flash.



Image: The Beetel X90 cordless handset resting in its charging base unit.

PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- Cordless Handset
- Base Unit
- Line Cord
- Coil Cord

- User Manual (this document)
- 2 AAA NiMH Batteries (included)

SETUP GUIDE

1. Battery Installation and Charging

1. Locate the battery compartment on the back of the cordless handset.
2. Insert the two AAA NiMH batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.
4. Place the handset on the base unit. The charging indicator on the handset or base should illuminate, indicating that the batteries are charging.
5. Allow the handset to charge for at least 12-15 hours before initial use to ensure full battery capacity.

2. Connecting the Base Unit

1. Connect one end of the line cord to the "LINE" jack on the back of the base unit.
2. Connect the other end of the line cord to your telephone wall jack.
3. Connect the power adapter (if separate, not explicitly mentioned but implied for base power) to the "DC IN" jack on the base unit and plug it into a standard electrical outlet.
4. Ensure all connections are secure.

OPERATING INSTRUCTIONS

Basic Call Functions

- **Making a Call:** Pick up the handset or press the **TALK** button. Dial the desired number.
- **Answering a Call:** When the phone rings, pick up the handset or press the **TALK** button.
- **Ending a Call:** Place the handset back on the base unit or press the **END** button.
- **Speakerphone:** During a call, press the **SPEAKER** button to activate the speakerphone. Press again to return to handset mode.
- **Mute Function:** During a call, press the **MUTE** button to temporarily silence your microphone. Press again to unmute.
- **Flash Function:** Use the dedicated **FLASH** button for call waiting or transferring calls (if supported by your service provider).

Phonebook Management

The Beitel X90 allows you to store up to 50 numbers with names in its phonebook.

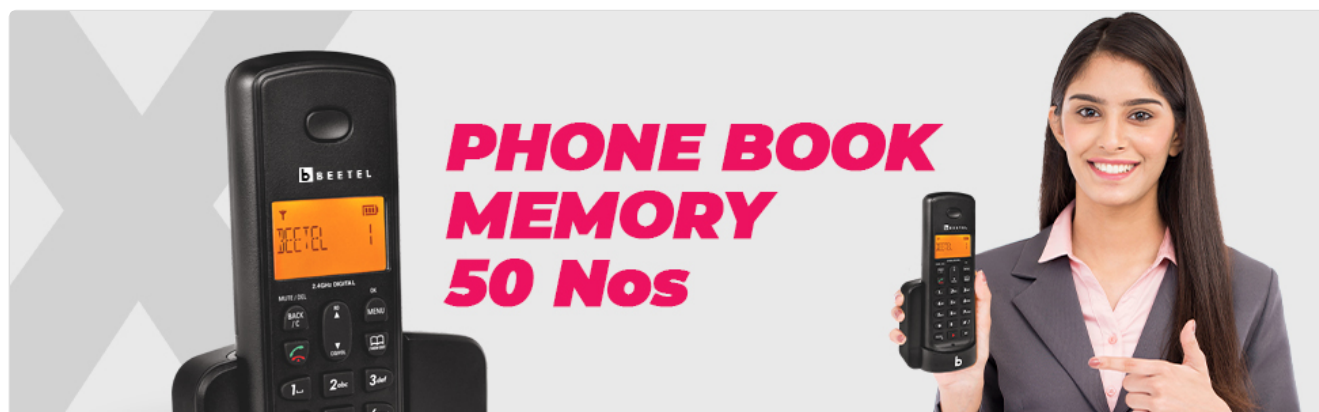


Image: The Beetel X90 features a phonebook with a capacity of 50 entries.

- **Adding a Contact:** Navigate to the Phonebook menu, select "Add New", enter the name and number, then save.
- **Searching/Dialing from Phonebook:** Access the Phonebook, scroll through entries, and press **TALK** to dial.

Caller ID and Call History

The 1-Line (14-segment Alphanumeric) LCD display with Orange Backlight shows Caller ID information (if subscribed to service). The phone stores up to 40 incoming calls with missed call indication.

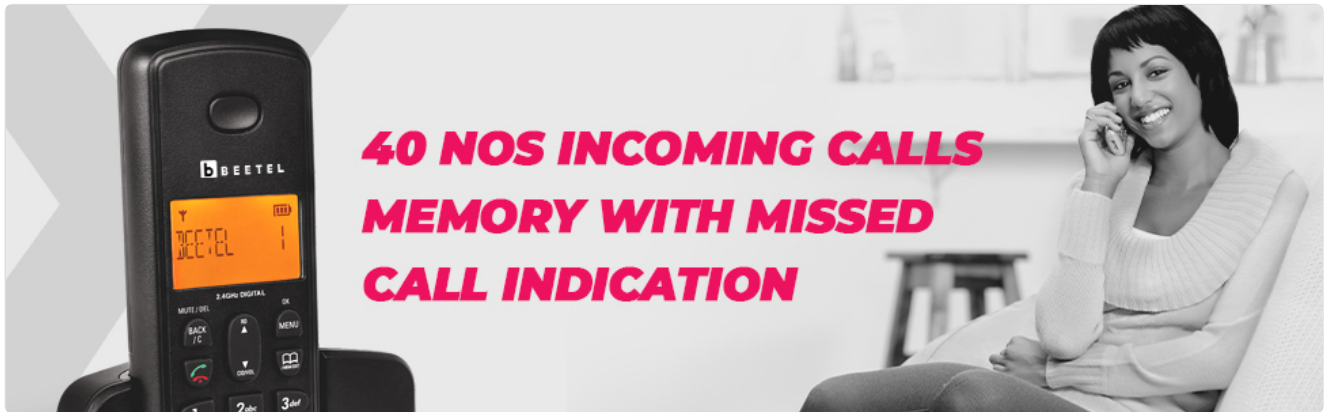


Image: The Beetel X90 stores up to 40 incoming calls and indicates missed calls.

- **Viewing Call History:** Press the **CALL LOG** or **CID** button to view recent calls.
- **Redialing:** Press the **REDIAL** button to dial the last number called.

Ringtones and Alarm

- The phone offers 5 normal and 5 polyphonic ringtones. These can be selected via the menu.
- An alarm function is available and can be set through the handset menu.

Additional Features

- **Auto Answer ON/OFF:** This feature allows the phone to automatically answer incoming calls after a set number of rings. This can be toggled in the settings.
- **Out of Range Warning Tone:** The handset will emit a warning tone if it moves too far from the base unit, indicating a loss of signal.
- **Handset Keypad Lock/Unlock:** The keypad can be locked to prevent accidental dialing. Refer to the menu for instructions on how to activate and deactivate this feature.

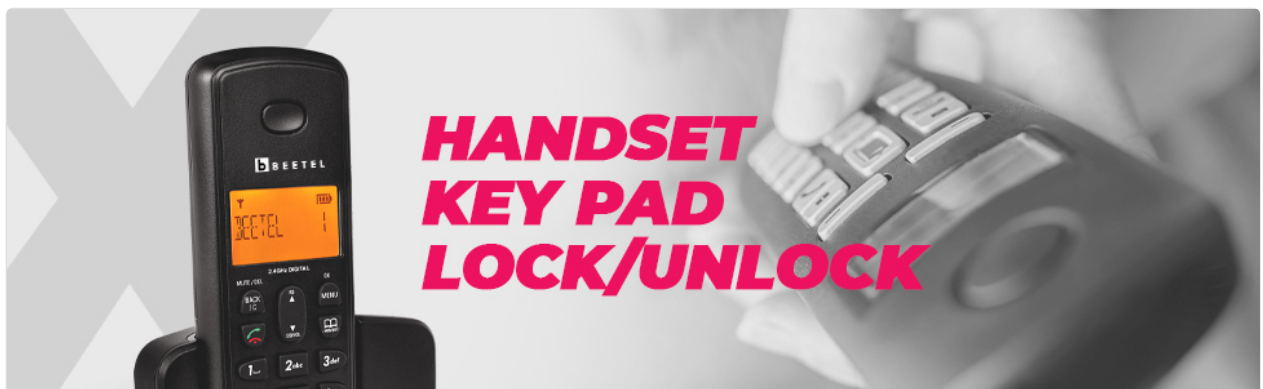 


Image: The Beetel X90 features a keypad lock/unlock function for security.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the handset and base unit. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid overcharging by removing the handset from the charger once fully charged if not in use for extended periods. If the phone will not be used for a long time, remove the batteries.
- **Placement:** Place the base unit in a central location, away from other electronic devices that may cause interference (e.g., Wi-Fi routers, microwaves).

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone / Cannot make or receive calls	Line cord not connected; Power adapter not connected; Handset out of range or not charged.	Ensure line cord and power adapter are securely connected. Place handset on base to charge. Move closer to the base unit.
Low ringing volume	Ringer volume set too low.	Adjust the ringer volume through the handset menu settings.
Poor call clarity / Static / Interference	Interference from other 2.4Ghz devices (e.g., Wi-Fi routers); Handset too far from base; Obstructions.	Move the base unit away from other electronic devices. Ensure handset is within range. Avoid physical obstructions between handset and base.
Handset battery drains quickly	Batteries not fully charged; Old or faulty batteries.	Ensure initial charge of 12-15 hours. Replace batteries if they are old or no longer hold a charge.
"Out of Range" warning	Handset is too far from the base unit.	Move the handset closer to the base unit.



Image: The Beitel X90 provides a low battery warning tone to alert users.

SPECIFICATIONS

Feature	Detail
Brand	Beetel
Model Name	X90 (also referred to as X78_Black in some specifications)
Telephone Type	Cordless
Frequency	2.4 GHz
Display Type	1-Line (14-segment Alphanumeric) LCD with Orange Backlit
Phonebook Capacity	50 numbers with name
Call History Capacity	40 incoming calls with missed call indication
Ringtones	5 Normal, 5 Polyphonic
Talk Time	Up to 8 hours
Batteries	2 x AAA NiMH (included)
Material	Plastic
Product Dimensions	16 x 6.6 x 9.5 cm
Item Weight	360 g
Country of Origin	China

WARRANTY AND SUPPORT

Your Beetel X90 Cordless Landline Phone comes with a manufacturer's warranty:

- **Device Warranty:** 1 year from the date of purchase.
- **In-box Accessories (including batteries) Warranty:** 6 months from the date of purchase.

For warranty claims, technical support, or service inquiries, please contact Beetel Teletech Limited. You can find more information and contact details on the official Beetel store page: [Beetel Official Store](#).