

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [KitchenAid](#) /
- › [KitchenAid KQ908 Glass Surface Digital Kitchen Scale User Manual](#)

## KitchenAid KQ908

# KitchenAid KQ908 Glass Surface Digital Kitchen Scale User Manual

Model: KQ908

## PRODUCT OVERVIEW

---

The KitchenAid KQ908 Digital Kitchen Scale features a sleek glass surface with stainless steel accent trim. It includes an oversized knob for setting units of measurement and a large 1.0" backlit display for easy reading. The scale offers an add & weigh Tare function for zeroing out container weights or weighing multiple ingredients. It conveniently converts between dry and liquid measurements.



Image: KitchenAid KQ908 Digital Kitchen Scale, black glass surface with a silver base and a central knob, displaying '0.0'.

## Key Features

- **Maximum Capacity:** Measures dry ingredients up to 11 LB (0.1 Oz increments) or 5000 grams (1 gram increments). Measures liquid ingredients up to 5000 millilitres (1 millilitre increments) or 176 FL Oz (0.1 FL Oz increments).
- **Rotating Knob Design:** Inspired by KitchenAid countertop electric ovens, the knob allows for unit selection and also functions as a Tare/Power On/Off button.
- **Tare Function:** Enables weighing multiple ingredients in one container by resetting the scale to zero after each addition.
- **Battery Operated:** Requires three (3) AAA batteries (included). Features an auto shut-off after 3 minutes of inactivity to conserve battery life.
- **Easy to Clean:** The glass surface is naturally stain and odor-free. Hand wash only; do not immerse in water or use a dishwasher. Wipe with a damp cloth and dry thoroughly.

## SETUP INSTRUCTIONS

---

1. **Unpack the Scale:** Carefully remove the KitchenAid KQ908 Digital Kitchen Scale from its packaging.
2. **Install Batteries:** Locate the battery compartment on the underside of the scale. Open the compartment and insert three (3) AAA batteries, ensuring correct polarity. Close the compartment securely.
3. **Placement:** Place the scale on a flat, stable, and level surface to ensure accurate measurements. Avoid placing it near heat sources, strong vibrations, or drafts.
4. **Initial Power On:** Press the central rotating knob to turn on the scale. The display will illuminate and show "0.0" or "0g".

# KitchenAid®

## DIGITAL GLASS TOP KITCHEN SCALE

SMART PROGRAMMING CONVERTS BETWEEN  
LIQUID AND DRY MEASUREMENTS

INNOVATIVE ROTATING KNOB  
SETS CAPACITY INCREMENTS

WEIGH MULTIPLE INGREDIENTS INTO  
ONE CONTAINER WITH TARE FEATURE



KQ908

Image: KitchenAid KQ908 Digital Kitchen Scale packaging, illustrating the product and its features.

## OPERATING INSTRUCTIONS

## **1. Power On/Off**

- To turn on the scale, press the central rotating knob.
- To turn off the scale, press and hold the central rotating knob for a few seconds until the display turns off. The scale will also auto shut-off after 3 minutes of inactivity.

## **2. Selecting Units of Measurement**

- Rotate the central knob to cycle through the available units: pounds/ounces (lb oz), grams (g), fluid ounces (fl oz), and millilitres (ml).
- The selected unit will be displayed on the screen.

## **3. Weighing Ingredients (Tare Function)**

1. Place an empty container on the scale platform. The display will show the weight of the container.
2. Press the central rotating knob once to activate the Tare function. The display will reset to "0.0" or "0g".
3. Add your first ingredient to the container. The display will show the weight of the ingredient.
4. To add another ingredient, press the central rotating knob again to tare the scale to zero. Add the next ingredient. Repeat this process for all ingredients.
5. To view the total weight of all ingredients and the container, remove the container from the scale. The display will show a negative value representing the total weight.



Image: KitchenAid KQ908 Digital Kitchen Scale displaying a weight of 0.31 lb with sliced green peppers on the scale, demonstrating ingredient measurement.

## MAINTENANCE

---

- **Cleaning:** The glass surface is naturally stain and odor-free. To clean, wipe the scale with a damp cloth and dry thoroughly immediately after use.
- **Do Not Immerse:** Never immerse the scale in water or place it in a dishwasher, as this will damage the electronic components.
- **Battery Replacement:** When the battery indicator appears on the display, replace the three (3) AAA batteries. Ensure proper polarity during replacement.
- **Storage:** Store the scale in a dry place away from extreme temperatures and humidity.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity or replace with new AAA batteries.
Inaccurate readings.	Scale not on a flat, stable surface; overloaded; or external interference.	Ensure scale is on a level surface. Do not exceed 11 lb / 5000g capacity. Avoid drafts or vibrations.
Display shows "Err" or "OL".	Scale is overloaded.	Remove items immediately. Do not exceed maximum capacity.
Display shows "Lo".	Low battery power.	Replace batteries.

## SPECIFICATIONS

- **Model Number:** KQ908
- **Brand:** KitchenAid
- **Color:** Black
- **Material:** Glass
- **Weight Limit:** 11 Pounds (5000 grams)
- **Readout Accuracy:** 0.1 Ounces (1 gram)
- **Liquid Measurement:** Up to 176 Fluid Ounces (5000 millilitres)
- **Special Features:** Auto Shut Off, Backlit Display, Tare Function
- **Power Source:** 3 x AAA Batteries (included)
- **Product Dimensions:** 2.07 x 10.19 x 8.35 inches
- **Item Weight:** 1.18 Pounds
- **Manufacturer:** Lifetime Brands Inc.
- **Date First Available:** October 3, 2019
- **UPC:** 077784035474, 822093017839



Image: Side profile of the KitchenAid KQ908 Digital Kitchen Scale, showcasing its slim design.

## WARRANTY & SUPPORT

### Warranty Information

KitchenAid products are warranted to be free from defects in material and workmanship. For one year from the date of purchase, under normal use and care, KitchenAid will replace this product free of charge if it is found to be defective in material or workmanship. Additionally, from year two through the life of this product, any product found to be defective under conditions of normal use and care will be repaired at no charge or replaced with the same item or an item of equal or better value. Please refer to the product packaging for more detailed warranty information.



KitchenAid products are warranted to be free from defects in material and workmanship. For one year from the date of purchase, under normal use and care, KitchenAid will replace this product free of charge, if it is found to be defective in material or workmanship. In addition, from year two through the life of this product, any product found to be defective under conditions of normal use and care will be repaired at no charge or replaced with the same item or an item of equal or better value. See packaging for more information.

Image: KitchenAid warranty statement, detailing coverage for defects in material and workmanship.

## Customer Support

For further assistance, product inquiries, or to claim warranty service, please visit the official KitchenAid website or contact their customer support directly. Refer to your product packaging for specific contact details.