

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Armor3](#) /
- › [Armor3 Nuplay Wired Game Controller M07224-BK Instruction Manual](#)

Armor3 M07224-BK

Armor3 Nuplay Wired Game Controller Instruction Manual

Model: M07224-BK

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Armor3 Nuplay Wired Game Controller. This controller is designed for use with PlayStation 3 consoles, personal computers (PC), and Mac systems, offering a versatile gaming experience.

KEY FEATURES

- Dual analog sticks with non-slip thumb grips for precise control.
- Integrated Home button for system navigation.
- Force feedback functionality for immersive gameplay.
- Two shoulder buttons (L1, R1) and two analog triggers (L2, R2).
- Four digital buttons (Triangle, Circle, Cross, Square) and a D-pad for directional input.
- Textured pads on controller handles for enhanced grip.
- Wired USB connection for reliable performance.

SETUP INSTRUCTIONS

The Armor3 Nuplay controller utilizes a standard USB connection for compatibility across various platforms.

Connecting to PlayStation 3:

1. Ensure your PlayStation 3 console is powered on.
2. Locate an available USB port on the front of your PS3 console.
3. Plug the USB connector of the Armor3 Nuplay controller into the USB port.
4. The controller should be automatically recognized by the PS3 system. Press the Home button to assign a controller number if prompted.

Connecting to PC/Mac:

1. Power on your PC or Mac computer.

2. Locate an available USB port on your computer.
3. Plug the USB connector of the Armor3 Nuplay controller into the USB port.
4. Your operating system should automatically detect and install the necessary drivers. This process may take a few moments.
5. Once installed, the controller will be ready for use with compatible games and applications. You may need to configure controller settings within individual game menus.



Image: The Armor3 Nuplay Wired Game Controller shown with its retail packaging, highlighting the product's design and wired connection.



Image: A detailed view of the Armor3 Nuplay Wired Game Controller, showcasing its dual analog sticks, D-pad, face buttons, shoulder buttons, and USB cable.

OPERATING THE CONTROLLER

The Armor3 Nuplay controller features a standard layout for intuitive gameplay. Familiarize yourself with the button functions:

- **Dual Analog Sticks:** Used for movement and camera control. Pressing them down often acts as additional buttons (L3/R3).
- **D-Pad (Directional Pad):** Provides precise digital directional input, commonly used for menu navigation or specific game actions.
- **Face Buttons (Triangle, Circle, Cross, Square):** Primary action buttons for in-game commands.
- **Shoulder Buttons (L1, R1):** Typically used for quick actions or weapon selection.
- **Analog Triggers (L2, R2):** Pressure-sensitive buttons often used for acceleration, braking, or aiming/firing in games.

- **Home Button:** On PS3, this button accesses the XMB (XrossMediaBar) menu. On PC/Mac, its function may vary depending on the game or software.
- **SELECT/START Buttons:** Used for pausing games, accessing menus, or specific in-game functions.
- **Force Feedback:** The controller will vibrate during gameplay to enhance immersion, reacting to in-game events like collisions or explosions.

For optimal performance, ensure your game's controller settings are configured to recognize and utilize all features of the Armor3 Nuplay controller.

CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharply bending or twisting the USB cable. Do not pull the cable to disconnect the controller; always grasp the USB plug.
- **Avoid Liquids:** Keep the controller away from liquids to prevent internal damage.

TROUBLESHOOTING

Problem	Possible Solution
Controller not recognized by PS3/PC/Mac.	<ul style="list-style-type: none"> ◦ Ensure the USB cable is securely connected to both the controller and the console/computer. ◦ Try a different USB port. ◦ Restart your console or computer. ◦ On PC/Mac, check device manager/system information to see if the controller is detected.
Force feedback (vibration) is not working.	<ul style="list-style-type: none"> ◦ Verify that the game you are playing supports force feedback. ◦ Check in-game settings or system settings to ensure vibration is enabled. ◦ Ensure the controller is properly connected.
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none"> ◦ Disconnect and reconnect the controller. ◦ Test the controller with a different game or application to isolate the issue. ◦ Ensure no debris is lodged around the buttons or sticks.

SPECIFICATIONS

Model Number: M07224-BK

Manufacturer: Armor3

Connectivity: Wired USB

Compatibility: PlayStation 3, PC (Windows Vista, XP), Mac

Weight: 8.8 ounces (approximately 249 grams)

Package Dimensions: 6.57 x 5.67 x 4.72 inches

Features: Dual analog sticks, D-pad, 4 digital buttons, 2 analog triggers, 2 shoulder buttons, Home button, force feedback.

WARRANTY INFORMATION

For specific warranty details regarding your Armor3 NuPlay Wired Game Controller, please refer to the warranty card included with your purchase or visit the official Armor3 website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Armor3 customer support. Contact information can typically be found on the product packaging or the official Armor3 website.



© 2025 Armor3. All rights reserved. Armor3 and NuPlay are trademarks of their respective owners.

Related Documents - M07224-BK

	<p>Armor3 3-in-1 Lightning/Type C/Micro to HDTV Adapter Quick Start Guide Quick start guide for the Armor3 3-in-1 adapter, detailing how to connect Lightning, Type C, and Micro USB devices to an HDTV display for both Android and iOS devices.</p>
	<p>Speedlink RAIT Gamepad SL-650010-BK User Guide and Setup Comprehensive guide for the Speedlink RAIT Gamepad (SL-650010-BK), covering software installation, connection settings for PC, PlayStation 3, and Nintendo Switch, XInput/DirectInput modes, rapid fire function, and safety instructions.</p>
	<p>MST RMX EX S PRO RC Drift Car Upgrade Guide Official upgrade guide for the MST RMX EX S PRO 1/10 scale RC RWD high-performance drift car, detailing recommended parts and comparisons for enhanced performance.</p>
	<p>MST RMX 2.5 RTR 1/10 Scale RC Drift Car Exploded Manual and Upgrade Guide Comprehensive exploded view manual and upgrade guide for the MST RMX 2.5 RTR 1/10 scale RC Drift Car. Includes part numbers, specifications, and assembly instructions.</p>
	<p>Panduit MP75 PXE Series Mobile Printer - Product Bulletin Detailed product bulletin for the Panduit MP75 PXE Series Mobile Printer, covering its features, specifications, and ordering information for various label cassette types, including comparisons with other models. Learn about its network and electrical functionality.</p>



[VX Gaming Precision Series Wireless Controller VX-133-BK Instruction Manual](#)

Detailed instruction manual for the VX Gaming Precision Series Wireless Xbox Controller (VX-133-BK), covering setup, features, specifications, functions, charging, pairing for Xbox, PS3, and PC, safety precautions, environmental disposal, and warranty information.