



[Manuals.plus](#) /

> [Honeywell Home](#) /

> Honeywell Home THR840DEU DT2 Wired Thermostat User Manual

## Honeywell Home THR840DEU

# Honeywell Home THR840DEU DT2 Wired Thermostat User Manual

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Honeywell Home THR840DEU DT2 Wired Thermostat. Please read carefully before use to ensure proper functionality and safety.

## 1. SETUP AND INSTALLATION

This section guides you through the initial setup and installation of your THR840DEU DT2 Wired Thermostat.

### 1.1 Unpacking and Components

Carefully unpack the thermostat and verify that all components are present:

- 1 x DT2 thermostat with wall bracket
- 1 x Quick start manual
- 1 x Safety and warranty regulations
- 1 x Conformity statement
- 1 x Mounting material

### 1.2 Mounting the Thermostat

Choose a suitable location for the thermostat, typically on an interior wall, away from direct sunlight, drafts, or heat sources that could affect temperature readings. The thermostat should be mounted at a height of approximately 1.5 meters (5 feet) from the floor.



**Figure 2:** Excerpt from the multi-language installation guide, illustrating wiring and mounting procedures. Consult the full guide for detailed instructions.

## 1.4 Battery Installation

The thermostat is battery-operated. To install or replace batteries:

1. Gently open the front cover of the thermostat.
2. Insert the required batteries (typically AA or AAA, refer to the quick start guide for exact type) into the battery compartment, observing the correct polarity (+/-).
3. Close the front cover securely.

## 2. OPERATING INSTRUCTIONS

This section explains how to use your Honeywell Home THR840DEU DT2 Thermostat for daily temperature control.



**Figure 3:** Front panel of the THR840DEU DT2 Thermostat, featuring the display and control buttons.

### 2.1 Display Overview

The large, high-contrast display shows the current room temperature and the set target temperature. Indicators for ECO mode and battery status may also be present.



Figure 4: Key features and benefits of the DT2R Thermostat, including ECO Mode and Installer Mode.

## 2.2 Setting the Temperature

Use the **Up** (▲) and **Down** (▼) arrow buttons located on the right side of the thermostat to adjust your desired target temperature. The display will show the new setpoint briefly before returning to the current room temperature.

## 2.3 ECO Button Functionality

The **ECO** button (green leaf icon) allows you to temporarily switch to an energy-saving target temperature. This is useful when the house is empty or during periods when a lower temperature is acceptable.

- Press the **ECO** button once. The display will show the ECO temperature.
- You can adjust the duration of the ECO mode from 1 hour to 24 hours in 1-hour increments using the Up/Down buttons.
- The thermostat will revert to the normal set temperature after the set ECO duration expires.

## 2.4 Heating or Cooling Control

The thermostat provides control for both heating and cooling systems. The intelligent self-learning function (TPI) helps maintain precise temperature control within the target range of 5°C to 35°C.

## 2.5 Installer Mode

An Installer Mode is available for advanced configuration and adaptation of the thermostat to specific system requirements. Accessing and adjusting settings in Installer Mode should only be done by qualified personnel.

## 3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your thermostat.

### 3.1 Battery Replacement

When the low battery indicator appears on the display, replace the batteries promptly to avoid interruption of service. Follow the steps outlined in Section 1.4 for battery installation.

### 3.2 Cleaning

To clean the thermostat, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the unit.

## 4. TROUBLESHOOTING

If you encounter issues with your thermostat, refer to the following common problems and solutions.

- **No Display / Unit Not Responding:**  
Check the batteries. Replace them if they are low or depleted. Ensure they are inserted with correct polarity.
- **Incorrect Temperature Reading:**  
Ensure the thermostat is not exposed to direct sunlight, drafts, or heat sources (e.g., lamps, appliances) that could interfere with its temperature sensor.
- **Heating/Cooling System Not Activating:**  
Verify that the target temperature is set correctly (above current for heating, below for cooling). Check the wiring connections (refer to Section 1.3). If the issue persists, consult a qualified electrician or HVAC technician.
- **ECO Mode Not Functioning:**  
Ensure the ECO mode duration is set correctly. If the issue persists, try resetting the thermostat (refer to the quick start guide for reset procedures).

For persistent problems or issues not covered here, it is recommended to contact a qualified technician or Honeywell Home customer support.

## 5. SPECIFICATIONS

Key technical specifications for the Honeywell Home THR840DEU DT2 Wired Thermostat:

- **Model:** THR840DEU
- **Connectivity:** Wired
- **Temperature Control Range:** 5°C to 35°C
- **Control Type:** On/Off (Digital)
- **Power Source:** Battery Powered

- **Voltage (Controlled System):** Up to 230 Volts (refer to wiring diagrams for specific load ratings)
- **Special Features:** Intelligent self-learning function (TPI), ECO button, Installation mode, Large high-contrast display.
- **Dimensions:**
  - Width: 90 mm
  - Height: 92 mm
  - Depth: 29 mm



**Figure 5:** Dimensions of the THR840DEU DT2 Thermostat.

## 6. WARRANTY INFORMATION

Your Honeywell Home THR840DEU DT2 Thermostat is covered by a manufacturer's warranty. The specific terms and duration of the warranty are detailed in the warranty regulations document included with your product packaging. Please retain your proof of purchase for any warranty claims.

For detailed warranty information, please refer to the official Honeywell Home website or contact their customer service.

## 7. SUPPORT

---

If you require further assistance, technical support, or have questions regarding your Honeywell Home THR840DEU DT2 Thermostat, please contact Honeywell Home customer support.

- Visit the official Honeywell Home website for support resources, FAQs, and contact information.
- Refer to the quick start manual for additional troubleshooting tips and detailed diagrams.