

Casio CT-S200

Casio CT-S200 Casiotone 61-Key Portable Keyboard User Manual

Model: CT-S200

1. INTRODUCTION

The Casio CT-S200 Casiotone is a slim and stylish 61-key portable keyboard designed for beginners and enthusiasts. It offers a user-friendly interface with a clear LCD display and intuitive controls, making it accessible for learning and playing music.

This instrument features 400 tones and 77 rhythms, including 13 Indian tones and 14 Indian rhythms, providing a versatile range of musical options. The built-in 2W+2W speakers deliver ample sound output for practice sessions. For connectivity, the CT-S200 includes a class-compliant MIDI port (USB to Host: Micro-B), allowing connection to Mac, PC, iOS, or Android devices without requiring additional drivers.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Casio CT-S200 keyboard.

2. SETUP

2.1 Unboxing and Contents

Carefully remove all items from the packaging. The box should contain the following:

- 1 x Casio CT-S200 Keyboard
- 1 x Wire Music Stand
- 1 x AC Adaptor (LAD-6)
- 1 x User Manual (this document)
- Warranty terms and conditions



Image: Contents of the Casio CT-S200 package, including the keyboard, music rest, and AC adaptor.

2.2 Power Supply

The CT-S200 can be powered using the included AC adaptor (LAD-6) or by batteries. For AC power, connect the adaptor to the keyboard's power input jack and then to a standard wall outlet. For battery operation, insert six AA-size alkaline batteries (not included) into the battery compartment located on the underside of the keyboard, ensuring correct polarity.

2.3 Music Stand Installation

Insert the wire music stand into the designated slots on the top panel of the keyboard. Ensure it is securely seated to hold sheet music or a tablet.

2.4 Initial Power On

Press the power button to turn on the keyboard. The LCD display will illuminate, indicating the unit is ready for use.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The CT-S200 features a clear LCD display and intuitive buttons for easy navigation. Use the dedicated buttons to select tones, rhythms, and access various functions. Adjust the master volume using the volume knob.

3.2 Selecting Tones and Rhythms

Press the 'TONE' button to enter tone selection mode, then use the number pad or +/- buttons to browse through the 400 available tones. Similarly, press the 'RHYTHM' button to select from the 77 built-in rhythms. The LCD will display the currently selected tone or rhythm number and name.

3.3 Using the 'My Setup' Button

The 'My Setup' button allows you to register and instantly recall your favorite tone and rhythm combinations, along with other settings. To save a setup, configure your desired tone, rhythm, and other parameters, then press and hold the 'My Setup' button until the display confirms the save. To recall, simply press the 'My Setup' button.

3.4 Dance Music Mode

Engage the Dance Music Mode to create and play dance tracks. This mode provides various phrases and effects that can be combined to produce dynamic compositions. Refer to the detailed instructions in the full user manual for specific operations within this mode.

3.5 Casio Music Space Application Connectivity

Enhance your learning experience by connecting your CT-S200 to the Casio Music Space mobile application. This application helps you learn songs and practice effectively.

- Download the Casio Music Space app from your device's app store.
- Connect your smartphone or tablet to the keyboard using a USB cable (Micro-B to USB-A/C, depending on your device).
- Import MIDI files into the app to learn your favorite songs.
- Utilize the app's features such as lesson parts, fingering guides, and scoring to track your progress.

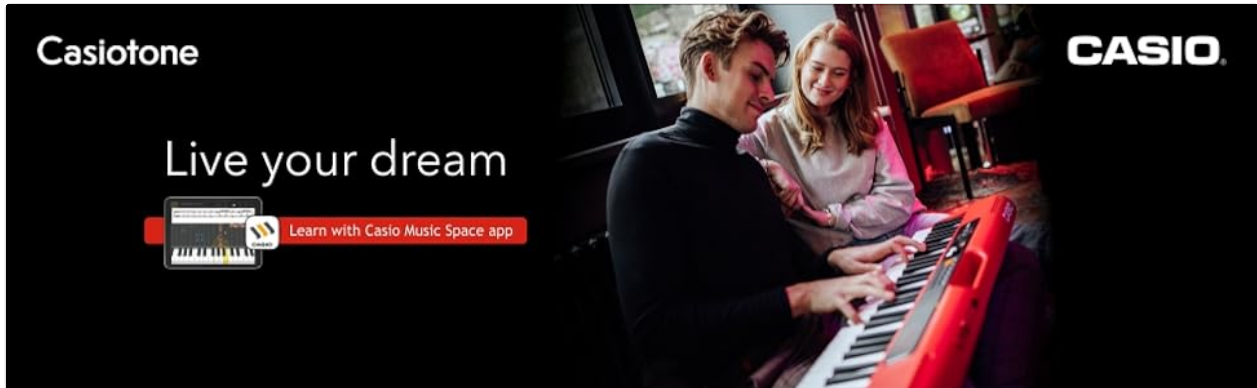


Image: Casio CT-S200 connected to the Casio Music Space app, illustrating its learning features.

4. MAINTENANCE

4.1 Cleaning

To clean the keyboard, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild, non-abrasive detergent, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol-based products, as these can damage the finish.

4.2 Storage

When not in use, store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.

4.3 Handling

Handle the keyboard with care. Avoid dropping it or subjecting it to strong impacts. Do not place heavy objects on top of the keyboard.

5. TROUBLESHOOTING

5.1 No Sound

- Check if the volume is turned up.
- Ensure headphones are not connected, or if they are, check their connection and volume.
- Verify that the power adapter is securely connected or that batteries are correctly inserted and not depleted.

5.2 Keyboard Does Not Power On

- Confirm the AC adapter is properly connected to both the keyboard and a working power outlet.
- If using batteries, check if they are fresh and inserted with the correct polarity.

5.3 App Connectivity Issues

- Ensure the USB cable is correctly connected between the keyboard and your smart device.
- Check if the Casio Music Space app is updated to the latest version.
- Restart both the keyboard and your smart device.

If you encounter issues not covered here, please refer to the full user manual or contact customer support.

6. SPECIFICATIONS

Feature	Specification
Brand	Casio
Model Name	CT-S200 Casiotone
Model Number	CT-S200RD
Colour	Red
Number of Keys	61
Skill Level	Beginner
Special Feature	Portable
Supported Software	Casio Music Space
Connector Type	Micro USB B
Connectivity Technology	USB
Power Source Type	Battery Powered / AC Adaptor
Headphones Jack	3.5mm Jack
Dimensions (W x D x H)	930 mm x 256 mm x 73 mm (93 x 25.6 x 7.3 cm)
Item Weight	3.3 Kilograms
Finish Type	Polished
Instrument Type	Piano / Keyboard

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The Casio CT-S200 comes with a 3-year manufacturer warranty from the date of purchase. An additional 6 months of warranty can be obtained by registering your product online.

To avail warranty services:

- Register your product on <https://register.casio.in/>.
- Present your original bill copy or invoice at an authorized Casio service center. A warranty card and stamp are not mandatory for online purchases.

7.2 Customer Support

For any warranty or service-related inquiries and feedback, please contact Casio customer care:

- **Helpline Number:** 011-66999200
- **Email:** casiocare@casio.co.in