

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JBL](#) /

> [JBL Clip 3 Portable Bluetooth Speaker Instruction Manual](#)

JBL JBLCLIP3BCAMOAM

JBL Clip 3 Portable Bluetooth Speaker Instruction Manual

Model: JBLCLIP3BCAMOAM

Brand: JBL

PRODUCT OVERVIEW

The JBL Clip 3 is an ultra-portable, waterproof, and durable Bluetooth speaker designed for on-the-go use. It delivers surprisingly big sound for its compact size and features a built-in carabiner for easy attachment.

Key Features

- **SOUND TO GO:** Ultra-portable, waterproof Bluetooth speaker with big sound.
- **UP TO 10 HOURS OF PLAYTIME:** Built-in rechargeable Li-ion battery for extended use.
- **NOISE CANCELLING & WIRELESS STREAMING:** Stream high-quality sound and take crystal-clear calls with the noise and echo-cancelling speakerphone.
- **WATERPROOF & DURABLE:** IPX7 waterproof rating (submersible up to 1 meter for 30 minutes) and rugged fabric material for outdoor adventures.

WHAT'S INCLUDED

- 1x JBL Clip 3 Portable Bluetooth Speaker
- 1x Built-in carabiner
- 1x Rechargeable Li-ion battery (integrated)
- 1x Noise and echo-cancelling speakerphone (integrated)
- 1x 3.5 mm audio cable
- 1x Charging cable (Micro USB)

PRODUCT COMPONENTS

Front View



This image displays the front of the JBL Clip 3 speaker in Black Camo. The speaker grille features the prominent orange JBL logo at the bottom. Above the logo, the control buttons for volume up (+), volume down (-), and play/pause are subtly integrated into the fabric surface. A sturdy metal carabiner is attached at the top, allowing for easy portability.

Side View



This image shows the side profile of the JBL Clip 3 speaker. On the side, two circular buttons are visible: one for power (with a universal power symbol) and another for Bluetooth pairing (with the Bluetooth symbol). The robust carabiner is extended upwards from the top edge.


Back View



The back of the JBL Clip 3 speaker is shown, featuring a large, embossed JBL exclamation mark logo. The surface is rubberized, providing grip and protection. The carabiner is visible at the top.

Ports

The charging port and auxiliary input are located under a protective rubber flap on the side of the speaker.

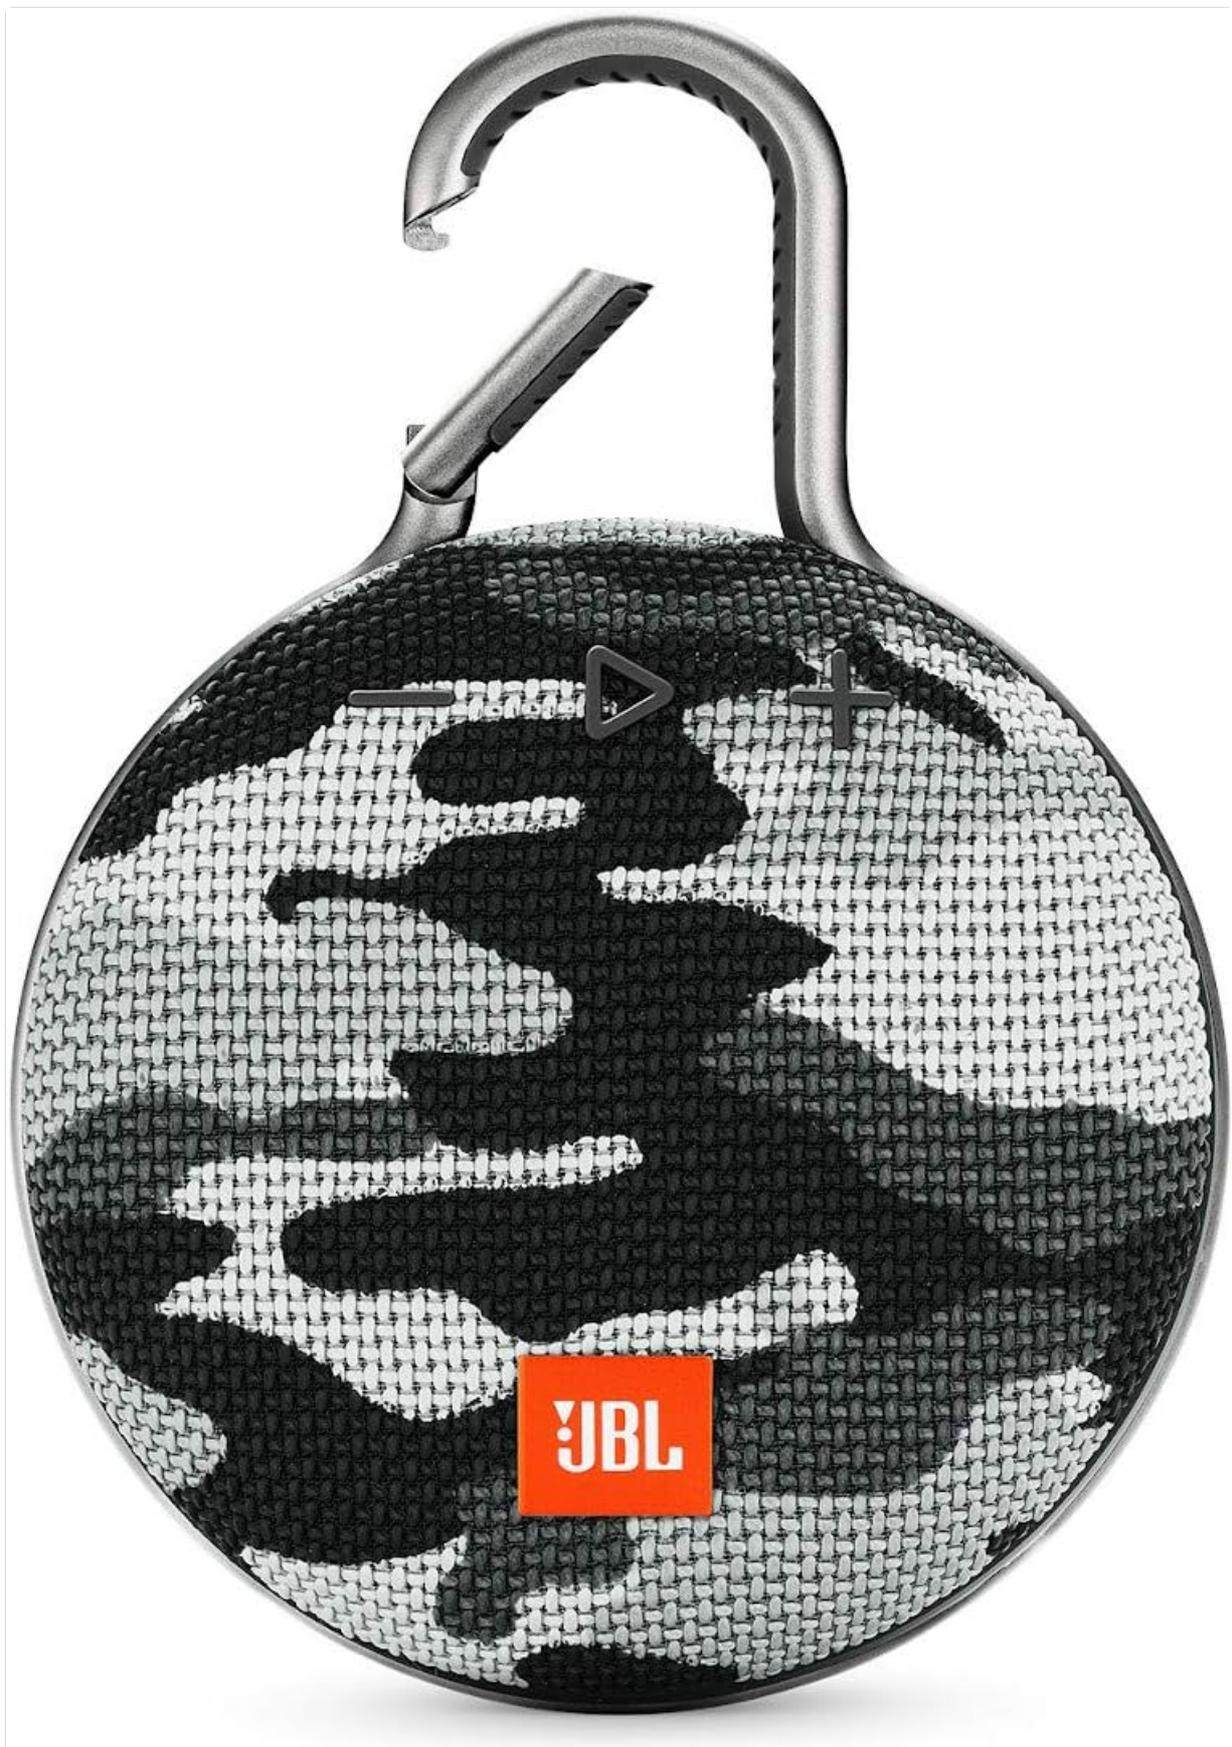

A close-up view of the JBL Clip 3's side reveals a protective rubber flap. Lifting this flap exposes the Micro USB charging port and a 3.5mm auxiliary audio input, ensuring water resistance when closed. (Note: Image is a general product view, specific port detail is described.)

SETUP GUIDE

Charging the Speaker

1. Open the protective rubber flap on the side of the speaker.
2. Connect the provided Micro USB charging cable to the speaker's charging port and the other end to a USB power source (e.g., wall adapter, computer).
3. The LED indicator will glow red while charging and turn blue when fully charged. A full charge typically takes about 3 hours.

Powering On/Off

1. Press and hold the Power button (located on the side) for a few seconds to turn the speaker ON or OFF.

OPERATING YOUR JBL CLIP 3

Bluetooth Pairing

1. Turn on the JBL Clip 3 speaker.
2. Press the Bluetooth button (located on the side, next to the Power button) to enter pairing mode. The LED indicator will flash blue.
3. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and select "JBL Clip 3" from the list of available devices.
4. Once successfully paired, the LED indicator will turn solid blue, and you will hear an audible confirmation.

Audio Playback

- Use the Play/Pause button on the speaker to start or stop audio playback.
- Press the '+' button to increase volume.
- Press the '-' button to decrease volume.
- Double-press the Play/Pause button to skip to the next track.

Speakerphone Functionality

- When a call comes in, press the Play/Pause button to answer the call.
- Press the Play/Pause button again to end the call.
- Press and hold the Play/Pause button to reject an incoming call.
- The built-in noise and echo-cancelling speakerphone ensures clear call quality.

Using the Carabiner

- The integrated metal carabiner allows you to easily hook the speaker to your backpack, belt loop, or other secure points for convenient portability.

MAINTENANCE AND CARE

- Keep the protective rubber flap covering the charging and auxiliary ports securely closed when not in use, especially in wet environments, to maintain the IPX7 waterproof rating.
- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- Avoid exposing the speaker to extreme temperatures (hot or cold) for prolonged periods.
- Store the speaker in a cool, dry place when not in use.

TROUBLESHOOTING

Speaker not turning on:

- Ensure the battery is charged. Connect the speaker to a power source using the Micro USB cable.
- Press and hold the Power button for a few seconds.

Unable to pair via Bluetooth:

- Make sure the speaker is in pairing mode (flashing blue LED).
- Ensure your device's Bluetooth is enabled and within range (up to 10 meters).
- Forget "JBL Clip 3" from your device's Bluetooth list and try pairing again.
- Turn off and on both the speaker and your device.

No sound or low volume:

- Check the volume levels on both the speaker and your connected device.
- Ensure the speaker is properly paired via Bluetooth or connected via the 3.5mm audio cable.
- If using the 3.5mm audio cable, ensure it is fully inserted into both the speaker and the audio source.

Water damage concerns:

- Always ensure the protective rubber flap is securely closed when the speaker is exposed to water. The IPX7 rating protects against immersion up to 1 meter for 30 minutes. Prolonged exposure or deeper immersion may cause damage.

TECHNICAL SPECIFICATIONS

Feature	Detail
Material	Fabric, Rubber
Model Name	Clip 3
Speaker Type	Outdoor
Special Feature	Portable, Waterproof, Noise Cancelling
Recommended Uses For Product	For Smartphones or Tablets
Compatible Devices	Laptop, Personal Computer, Smartphone, Tablet
Unit Count	1 Count
Surround Sound Channel Configuration	3.0
Color	Black Camo

Feature	Detail
Included Components	Built-in carabiner, Rechargeable Li-ion battery, Noise and echo-cancelling speakerphone, 3.5 mm audio cable, Charging cable
Product Dimensions	2.3"D x 4.4"W x 6.9"H
Item Weight	7.8 ounces
Is Waterproof	true
Warranty Type	Limited
Number of Items	1
Control Method	Touch
Wireless Communication Technology	Bluetooth
Speaker Size	2.3 Inches
Power Source	Battery Powered
Number of Batteries	1 Lithium Polymer batteries required.
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Audio Latency	60 Milliseconds
Subwoofer Connectivity Technology	Wireless
Number of Power Levels	1
Series Number	3
UPC	050036354271
Style	Speaker
Manufacturer	JBL
Shape	Rectangular Prism
Date First Available	February 12, 2020
Battery Capacity	1000 Milliamp Hours
Charging Time	3 Hours
Speaker Maximum Output Power	3 Watts

Feature	Detail
Connectivity Technology	wired, wireless
Audio Output Mode	Stereo
Mounting Type	Hanging
GTIN	050036354271

WARRANTY AND SUPPORT

Limited Warranty

The JBL Clip 3 Portable Bluetooth Speaker comes with a limited warranty. Please refer to the official JBL website or contact customer support for detailed warranty terms and conditions.

Customer Support

For further assistance, technical support, or warranty claims, please visit the official JBL support website or contact their customer service.