

[Manuals.plus](#) /

› [REMALI](#) /

› REMALI CapturePro 4K/60fps 20MP Sports Action Camera User Manual

## REMALI CapturePro

# REMALI CapturePro 4K/60fps 20MP Sports Action Camera User Manual

Model: CapturePro

## 1. INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your REMALI CapturePro 4K/60fps 20MP Sports Action Camera. Please read this manual thoroughly before using the camera to ensure proper function and to maximize your user experience.

The CapturePro is designed for capturing high-quality video and photos in various environments, including underwater. Key features include Native 4K 60FPS video, 20MP photos, a 2-inch touch screen, Electronic Image Stabilization (EIS), Distortion Correction, and multiple control options.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1x REMALI CapturePro Camera
- 1x Carrying Case
- 3x 1050 mAh Li-ion Batteries
- 1x Wall Charging Plug
- 1x External Dual Dock Battery Charger
- 1x USB Cable
- 1x Waterproof / Dustproof Case
- 1x Replacement Backdoor (partially open for audio/touch screen access)
- 1x Bluetooth Remote Control and Wrist Strap
- 10x Mounts of Varying Types
- 4x Velcro Straps
- 1x Lens Cloth

- Tethers
- User Manual (this document)

# Added Value



Carrying Case



Mounts & Accessories



Dual Battery  
Dock Charger



3 Batteries

Image: The REMALI CapturePro camera, waterproof case, remote control, three batteries, dual charger, and various mounts and accessories.

## 3. PRODUCT OVERVIEW

The REMALI CapturePro features a compact design with a 2-inch touch screen for easy navigation and preview. It is equipped with a high-resolution lens and various ports for connectivity.



Image: Front view of the REMALI CapturePro camera enclosed in its transparent waterproof housing, showing the lens, control buttons, and status indicators.

### 3.1 Camera Components

- **Lens:** Captures video and photo.
- **Power/Mode Button:** Powers the camera on/off and switches between modes.
- **Shutter/Select Button:** Starts/stops recording or takes photos. Confirms selections.
- **Up/Down Buttons:** Navigate menus and adjust settings.
- **2-inch Touch Screen:** For live view, playback, and menu navigation.
- **Micro SD Card Slot:** For memory card insertion.
- **Battery Compartment:** Houses the removable battery.
- **USB Port:** For charging and data transfer.

## 4. SETUP

---

## 4.1 Battery Installation and Charging

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a fully charged 1050 mAh Li-ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. To charge, connect the camera to a power source using the provided USB cable, or use the external dual dock battery charger for simultaneous charging of two batteries.

## 4.2 Micro SD Card Requirements and Installation

**Important:** The REMALI CapturePro requires a specific type of Micro SD card for optimal performance, especially when recording 4K video.

- Only use top brand name memory cards (not included).
- Card type must be Micro SD, Micro SDHC, or Micro SDXC.
- Required speed class: **UHS-1 Speed Class 3 (U3) and Video Speed Class 30 (V30)**
- Card must be rated **A2** for optimal app performance.
- Maximum supported capacity: **64GB**.

**Before first use:** Format the Micro SD card within the camera's settings menu. This ensures compatibility and prepares the card for recording.

1. Locate the Micro SD card slot on the side of the camera.
2. Insert the Micro SD card with the gold contacts facing the back of the camera until it clicks into place.
3. To remove, gently push the card in until it clicks, then release, and it will eject.

## 4.3 Waterproof Case Usage

The included waterproof case allows the CapturePro to be used underwater up to 131 feet (40m).

1. Ensure the camera is securely placed inside the waterproof case.
2. Close the latch firmly to create a watertight seal.
3. Before submerging, always perform a test by placing only the empty waterproof case in water to check for leaks.
4. For improved audio recording or touch screen access when not underwater, use the replacement backdoor with the partially open design.

# 131 Feet Waterproof



Image: A person on a surfboard with the REMALI CapturePro camera in its waterproof case, demonstrating its use in water up to 131 feet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off and Mode Switching

- **Power On:** Press and hold the Power/Mode button.
- **Power Off:** Press and hold the Power/Mode button again.
- **Switch Modes:** Briefly press the Power/Mode button to cycle through Video, Photo, Playback, and Settings modes.

### 5.2 Basic Video and Photo Capture

- In Video mode, press the Shutter/Select button to start recording. Press again to stop.
- In Photo mode, press the Shutter/Select button to take a photo.

### 5.3 Using the 2-inch Touch Screen

The responsive 2-inch touch screen allows for intuitive navigation of menus, settings adjustments, and previewing captured content.

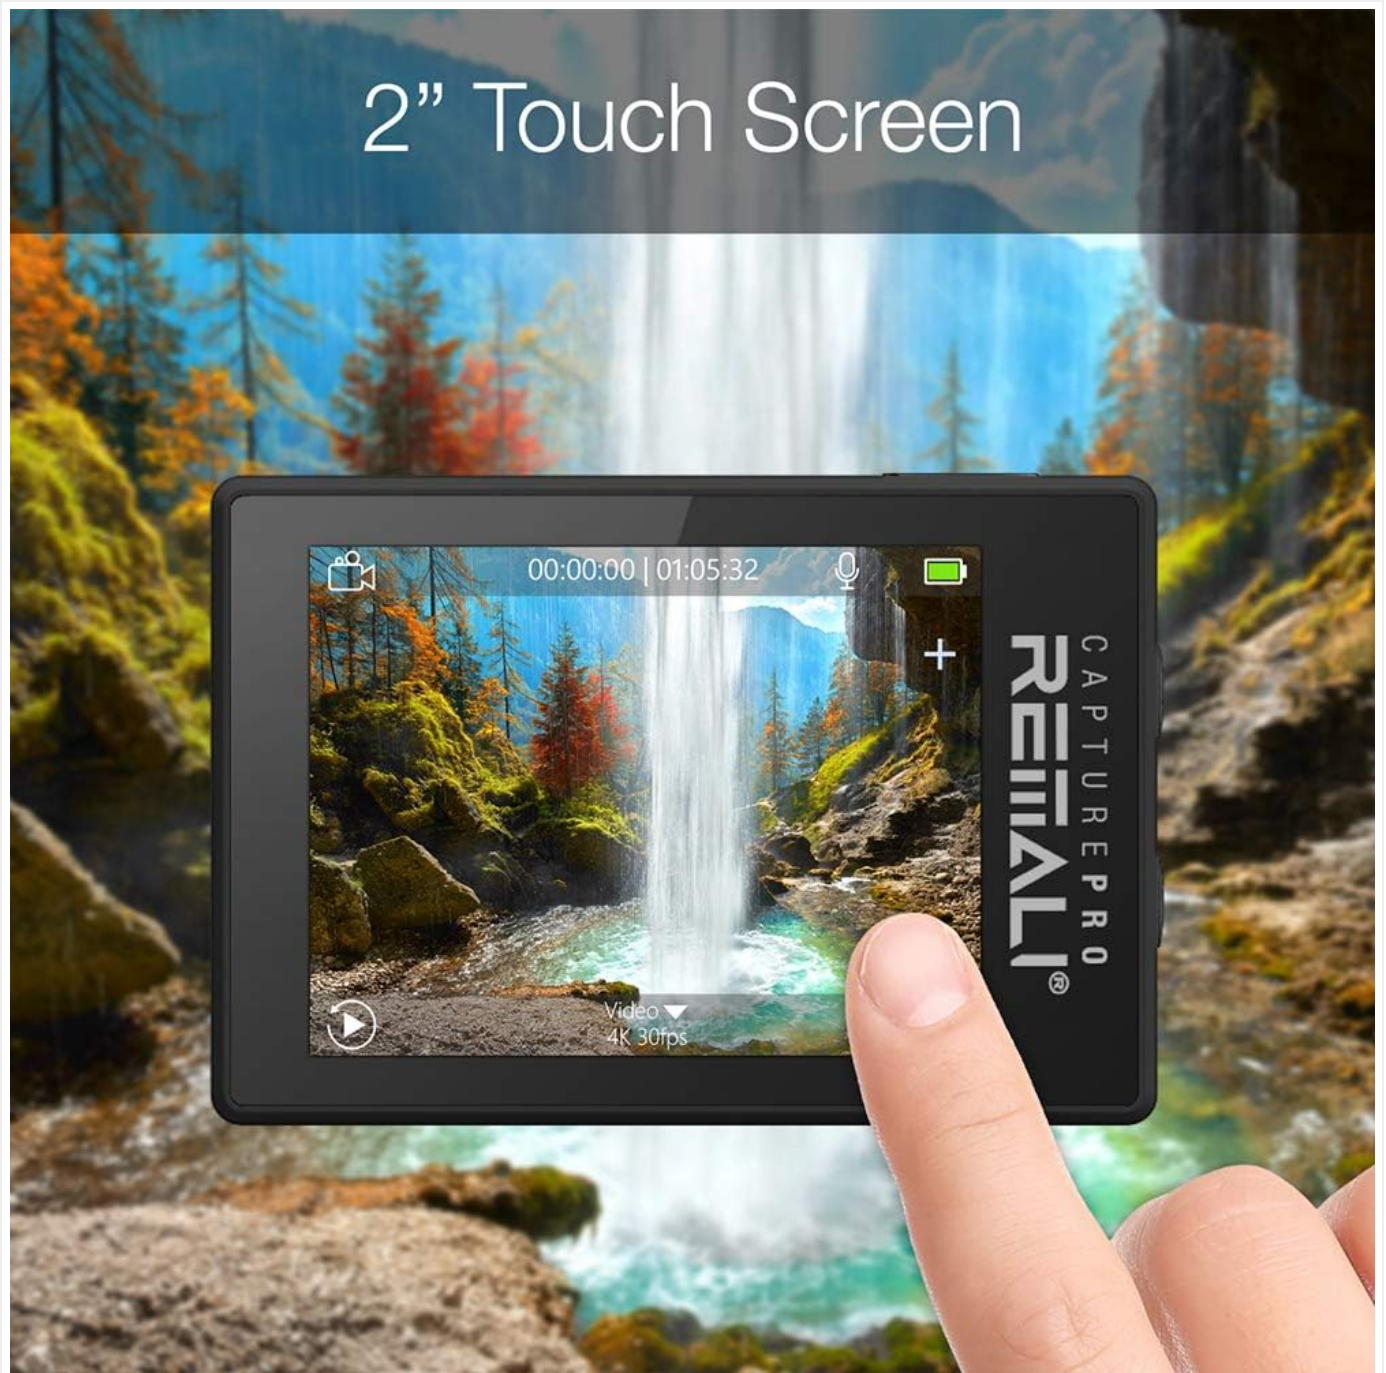


Image: A hand touching the 2-inch screen of the CapturePro camera, which shows a video playback of a waterfall, highlighting the touch screen functionality.

## 5.4 Advanced Features

- **Electronic Image Stabilization (EIS):** Activates in settings to reduce camera shake and produce smoother video footage.
- **Distortion Correction:** Eliminates the "fish-eye" effect common with wide-angle lenses. Enable this feature in the settings.
- **Angle Views:** Select between wide, medium, and narrow fields of view to suit your recording needs.
- **8X Zoom:** Available for both photo and video modes. Adjust zoom using the camera buttons or touch screen controls.
- **Slow Motion/Fast Motion:** Record videos at different speeds for creative effects.
- **Diving Scene Mode:** Optimizes color contrast for underwater environments. Activate this mode when recording

underwater.

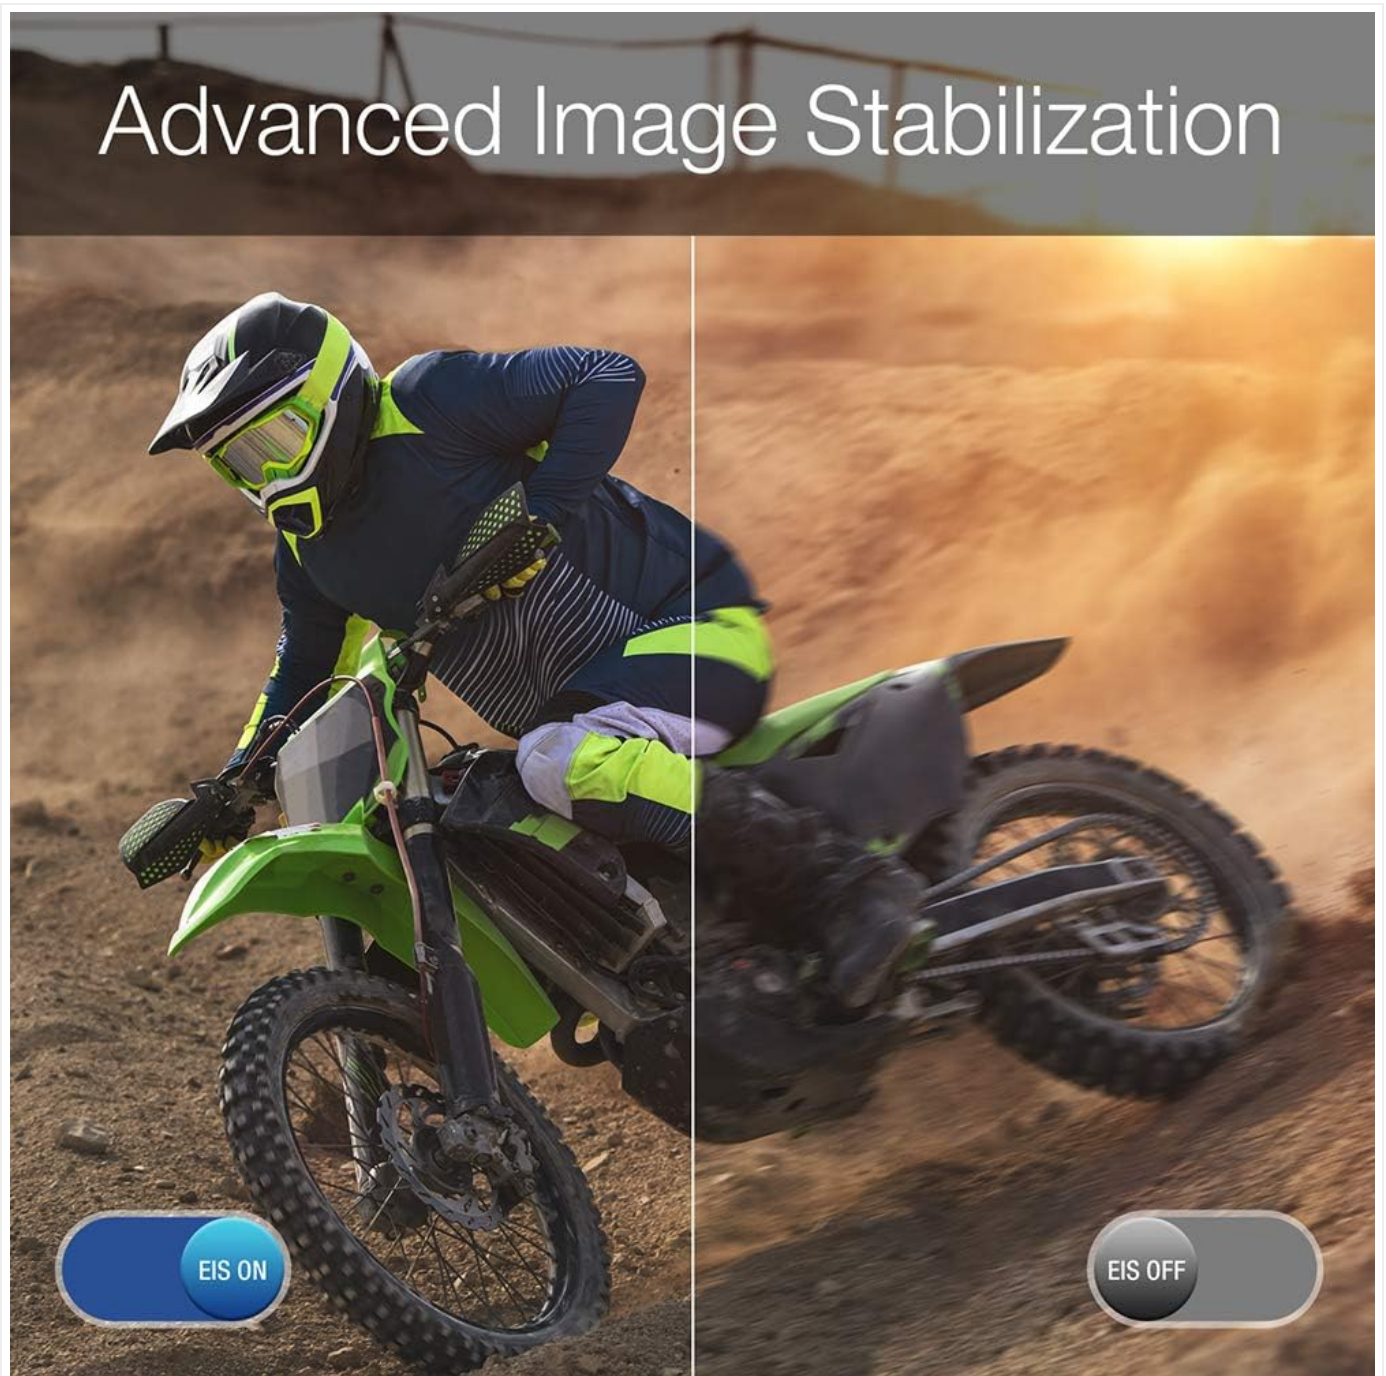 


Image: A split image demonstrating the effect of Electronic Image Stabilization (EIS), showing a clear, stable image on the left (EIS ON) and a blurred, shaky image on the right (EIS OFF) of a person riding a dirt bike.

## 5.5 Remote and Voice Control

- **Bluetooth Remote Control:** Use the included remote to control the camera from up to 30 feet away. Pair the remote with the camera via the settings menu.
- **Voice Control:** Enable voice control in settings. Use commands such as "REMALI, take photo," "REMALI, start recording," "REMALI, stop recording," and "REMALI, power off" to operate the camera hands-free.

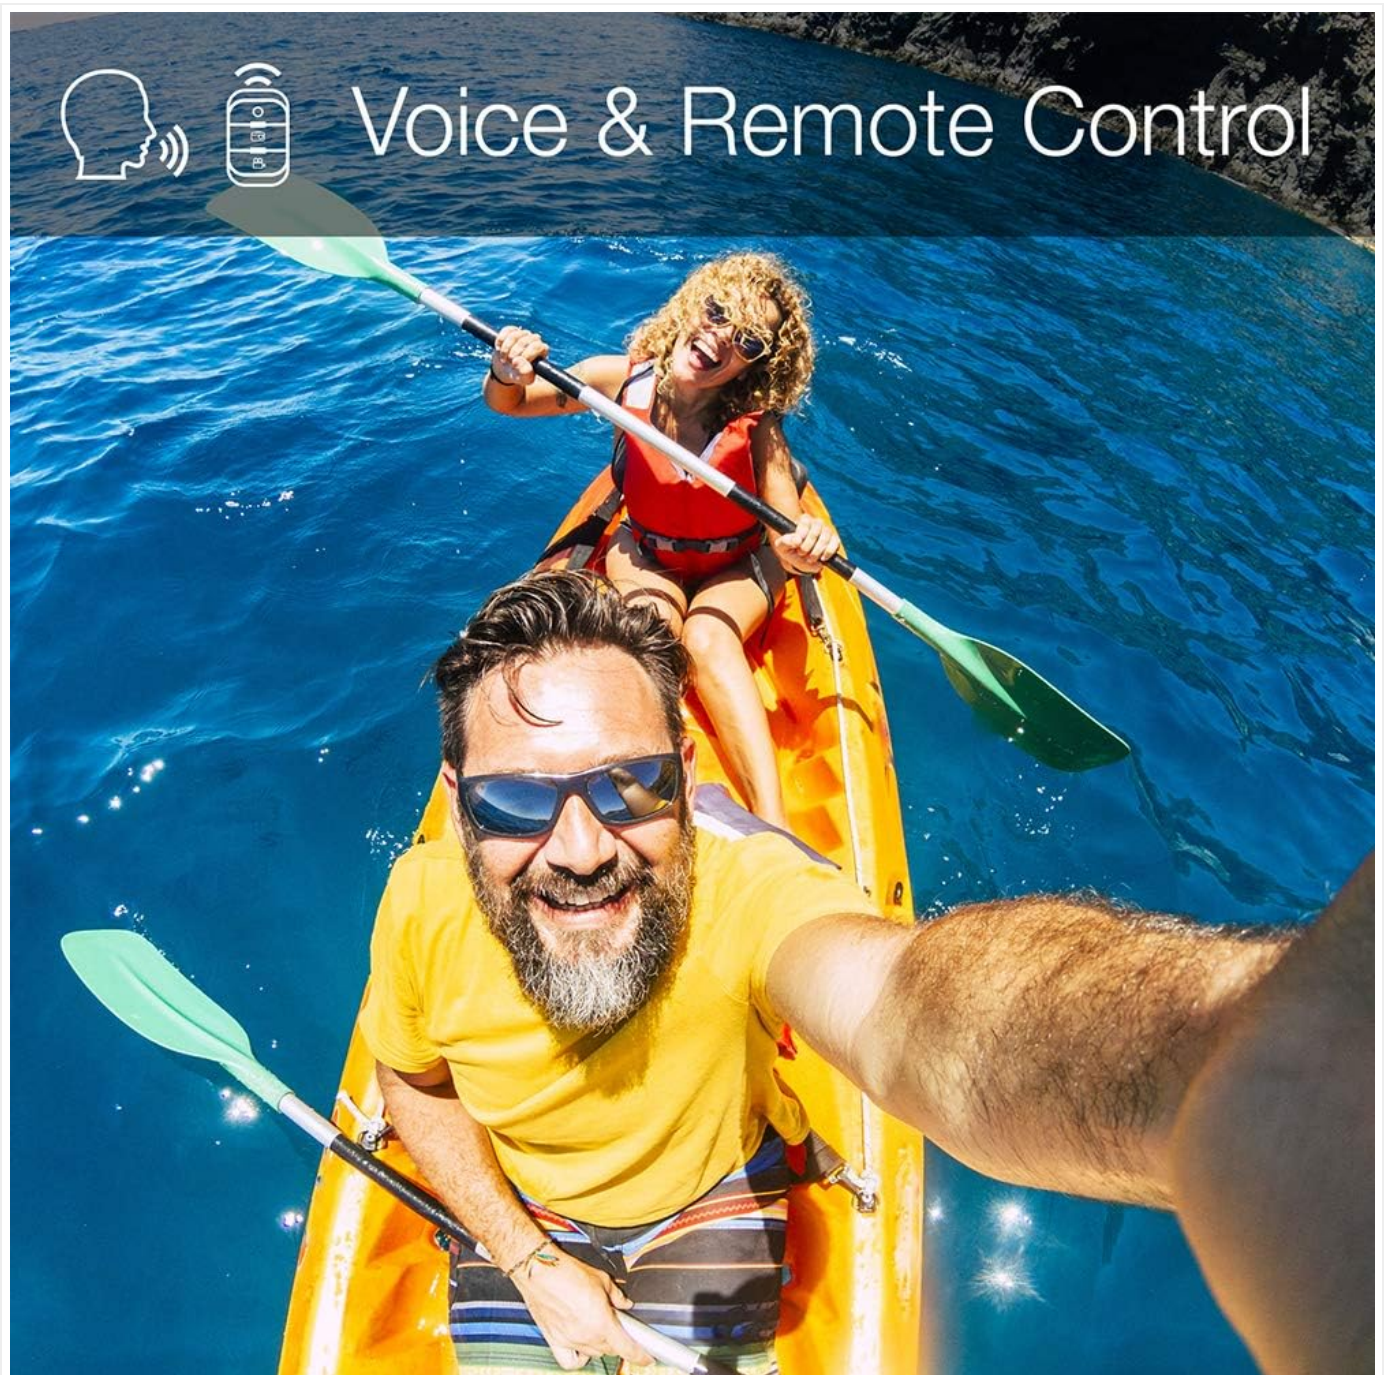 


Image: Two individuals kayaking on clear blue water, with the REMALI CapturePro camera visible, symbolizing the convenience of voice and remote control for capturing moments.

## 5.6 Wi-Fi Connectivity and App Control

Connect your CapturePro to a smart device (phone or tablet) via Wi-Fi to control the camera and transfer files using the REMALI DV app, available for iOS and Android.

1. Enable Wi-Fi on your CapturePro via the settings menu.
2. Download and install the "REMALI DV" app on your smart device.
3. Connect your smart device to the camera's Wi-Fi network (SSID and password displayed on the camera screen).
4. Open the REMALI DV app to control recording, view live footage, and manage files.



Image: A REMALI CapturePro camera positioned next to a smartphone displaying the REMALI DV app interface, illustrating wireless control and live view capabilities.

## 6. MAINTENANCE

---

- **Cleaning:** Use the provided lens cloth to gently clean the camera lens and screen. For the camera body and waterproof case, use a soft, damp cloth. Avoid harsh chemicals.
- **Storage:** Store the camera and accessories in the carrying case in a cool, dry place away from direct sunlight.
- **Battery Care:** Fully charge batteries before long-term storage. Remove batteries if the camera will not be used for an extended period.
- **Waterproof Case:** After underwater use, rinse the waterproof case with fresh water and allow it to air dry completely before storing. Inspect the O-ring seal regularly for any damage or debris.

## 7. TROUBLESHOOTING

---

If you encounter issues with your REMALI CapturePro, please refer to the common solutions below. A detailed

Troubleshooting Guide (PDF) is also available for download from the product listing page.

- **Camera does not power on:**

- Ensure the battery is fully charged and correctly inserted.
- Try using a different charged battery.

- **Recording stops unexpectedly or video quality is poor:**

- Verify that your Micro SD card meets the specified requirements (UHS-1 U3, V30, A2 rated, max 64GB).
- Format the Micro SD card in the camera.
- The card may be full; transfer files to a computer and clear the card.

- **Waterproof case leaks:**

- Ensure the case is properly closed and latched.
- Check the O-ring seal for any debris, cracks, or damage. Clean or replace if necessary.

- **Remote control not working:**

- Ensure the remote control battery is functional.
- Re-pair the remote control with the camera via Bluetooth settings.

- **Wi-Fi connection issues:**

- Ensure Wi-Fi is enabled on the camera.
- Confirm you are connected to the correct camera Wi-Fi network on your smart device.
- Restart both the camera and your smart device.

## 8. SPECIFICATIONS

---

<b>Brand</b>	REMALI
<b>Model Number</b>	CapturePro
<b>Video Capture Resolution</b>	4K (Native 4K 60FPS)
<b>Photo Resolution</b>	20MP
<b>Screen Size</b>	2 Inches (Touch Screen)
<b>Waterproof Depth</b>	Up to 131 feet (40m) with waterproof case
<b>Image Stabilization</b>	Electronic Image Stabilization (EIS)
<b>Zoom</b>	8X Digital Zoom
<b>Connectivity</b>	Wi-Fi, Bluetooth
<b>Storage Media</b>	Micro SD (UHS-1 U3, V30, A2 rated, max 64GB)
<b>Battery Type</b>	1050 mAh Li-ion (3 included)
<b>Product Dimensions</b>	9.06 x 6.69 x 2.76 inches
<b>Item Weight</b>	0.704 ounces

## 9. WARRANTY AND SUPPORT

---

For warranty information, technical support, or further assistance, please contact REMALI customer service. Details can typically be found on the official REMALI website or through your purchase platform.

Additional resources, including a detailed User Manual (PDF), Instructions for Use (IFU) (PDF), and Troubleshooting Guide (PDF), are available in the "Product guides and documents" section of the product listing page where you purchased your camera.

The seller for this product is Remali. For direct inquiries, please refer to the contact information provided with your purchase or on the seller's storefront.

