

Smeg MFF01BLEU

Smeg MFF01BLEU Automatic Milk Frother Instruction Manual

Model: MFF01BLEU

1. INTRODUCTION

Thank you for choosing the Smeg MFF01BLEU Automatic Milk Frother. This appliance is designed to effortlessly prepare hot or cold frothed milk, as well as warm milk, for a variety of beverages. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the appliance:

- Always ensure the appliance is placed on a stable, flat, and dry surface.
- Do not immerse the base unit, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Do not operate the appliance if the power cord or plug is damaged. Contact authorized service personnel for repair.
- Avoid touching hot surfaces. Use handles or knobs.
- Only use the appliance for its intended purpose of frothing and warming milk.
- Unplug the appliance from the power outlet when not in use and before cleaning.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Smeg MFF01BLEU Milk Frother:

- **Main Body:** The external housing of the frother.
- **Milk Jug:** The stainless steel container for milk.

- **Lid:** Transparent lid for the milk jug.
- **Whisk/Stirrer:** Detachable component for frothing or stirring milk.
- **Control Dial:** For selecting programs and starting/stopping the process.
- **Power Base:** Connects to the power supply and heats the jug.



Image 3.1: Front-side view of the Smeg MFF01BLEU Automatic Milk Frother, showcasing its sleek black design and control dial.



Image 3.2: Top view of the milk frother, showing the stainless steel interior with MIN/MAX fill lines and the whisk attachment.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, wash the milk jug, lid, and whisk in warm, soapy water. Rinse thoroughly and dry completely. The power base should only be wiped with a damp cloth.
3. **Placement:** Place the power base on a stable, level, and dry surface, away from heat sources and water.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The Smeg MFF01BLEU offers variable foam settings for different milk preparations.

5.1 Preparing Frothed Milk (Hot or Cold)

1. Ensure the whisk is correctly inserted into the bottom of the milk jug.
2. Pour cold milk into the jug. Do not exceed the 'MAX' fill line for frothing (typically lower than the warming MAX line). Refer to the internal markings. The capacity is 250 ml.
3. Place the lid securely on the jug.
4. Place the jug onto the power base.
5. Turn the control dial to select your desired frothing program. The frother features a variable foam setting, allowing you to choose between different foam consistencies. Consult the symbols on the dial for specific options (e.g., light foam, dense foam, cold foam).
6. Press the 'START/STOP' button to begin the frothing process. The indicator light will illuminate.
7. The frother will automatically stop when the program is complete. The indicator light will turn off.
8. Carefully remove the jug from the base and pour the frothed milk.

5.2 Warming Milk (without frothing)

1. Remove the whisk from the jug if you do not wish to froth. Use the stirring attachment if provided, or simply leave it out for warming only.
2. Pour milk into the jug, ensuring it does not exceed the 'MAX' fill line for warming.
3. Place the lid securely on the jug.
4. Place the jug onto the power base.
5. Turn the control dial to the milk warming program (usually indicated by a milk icon without foam).
6. Press the 'START/STOP' button.
7. The frother will automatically stop when the milk reaches the optimal warming temperature.
8. Carefully remove the jug and pour the warm milk.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your milk frother. The Smeg MFF01BLEU is designed for easy cleaning.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Disassemble:** Remove the milk jug from the power base, then remove the lid and the whisk/stirrer.
3. **Wash Jug, Lid, and Whisk:** Wash these removable parts in warm, soapy water. Use a soft sponge or brush to remove any milk residue. Rinse thoroughly under running water. These parts may also be suitable for dishwasher cleaning, but hand washing is recommended for best care.
4. **Clean Power Base:** Wipe the exterior of the power base with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the power base in water.
5. **Dry:** Ensure all parts are completely dry before reassembling or storing the appliance.
6. **Storage:** Store the frother in a clean, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Smeg MFF01BLEU, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in; jug not correctly placed; power outage.	Check power connection; ensure jug is seated properly on the base; check household power.
Milk not frothing or warming properly.	Incorrect milk level; whisk not inserted; wrong program selected; milk type.	Ensure milk is between MIN and MAX lines; check whisk placement; select appropriate program; use fresh, cold milk (dairy or suitable plant-based).
Indicator light flashes or appliance stops unexpectedly.	Overheating; insufficient milk; internal error.	Unplug and let cool for 10-15 minutes; ensure correct milk level. If problem persists, contact customer support.
Burnt milk smell or residue.	Milk residue from previous use; jug not cleaned properly.	Thoroughly clean the jug after each use, especially the bottom surface.

If the problem persists after trying these solutions, please contact Smeg customer support.

8. SPECIFICATIONS

- **Model Number:** MFF01BLEU
- **Brand:** Smeg
- **Color:** Black
- **Material:** Steel 18/10
- **Capacity:** 250 Milliliters
- **Power:** 50 Watts
- **Dimensions (L x W x H):** 33.7 x 23.3 x 33.7 cm
- **Item Weight:** 1.8 Kilograms
- **Special Feature:** Variable foam setting

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Smeg website. For technical support, spare parts, or service inquiries, please contact Smeg customer service through their official channels. Ensure you have your model number (MFF01BLEU) and proof of purchase available when contacting support.

