

[Manuals.plus](#) /

› [HADEN](#) /

› Haden Dorset Electric Kettle User Manual

HADEN 75002

Haden Dorset Electric Kettle User Manual

Model: 75002

INTRODUCTION

Thank you for choosing the Haden Dorset 1.7 Liter Stainless Steel Electric Kettle. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference. The Haden Dorset Electric Kettle combines classic style with modern engineering, offering a convenient and efficient way to boil water for your favorite hot beverages and culinary needs. Its thoughtful design includes a 360-degree base, auto-shut-off, and boil-dry protection for enhanced safety and ease of use.

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Do not operate the kettle if the cord or plug is damaged, or if the kettle malfunctions or has been damaged in any manner.
- Ensure the kettle is placed on a firm, flat, heat-resistant surface away from the edge of the countertop.
- Do not fill the kettle above the MAX fill line to prevent boiling water from overflowing.
- Always ensure the lid is securely closed before operating the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- This appliance is for household use only.

PRODUCT OVERVIEW



Figure 1: Haden Dorset Electric Kettle, Putty & Chrome. This image shows the overall design of the kettle, highlighting its elegant and retro aesthetic.



Figure 2: Product Dimensions. This image illustrates the height (11.75"), width (9.5"), and depth (7") of the kettle.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, fill the kettle with fresh water to the MAX level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the kettle is securely seated on the 360-degree base.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX (1.7L) mark. The water level indicator on the side helps monitor the fill level.



Figure 3: Water Level Indicator and Power Switch. This image shows the clear water level window and the toggle switch for operation.

2. **Closing the Lid:** Ensure the lid is firmly closed before placing the kettle on its base.
3. **Placing on Base:** Place the kettle securely onto its 360-degree rotational power base.
4. **Starting Boil:** Push the ON/OFF toggle switch downwards to the 'I' position. The indicator light will illuminate, signaling that the kettle is heating.



Figure 4: Temperature Gauge. The integrated temperature gauge allows you to monitor the water's heat level in real-time.

5. **Automatic Shut-off:** The kettle will automatically switch off once the water has reached a rolling boil. The indicator light will turn off, and the toggle switch will return to the 'O' (OFF) position.
6. **Pouring:** Carefully lift the kettle from its base using the handle and pour the hot water. The large handle provides full control and a firm grip.



Figure 5: Pouring Hot Water. The kettle's design facilitates easy and controlled pouring.

7. **Boil-Dry Protection:** The kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without sufficient water, it will automatically turn off to prevent damage. Allow the kettle to cool down before refilling.

Official Product Video

Your browser does not support the video tag.

Video 1: Haden DORSET Kettles and Toasters. This official seller video showcases the Dorset kettle and matching toaster, highlighting their design and features. The kettle is shown in both Red and Putty Beige colors.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your Haden Dorset Electric Kettle.

- **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a damp cloth or sponge and dry thoroughly. Do not use abrasive cleaners or scouring pads as they may damage the finish.
- **Interior Cleaning:** Wash the inside of the kettle with hot, soapy water and rinse thoroughly.
- **Water Filter:** The kettle includes a removable filter for convenient cleaning and maintenance. Regularly remove and rinse the filter under running water to prevent scale buildup.



Figure 6: Removable Water Filter. The filter can be easily removed for cleaning to prevent mineral buildup.

- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts white vinegar and water. Let it stand for at least 30 minutes, or longer for heavy buildup. Boil the mixture, then discard. Rinse thoroughly several times with fresh water. Alternatively, use a commercial descaling solution following the product's instructions.
- **Important:** Never immerse the kettle in water or other liquids. Do not place any part of the kettle in a dishwasher.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; Power switch not activated; Kettle not properly seated on base; Boil-dry protection activated.	Ensure plug is securely in outlet; Push toggle switch to 'I' position; Re-seat kettle firmly on base; Allow kettle to cool down, then refill and restart.
Water has an unusual taste or odor.	New appliance odor; Mineral deposits.	Perform initial cleaning steps (boil and discard water) multiple times; Descale the kettle.
Kettle switches off before boiling.	Excessive limescale buildup; Kettle is overfilled.	Descale the kettle; Do not fill above the MAX line.
Steam escaping from lid.	Lid not securely closed.	Ensure lid is firmly closed before boiling.

SPECIFICATIONS

Feature	Detail
Brand	HADEN
Model Name	Dorset Electric Kettle
Item Model Number	75002
Color	Putty
Capacity	1.7 Liters (7-cup)
Special Feature	Cordless, 360-Degree Base, Auto Shut-off, Boil-Dry Protection, Temperature Gauge, Water Level Indicator, Removable Filter

Feature	Detail
Power	1500 Watts (implied from feature bullets)
Material	Stainless Steel (with Enamel Finish)
Product Dimensions	11.75"L x 9.5"W x 7"H
Item Weight	3 Pounds
Included Components	Stainless Steel Kettle, Water Filter
UPC	017342750029
Manufacturer	Studio Designs
Date First Available	October 4, 2019

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official Haden website or contact their customer service. A user guide in PDF format is also available for download:
[Download User Guide \(PDF\)](#)
For further assistance, please visit the [HADEN Store on Amazon](#).

© 2025 HADEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07YQCMSFV>

More documents and user manuals: <https://manuals.plus/>