



Manuals.plus /

› Wahl /

› Wahl Extreme Grip Pro Haircutting Kit Model 79465-224 Instruction Manual

Wahl 79465-224

Wahl Extreme Grip Pro Haircutting Kit Instruction Manual

Model: 79465-224

INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Wahl Extreme Grip Pro Haircutting Kit. Please read all instructions thoroughly before using the appliance for the first time.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock or injury:

- Always unplug the trimmer when not in use.
- Keep the appliance away from water sources. Do not use while bathing or in a shower.
- Avoid using on infants or near sensitive areas.
- Always follow recommended cleaning and maintenance procedures.
- Exercise caution with sharp blades to prevent injury.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged.
- For household use only.

PACKAGE CONTENTS

Your Wahl Extreme Grip Pro Haircutting Kit includes the following items:

- Wahl Extreme Grip Hair Clipper
- 10 Guide Combs (various sizes)
- Left and Right Ear Taper Guide Combs
- Styling Comb

- Barber Comb
- Cleaning Brush
- Blade Oil
- Scissors
- Storage Case



Image: Overview of the Wahl Extreme Grip Pro Haircutting Kit, displaying the clipper, various guide combs, and additional accessories like scissors, combs, and oil.

SETUP

1. **Initial Blade Oiling:** Before first use, apply 2-3 drops of the included Wahl clipper oil across the top of the blades. Turn the clipper on for a few seconds to allow the oil to distribute. Wipe off any excess oil with a clean cloth. This ensures optimal performance and blade longevity.

SELF-SHARPENING BLADES

Precision ground blades that
cut through all hair types



Image: A close-up view of the clipper blades, illustrating where to apply oil for maintenance.

2. **Connecting to Power:** Ensure the clipper is switched off before plugging it into a suitable electrical outlet. The clipper is corded and requires continuous power during operation.

OPERATING INSTRUCTIONS

Attaching Guide Combs

To attach a guide comb, hold the comb with the teeth facing up and slide it onto the clipper blade until it clicks securely into place. To remove, gently pull the comb away from the blade.



Image: The Wahl clipper shown alongside its various guide combs, indicating the range of cutting lengths available.

Using the Taper Lever

The taper lever, located on the side of the clipper, allows for adjusting the closeness of the cut without changing guide combs. Move the lever up for a closer cut and down for a longer cut. This is useful for blending and fading.

Haircutting Techniques

1. **Preparation:** Ensure hair is clean, dry, and free of tangles. Use a comb to detangle if necessary.
2. **Starting the Cut:** Begin with a longer guide comb than desired to familiarize yourself with the clipper and to avoid cutting too short initially.
3. **Cutting Motion:** Hold the clipper firmly with the teeth of the guide comb flat against the head. Move the clipper slowly and steadily against the direction of hair growth. Overlap strokes to ensure an even cut.



Image: A person demonstrating the use of the Wahl clipper for a haircut, showing proper grip and positioning.

4. **Blending:** Use the taper lever or progressively shorter guide combs to blend different hair lengths.
5. **Edging and Outlining:** For precise lines around the neckline and ears, remove the guide comb and use the bare blade. Hold the clipper at an angle and carefully trim.

MAINTENANCE

Cleaning the Blades

1. **After Each Use:** Turn off and unplug the clipper. Use the cleaning brush to remove loose hairs from the blades.
2. **Deep Cleaning (Periodically):** For thorough cleaning, the blades can be removed. Refer to the Wahl website or contact customer support for specific instructions on blade removal and reattachment for your model.

Oiling the Blades

To maintain cutting efficiency and prevent rust, oil the blades regularly (after every few uses or as needed). Apply 2-3 drops of Wahl clipper oil across the top of the blades while the clipper is running. Wipe off excess oil.

Storage

Store the clipper and all accessories in the provided storage case in a cool, dry place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper pulls hair or cuts unevenly.	Blades are dull, dirty, or not properly oiled.	Clean and oil blades. If blades are dull, consider replacement. Ensure guide comb is securely attached.
Clipper makes a loud buzzing noise.	Motor adjustment screw needs calibration (common when used outside USA).	Locate the power screw on the side of the clipper. With the clipper ON, turn the screw clockwise until the noise stops, then turn it counter-clockwise until the noise just begins again, then turn it clockwise slightly until the noise stops. This sets the motor to its optimal power level.
Clipper does not turn on.	Not plugged in, power outlet issue, or damaged cord/appliance.	Check power connection. Test outlet with another appliance. Inspect cord for damage. If damaged, do not use.

SPECIFICATIONS

- **Model Number:** 79465-224
- **Brand:** Wahl
- **Power Source:** Corded
- **Item Weight:** 300 Grams (approximately 10.58 ounces)
- **Product Dimensions:** 3.19 x 7.6 x 10 inches
- **Recommended Use:** Trimming
- **Manufacturer:** Wahl
- **Wattage:** 240 watts
- **Bulb Voltage:** 240 volts

WARRANTY AND SUPPORT

Wahl products are manufactured to high standards and are inspected prior to shipment. For specific warranty details, please refer to the warranty card included with your product or visit the official Wahl website. For technical support, replacement parts, or service inquiries, please contact Wahl Customer Service.

Wahl Customer Service: Visit WahlUSA.com/contact-us



