

[Manuals.plus](#) /

› [ARCTIC CHEF](#) /

› ARCTIC CHEF ACFR741 7.5 Cubic Feet Top Freezer Refrigerator Instruction Manual

ARCTIC CHEF ACFR741

ARCTIC CHEF ACFR741 7.5 Cubic Feet Top Freezer Refrigerator Instruction Manual

Model: ACFR741

1. PRODUCT OVERVIEW

The ARCTIC CHEF ACFR741 is a modern 7.5 cubic feet refrigerator featuring a top freezer and a bottom refrigerator compartment. This unit is designed with a reversible door configuration, an adjustable thermostat, a built-in lamp, slide-out shelves, and adjustable feet. It is a CFC-free appliance, suitable for storing food and beverages in limited spaces or as a secondary refrigeration unit.



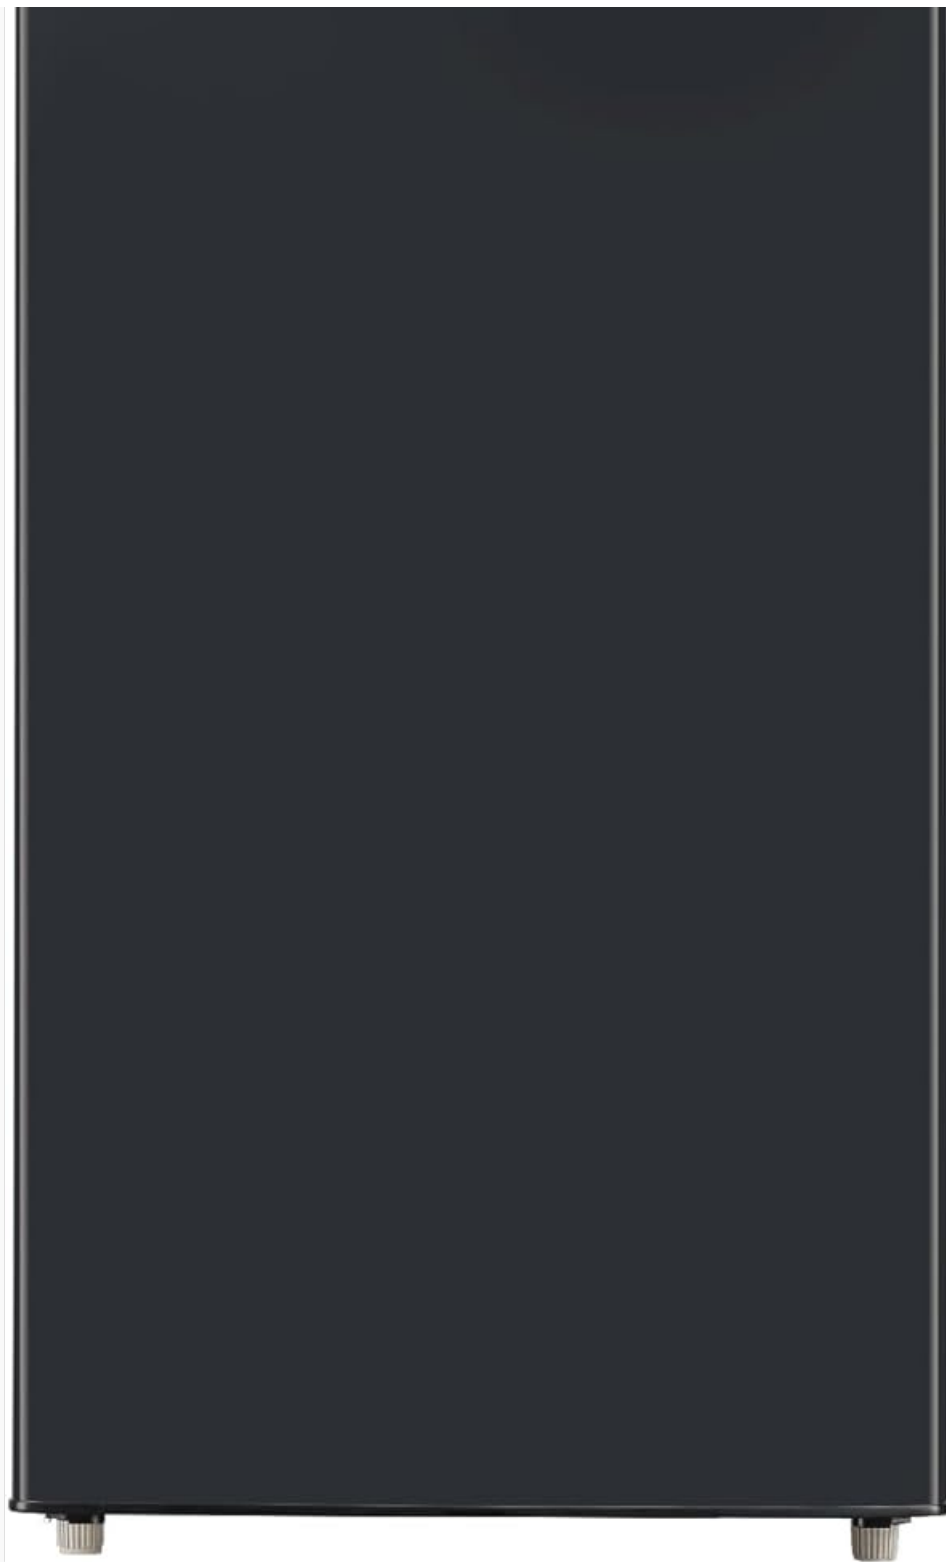


Figure 1: Front view of the ARCTIC CHEF ACFR741 Refrigerator.

2. SAFETY INFORMATION

Please read all safety instructions carefully before operating the appliance to prevent injury or damage. Keep this manual for future reference.

- Ensure the refrigerator is placed on a stable, level surface.
- Allow adequate ventilation around the unit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or performing any maintenance.
- Keep children away from the appliance, especially when the door is open.

3. INSTALLATION

3.1 Unpacking and Placement

- Remove all packaging materials, including foam and adhesive tape.
- Place the refrigerator in a location with sufficient space for the doors to open fully.
- Ensure the unit is not exposed to direct sunlight or heat sources.
- Allow at least 4 inches (10 cm) of space between the back and sides of the refrigerator and any adjacent walls for proper air circulation.

3.2 Leveling the Appliance

The refrigerator is equipped with adjustable leveling legs. Adjust them to ensure the unit is stable and level. A level appliance operates more efficiently and prevents door alignment issues.

3.3 Initial Power-Up

After placing the refrigerator, wait at least 4 hours before plugging it into a power outlet. This allows the refrigerant to settle, preventing potential damage to the cooling system.



Figure 2: The refrigerator positioned in a kitchen, demonstrating its compact size.

4. OPERATION

4.1 Temperature Control

The refrigerator features an adjustable thermostat control knob located inside the fresh food compartment. Turn the knob to adjust the cooling intensity. Higher numbers typically indicate colder temperatures. Adjust the setting based

on the ambient temperature and the amount of food stored.

4.2 Internal Storage

The fresh food compartment includes removable glass shelves and a slide-out drawer for organizing items. The door also features multiple compartments for smaller items and beverages. The top freezer compartment has a wire shelf for frozen goods.





Figure 3: Interior of the refrigerator, showing shelves and door storage.

4.3 Reversible Door Feature

The refrigerator doors are reversible, allowing them to open from either the left or right side. Refer to the detailed instructions in the owner's manual for steps on how to reverse the door hinges.

Video 1: A demonstration of the features of RCA Apartment Size Fridges, including internal layout and reversible doors. This video is provided by Curtis International LTD.

5. MAINTENANCE

5.1 Cleaning

- Regularly clean the interior and exterior of the refrigerator with a mild detergent and warm water.
- Wipe dry with a soft cloth.
- Do not use abrasive cleaners or sharp objects that could damage surfaces.

5.2 Manual Defrost

This appliance features manual defrost for the freezer compartment. When frost accumulation reaches approximately 1/4 inch (6 mm) thick, defrost the unit:

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from the freezer and store them in a cooler.
3. Leave the freezer door open to allow frost to melt naturally. You can use the provided ice scraper to gently remove frost, but avoid sharp tools.
4. Once defrosted, clean and dry the interior thoroughly before plugging the unit back in and returning food.



Figure 4: Side view of the refrigerator, showing its compact design for easy placement.

6. TROUBLESHOOTING

If you experience issues with your refrigerator, please check the following common problems before contacting

customer support:

- **Appliance not operating:** Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
- **Temperature too warm:** Verify the thermostat setting is appropriate. Ensure the door is fully closed and not frequently opened. Check for proper ventilation around the unit.
- **Excessive noise:** Confirm the refrigerator is level. Ensure nothing is vibrating against the back or sides of the unit.
- **Water on floor:** Check if the drain pan is correctly positioned and not overflowing during defrost cycles.

7. SPECIFICATIONS

Feature	Specification
Brand	ARCTIC CHEF
Model	ACFR741
Total Capacity	7.5 Cubic Feet
Fresh Food Capacity	6 Cubic Feet
Freezer Capacity	1 Cubic Feet
Dimensions (D x W x H)	21 x 21 x 55 inches
Item Weight	75 pounds
Annual Energy Consumption	200 Kilowatt Hours Per Year
Installation Type	Freestanding
Form Factor	Freezer Top
Defrost System	Manual
Number of Doors	2
Voltage	110.0 V
Shelf Type	Glass
Special Features	Reversible Door, Adjustable Thermostat, Removable Shelves

8. WHAT'S IN THE BOX

Your ARCTIC CHEF ACFR741 Refrigerator package includes:

- ARCTIC CHEF ACFR741 Refrigerator Unit
- Removable Shelves (Glass and Wire)
- Owner Manual

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the included Owner Manual or visit the official ARCTIC CHEF website. Keep your purchase receipt as proof of purchase for any warranty claims.

