

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Russell Hobbs](#) /
- › [Russell Hobbs ROT09L 9 Liters Oven Toaster Grill User Manual](#)

Russell Hobbs ROT09L

Russell Hobbs ROT09L 9 Liters Oven Toaster Grill User Manual

Model: ROT09L

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Russell Hobbs ROT09L 9 Liters Oven Toaster Grill. Please read all instructions carefully before using the appliance and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse the cord, plug, or any part of the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure adequate ventilation around the appliance during operation.

3. PRODUCT OVERVIEW

The Russell Hobbs ROT09L is a versatile 9-liter Oven Toaster Grill designed for baking, toasting, and grilling. It features a compact design and user-friendly controls.



Figure 1: Russell Hobbs ROT09L Oven Toaster Grill. This image shows the compact design of the appliance with its glass door, handle, and control knobs on the right side.

Components:

- **Oven Body:** The main housing of the appliance.
- **Glass Door:** Features double heat resistant tempered glass for safety and heat retention.
- **Door Handle:** For opening and closing the oven door.
- **Temperature Control Knob:** Adjusts cooking temperature.
- **Timer Control Knob:** Sets cooking duration.
- **Power Indicator Light:** Illuminates when the appliance is operating.
- **Heating Elements:** Located at the top and bottom for even cooking.
- **Grill Rack:** For grilling and toasting items.
- **Baking Tray:** For baking and collecting drips.
- **Crumb Tray:** Removable tray at the bottom for easy cleaning of crumbs.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the oven toaster grill and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the appliance on a stable, level, heat-resistant surface. Ensure there is at least 10-15 cm of clear space on all sides and above the oven for proper ventilation. Do not place it near flammable materials or under cabinets.
3. **Initial Cleaning:** Wipe the interior and exterior of the oven with a damp cloth. Wash the grill rack, baking

tray, and crumb tray in warm soapy water, rinse, and dry thoroughly.

4. **First Use Burn-Off:** Before cooking food, operate the oven empty for approximately 10-15 minutes at the maximum temperature setting (250°C) with the timer set. This will burn off any manufacturing oils and eliminate initial odors. Some smoke and odor are normal during this process. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

Your Russell Hobbs ROT09L Oven Toaster Grill features two control knobs for easy operation.



Figure 2: Close-up of the control knobs. The top knob controls temperature from 100°C to 250°C, and the bottom knob is a 30-minute timer.

Controls:

- **Temperature Control Knob (Top):** This knob allows you to select the desired cooking temperature, ranging from 100°C to 250°C. Turn clockwise to increase temperature.
- **Timer Control Knob (Bottom):** This knob sets the cooking time, up to a maximum of 30 minutes. Turn clockwise to set the desired time. The oven will automatically turn off when the timer reaches zero, and a bell will sound.

General Operation:

1. Place the grill rack or baking tray with food into the oven. Ensure the door is closed properly.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the **Temperature Control Knob** to your desired cooking temperature.
4. Turn the **Timer Control Knob** to the desired cooking time. The power indicator light will illuminate, indicating the oven is operating.

5. When the set time has elapsed, the timer will ring, and the oven will automatically switch off. The power indicator light will turn off.
6. Carefully open the oven door and remove the cooked food using oven mitts or heat-resistant gloves.
7. Unplug the appliance from the wall outlet after use.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven toaster grill.

1. **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaning solution is wiped away.
4. **Accessories:** Remove the grill rack, baking tray, and crumb tray. Wash them in warm, soapy water. Rinse thoroughly and dry completely before returning them to the oven. The crumb tray should be cleaned regularly to prevent grease buildup.
5. **Do Not Immerse:** Never immerse the main oven body, cord, or plug in water or any other liquid.
6. **Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Russell Hobbs ROT09L, please refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure both the temperature and timer knobs are set to a desired setting (not 'OFF').
- **Food not cooking evenly:**
 - Preheat the oven for 5-10 minutes before placing food inside.
 - Ensure food is placed centrally on the rack/tray.
 - Adjust temperature or cooking time as needed.
- **Smoke or odor during first use:**
 - This is normal during the initial burn-off process as manufacturing oils are heated. Ensure good ventilation. If smoke persists after initial use, unplug and contact customer support.
- **Timer not working:**
 - Ensure the timer knob is turned past the 'OFF' position and set to a specific time.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	Russell Hobbs
Model	ROT09L
Capacity	9 Liters
Material	Stainless Steel (body), Tempered Glass (door)
Special Features	Temperature Control, Double Heat Resistant Tempered Glass Window
Control Type	Knob
Door Style	Dropdown Door
Power Source	Electric
Item Weight	3.2 Kilograms
Temperature Range	100°C to 250°C
Timer	Up to 30 minutes
Included Components	Grill Rack, Baking Tray, Crumb Tray

9. WARRANTY AND SUPPORT

Your Russell Hobbs ROT09L Oven Toaster Grill comes with a **2-year warranty on the product** from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims. For technical assistance, service, or warranty inquiries, please contact Russell Hobbs customer support. Contact details can typically be found on the product packaging or the official Russell Hobbs website for your region.