

B.K.Licht BKL1267

B.K.Licht E27 Vintage Adjustable 4-Spot Ceiling Light

Model: BKL1267 | Brand: B.K.Licht

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe installation, operation, and maintenance of your B.K.Licht E27 Vintage Adjustable 4-Spot Ceiling Light, Model BKL1267. Please read these instructions carefully before proceeding with installation or use, and retain them for future reference.

Important Safety Warnings:

- Always disconnect the power supply at the main circuit breaker before installation, maintenance, or bulb replacement.
- Installation should be performed by a qualified electrician or a person with appropriate electrical knowledge to ensure safety and compliance with local regulations.
- This product is designed for **indoor use only** (IP20 rating). Do not expose it to moisture or wet conditions.
- Ensure the mounting surface can safely support the weight of the fixture.
- Do not exceed the maximum wattage of 60W per bulb. Use E27 base bulbs only.
- Avoid touching bulbs immediately after they have been on, as they can be hot.
- Keep packaging materials out of reach of children.

2. PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer support.

- 1x B.K.Licht 4-Spot Ceiling Light fixture (black)
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Note: Light bulbs are NOT included and must be purchased separately.

3. SETUP AND INSTALLATION

Follow these steps for safe and proper installation of your ceiling light.

1. **Prepare for Installation:** Turn off the main power supply to the installation area at your circuit breaker. Ensure the power is off before proceeding.
2. **Mark Mounting Points:** Hold the light fixture base against the ceiling at the desired installation location. Use a pencil to mark the positions for drilling the mounting holes.
3. **Drill Holes:** Drill holes at the marked positions. Insert the provided wall plugs into the drilled holes.
4. **Connect Wiring:** Carefully connect the household electrical wires to the corresponding terminals on the light fixture. Typically, this involves connecting live (L), neutral (N), and ground (E/G) wires. Ensure all connections are secure and properly insulated.
5. **Mount the Fixture:** Align the light fixture base with the drilled holes and secure it to the ceiling using the provided screws. Ensure the fixture is firmly attached and stable.
6. **Install Bulbs:** Screw E27 base bulbs (max 60W each, not included) into the sockets. Do not overtighten.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.



Image: Example of the 4-spot ceiling light installed, showing its placement and illumination.

4. OPERATING INSTRUCTIONS

The B.K.Licht ceiling light is designed for simple operation and adjustable lighting.

Turning On/Off:

Operate the light using your standard wall switch connected to the fixture's power supply.

Adjusting the Spotlights:


Each spotlight can be individually adjusted to direct light where needed. The spots are:

- **360° Rotatable:** Each spot can be rotated horizontally around its axis.
- **90° Tilttable:** Each spot can be tilted vertically up to 90 degrees.

Gently hold the spotlight housing and pivot or rotate it to the desired angle. Avoid excessive force.



Image: Detail showing the 360° rotatable and 90° tiltable features of the spotlights.

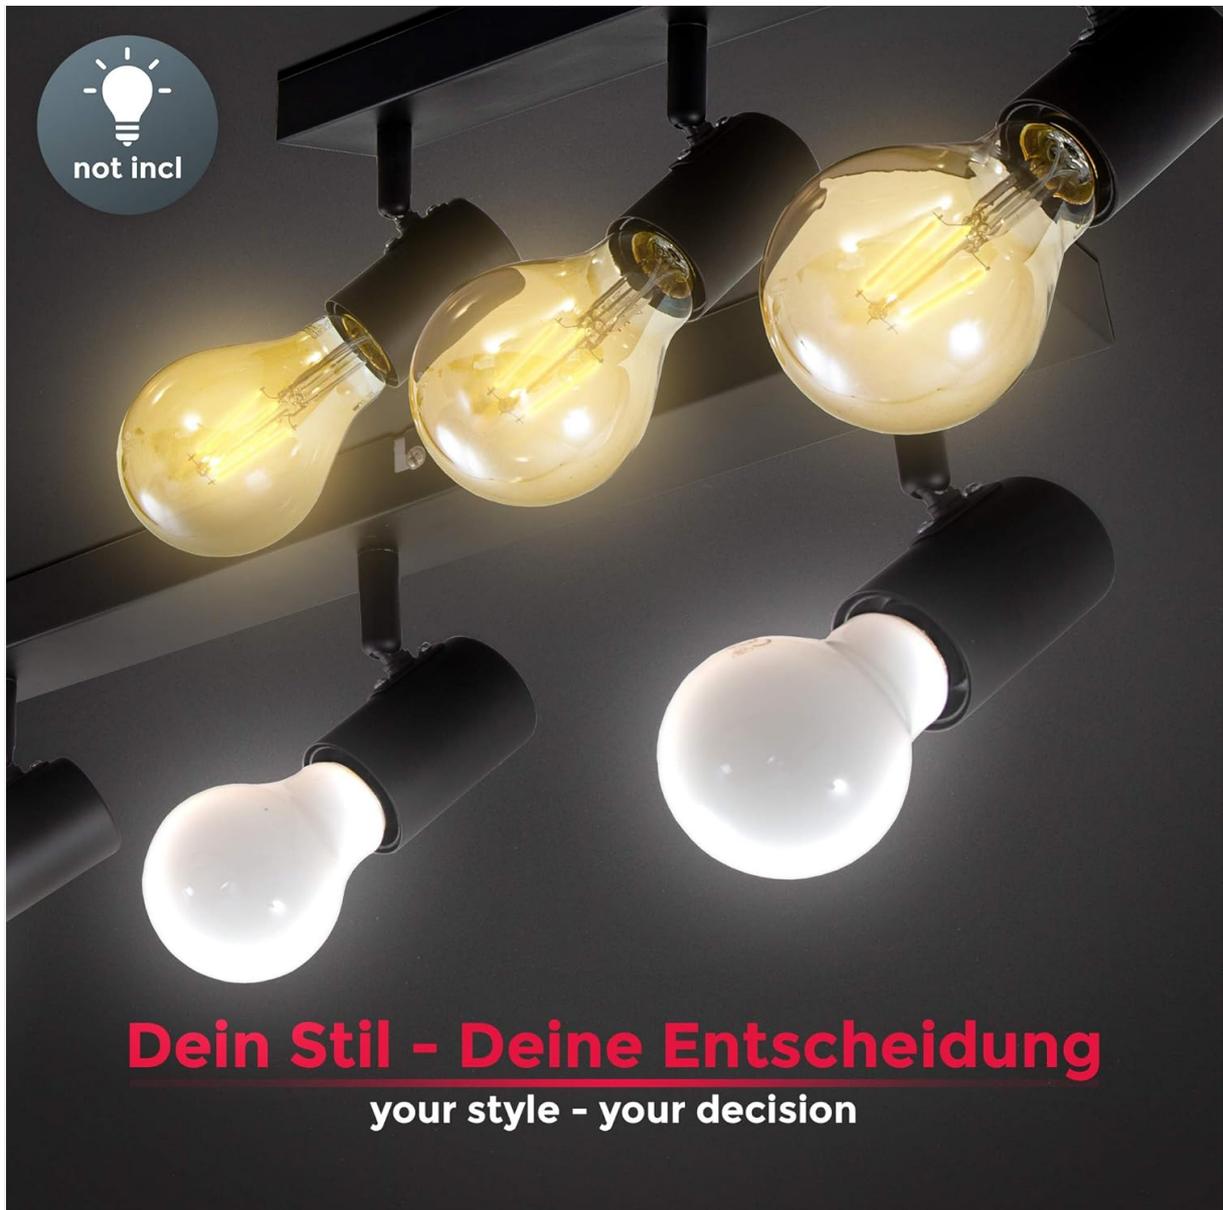

Dein Stil - Deine Entscheidung
your style - your decision

Image: Visual representation of the E27 socket and the adjustable nature of the light head.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling light.

Cleaning:

- Ensure the power is off and the fixture is cool before cleaning.
- Wipe the fixture with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or polishes, as these can damage the finish.

Bulb Replacement:

- Turn off the power supply at the circuit breaker.
- Allow the old bulb to cool completely before touching it.
- Carefully unscrew the old E27 bulb.
- Screw in a new E27 bulb, ensuring it does not exceed 60W.
- Restore power.

6. TROUBLESHOOTING

If your ceiling light is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power supply	Check the circuit breaker and wall switch.
Light does not turn on	Faulty bulb	Replace the bulb with a new, working E27 bulb (max 60W).
Light does not turn on	Loose wiring connection	Turn off power at the circuit breaker. Check all wiring connections for tightness. If unsure, consult a qualified electrician.
Flickering light	Loose bulb or incompatible bulb type	Ensure the bulb is screwed in tightly. Verify the bulb is an E27 type and compatible with the fixture.

If the problem persists after attempting these solutions, please contact customer support or a qualified electrician.

7. SPECIFICATIONS

Detailed technical specifications for the B.K.Licht E27 Vintage Adjustable 4-Spot Ceiling Light.

Feature	Specification
Model Number	BKL1267
Brand	B.K.Licht
Dimensions (L x W x H)	63 x 5 x 11 cm
Weight	801 g
Material	Metal
Color	Black
Number of Bulbs	4
Cap Type / Socket	E27
Maximum Wattage per Bulb	60 Watts
Voltage	230 Volts
IP Rating	IP20 (Indoor use only)
Special Features	Spots are 360° rotatable and 90° tiltable
Installation Type	Ceiling Mount

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact your retailer or the B.K.Licht customer service directly. Ensure you have your model number (BKL1267) and proof of purchase available when contacting support.