

[Manuals.plus](#) /

› [Roadstar](#) /

› Roadstar HIF-8892EBT Mini Hi-Fi Music System Instruction Manual

Roadstar HIF-8892EBT

Roadstar HIF-8892EBT Mini Hi-Fi Music System Instruction Manual

Model: HIF-8892EBT

INTRODUCTION

Thank you for purchasing the Roadstar HIF-8892EBT Mini Hi-Fi Music System. This manual provides essential information for the safe and correct operation of your device. Please read it thoroughly before use and retain it for future reference.

The Roadstar HIF-8892EBT is a versatile music system featuring a turntable, digital PLL FM radio, CD-MP3 player, cassette player, Bluetooth connectivity, and USB/SD recording capabilities. It is designed to offer a comprehensive audio experience in a compact, vintage-style wooden housing.



Figure 1: Roadstar HIF-8892EBT Mini Hi-Fi Music System with external speakers.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Keep these instructions for future reference.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

SETUP

1. Unpacking

Carefully remove the unit from its packaging. Ensure all components are present:

- Main unit
- Remote control
- Power adapter
- External speakers (if included with your model)
- Instruction manual

2. Placement

Place the unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

3. Connecting Speakers

If your model includes external speakers, connect them to the SPEAKER terminals on the rear of the main unit. Ensure correct polarity (red to red, black to black) for optimal sound quality.



Figure 2: Rear panel connections including speaker terminals and antenna.

4. Antenna Connection

Extend the FM wire antenna for better radio reception. Position it for the best signal quality.

5. Power Connection

Connect the power adapter to the DC 12V IN (1000mA) jack on the rear of the unit, then plug the adapter into a wall outlet.

6. Remote Control Battery Installation

Open the battery compartment on the remote control and insert two AAA batteries (not included), observing the correct polarity.

OPERATING INSTRUCTIONS

1. General Controls

- **Power Button:** Press to turn the unit ON or OFF.
- **Volume Knob:** Rotate to adjust the master volume level.
- **Function/Mode Button:** Press to cycle through different modes: Phono (Turntable), CD, FM Radio, Cassette, Bluetooth, USB, SD, AUX-IN.



Figure 3: Front panel controls and display.

2. Turntable Operation (Phono Mode)

1. Select PHONO mode using the Function/Mode button.
2. Lift the dust cover.

3. Place a record on the platter.
4. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included adapter on the spindle.
5. Release the tone arm lock.
6. Lift the tone arm using the cue lever and position it over the desired track of the record.
7. Lower the tone arm slowly onto the record using the cue lever. Playback will begin.
8. At the end of the record, the tone arm may return automatically (depending on the auto-stop setting) or you may need to manually return it to the rest.



Figure 4: Turntable section with platter and tone arm.

3. CD Player Operation

1. Select CD mode.
2. Open the CD tray by pressing the OPEN/CLOSE button.
3. Place a CD (CD, CD-R, CD-RW, CD-MP3) with the label side up into the tray.
4. Close the CD tray. The unit will read the disc and begin playback automatically or display the total number of tracks.
5. Use the PLAY/PAUSE, STOP, SKIP FORWARD/BACKWARD buttons to control playback.
6. The unit supports track search, random play, and repeat functions. Refer to the display for options.

4. Cassette Player Operation

1. Select TAPE mode.
2. Open the cassette door.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette door.
5. Use the PLAY, STOP, FAST FORWARD, REWIND buttons to control playback.



Figure 5: Cassette player compartment.

5. FM Radio Operation

1. Select FM mode.
2. Press the TUNER/SCAN button to automatically scan and store available FM stations.
3. Use the PRESET UP/DOWN buttons to navigate through stored stations.
4. For manual tuning, use the TUNING knob or specific buttons if available.

6. Bluetooth Pairing

1. Select BLUETOOTH mode. The display will show "BT" or "PAIRING".
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available devices and select "HIF-8892EBT" from the list.
4. Once paired, you can stream audio from your device to the music system.

7. USB/SD Playback

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Select USB or SD mode. The unit will automatically detect and begin playing compatible audio files (e.g., MP3).
3. Use the PLAY/PAUSE, STOP, SKIP FORWARD/BACKWARD buttons to control playback.



Figure 6: USB, SD card, and AUX-IN ports for external media and devices.

8. Recording Function (USB/SD)

The unit allows recording from Phono, CD, Cassette, or AUX-IN sources directly to a USB drive or SD card in MP3 format.

1. Insert a USB drive or SD card into the respective slot.
2. Select the desired source (Phono, CD, Cassette, AUX-IN).
3. Start playback of the source material.
4. Press the RECORD button on the unit or remote control. The recording indicator will light up.
5. Press the RECORD button again to stop recording. The recorded file will be saved on the USB drive or SD card.

MAINTENANCE

1. Cleaning the Unit

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

2. Turntable Stylus Care

- The stylus (needle) is a delicate component. Handle it with care.
- Avoid touching the stylus tip with your fingers.

- Clean the stylus periodically with a soft brush, brushing from back to front.
- Replace the stylus when you notice a degradation in sound quality or visible wear.

3. CD Lens Cleaning

If CD playback becomes erratic, use a commercially available CD lens cleaner disc to clean the laser lens.

4. Cassette Head Cleaning

For optimal cassette playback and recording quality, clean the tape heads, capstan, and pinch roller periodically with a cotton swab lightly moistened with isopropyl alcohol.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active	Ensure power cord is securely plugged in; Try a different outlet
No sound	Volume too low; Incorrect mode selected; Speakers not connected	Increase volume; Select correct source mode; Check speaker connections
Turntable not spinning or playing	Speed setting incorrect; Tone arm not lowered; Auto-stop engaged	Select correct RPM; Lower tone arm; Check auto-stop switch
CD not playing	Disc inserted incorrectly; Disc dirty or scratched; Incorrect mode	Insert disc label-side up; Clean or replace disc; Select CD mode
Bluetooth not connecting	Unit not in pairing mode; Device too far; Bluetooth off on device	Select Bluetooth mode; Move device closer; Enable Bluetooth on your device
Poor radio reception	Antenna not extended or positioned correctly	Extend and reposition the FM wire antenna for better signal

SPECIFICATIONS

- **Model:** HIF-8892EBT
- **Brand:** Roadstar
- **Product Dimensions:** 50 x 50 x 28 cm (approx. 19.7 x 19.7 x 11 inches)
- **Weight:** 4.2 kg (approx. 9.26 lbs)
- **Material:** Wood
- **Turntable Speeds:** 33, 45, 78 RPM
- **Radio:** Digital PLL FM Radio
- **CD Player:** Supports CD, CD-R, CD-RW, CD-MP3 formats
- **Cassette Player:** Auto-stop system
- **Connectivity:** Bluetooth, USB port, SD card slot, AUX-IN (3.5mm), Line Out (RCA)
- **Recording:** USB/SD encoding from Phono, CD, Cassette, AUX-IN
- **Included Components:** CD player, FM radio, cassette recorder, USB/SD encoding, speakers, remote control
- **Power Supply:** DC 12V (via external adapter)

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, service, or warranty claims, please contact your retailer or the official Roadstar customer service. Keep your proof of purchase for warranty validation.

For further assistance, visit the official Roadstar website or contact their support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07YVD17JG>

More documents and user manuals: <https://manuals.plus/>