

Fisher-Price GMM93

Fisher-Price 3-in-1 Spin & Sort Activity Center (Model GMM93) Instruction Manual

Your guide to assembly, use, and care for the Fisher-Price 3-in-1 Spin & Sort Activity Center.

1. INTRODUCTION

The Fisher-Price 3-in-1 Spin & Sort Activity Center is designed to adapt as your child grows, offering three distinct modes of play: an infant entertainer, a sit-at play station, and a toddler play table. This versatile product provides engaging activities to support your child's development from infancy through toddlerhood. This manual provides detailed instructions for assembly, operation, maintenance, and safety to ensure proper use of your activity center.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- **Infant Entertainer Mode:** When using the seat, the child must be able to hold their head upright unassisted and must not be able to walk or climb out of the product.
- **Maximum Weight:** Do not exceed a maximum weight of 25 lb (11.3 kg) for the infant entertainer mode.
- **Supervision:** Always keep your child in view while they are in the activity center. Never leave a child unattended.
- **Assembly:** Adult assembly is required. Ensure all parts are correctly and securely assembled before use.
- **Placement:** Place the activity center on a flat, level surface. Do not use on elevated surfaces.
- **Damage:** Discontinue use if any part is damaged, broken, or missing. Contact customer support for replacement parts.
- **Choking Hazard:** Small parts may be a choking hazard. Keep small parts away from children during assembly and ensure all components are securely attached.

3. PARTS LIST

Before assembly, verify that all components are present. Refer to the diagram below for identification.



Figure 3.1: All components included in the box. This includes the main base with legs, the seat, four activity pods, three teether toys, three blocks, and a shape sorter plate.

1. Main Base with Legs
2. Infant Seat (with machine-washable seat pad)
3. Activity Pod 1 (e.g., spinning mirror toy)
4. Activity Pod 2 (e.g., stacking blocks)
5. Activity Pod 3 (e.g., panda spinner)
6. Activity Pod 4 (e.g., arch with hanging toys)
7. Shape Sorter Plate
8. 3 Teether Toys
9. 3 Blocks



Figure 3.2: Product packaging indicating contents and safety warnings.

4. SETUP INSTRUCTIONS

Adult assembly is required. Follow these steps to set up your activity center in the desired mode.

4.1. Infant Entertainer Mode (for babies who can hold head upright unassisted, max 25 lb)

1. **Assemble the Base:** Ensure the three legs are securely attached to the main activity center base. They should click into place.
2. **Insert the Seat:** Place the infant seat into the central opening of the activity center base. Ensure it is firmly seated and can spin freely.
3. **Attach Activity Pods:** Snap the four activity pods onto the designated slots around the perimeter of the activity center. You can arrange them as desired.
4. **Secure Toys:** Ensure all teether toys and blocks are securely attached to their respective pods or within reach of the child.



Figure 4.1: The activity center configured as an infant entertainer, with a child seated and engaging with the surrounding toys.

4.2. Sit-at Play Mode (for babies who can sit up unassisted)

1. **Remove Seat:** Carefully remove the infant seat from the central opening.
2. **Insert Shape Sorter Plate:** Place the shape sorter plate into the central opening where the seat was.
3. **Attach Activity Pods:** The activity pods can be snapped onto the shape sorter plate or placed on the floor for independent play.



Figure 4.2: The activity center in sit-at play mode, with a child on the floor interacting with the activity pods.

4.3. Toddler Play Table Mode (for toddlers ready to stand and walk)

1. **Remove Seat:** If still present, remove the infant seat.
2. **Insert Shape Sorter Plate:** Ensure the shape sorter plate is securely in the central opening. This creates a flat play surface.
3. **Position Activity Pods:** The activity pods can be placed on the table surface or used independently for various play scenarios.



Figure 4.3: The activity center transformed into a toddler play table, providing a surface for standing play.

5. OPERATING INSTRUCTIONS

The Fisher-Price 3-in-1 Spin & Sort Activity Center offers various interactive elements designed to engage your child.

5.1. Activity Pods

Each of the four activity pods features unique interactive elements:

- **Spinning Mirror Toy:** Features a mirror for self-discovery and a spinning element for visual stimulation.
- **Stacking Blocks:** Includes three colorful blocks that can be stacked or sorted into the shape sorter.
- **Panda Spinner:** A friendly panda character that spins, encouraging fine motor skills.
- **Arch with Hanging Toys:** An arch with various hanging teether toys for reaching, grasping, and mouthing.



Figure 5.1: A hand demonstrating how to attach an activity pod, featuring stacking blocks, to the main unit.

5.2. Spinning Seat

In Infant Entertainer mode, the central seat allows your child to rotate 360 degrees, providing access to all surrounding activity pods and encouraging exploration.

5.3. Shape Sorter

The central shape sorter plate, used in Sit-at Play and Toddler Play Table modes, allows children to practice shape recognition and fine motor skills by inserting the included blocks into the corresponding openings.

6. MAINTENANCE AND CLEANING

- **Seat Pad:** The seat pad is machine-washable. Remove it from the activity center and wash in cold water on a gentle cycle. Tumble dry on low heat or air dry.
- **Plastic Parts:** Wipe down all plastic surfaces, including the activity pods, base, and legs, with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not immerse electronic components in water.
- **Storage:** For compact storage, the legs of the activity center can be removed. Store in a cool, dry

place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Activity pods do not attach securely.	Incorrect alignment or debris in the slot.	Ensure the pod is aligned correctly with the slot and push firmly until it clicks. Check for any obstructions.
Seat does not spin smoothly.	Debris under the seat or improper installation.	Remove the seat and check for any foreign objects. Reinstall the seat, ensuring it is properly seated in the base.
Product feels unstable.	Legs not fully extended or secured, or product on an uneven surface.	Verify all three legs are fully extended and locked into place. Move the activity center to a flat, level surface.

8. SPECIFICATIONS

- **Model Number:** GMM93
- **Product Dimensions:** 24.2 x 24.2 x 21.8 inches (61.5 x 61.5 x 55.4 cm)
- **Item Weight:** 2.2 pounds (1 kg)
- **Recommended Age:** 6 months - 3 years
- **Maximum Weight (Infant Entertainer Mode):** 25 lb (11.3 kg)
- **Manufacturer:** Fisher-Price
- **Release Date:** January 1, 2020

9. WARRANTY AND SUPPORT

Fisher-Price products are manufactured with high-quality materials and undergo rigorous testing. For specific warranty information, please refer to the documentation included with your purchase or visit the official Fisher-Price website.

If you have any questions, require assistance with assembly, or need replacement parts, please contact Fisher-Price Customer Support. Contact details can typically be found on the product packaging or the official brand website.

Online Support: [Visit Fisher-Price Support](#)